


Universal Measuring Device

UMG 503

Operating instructions

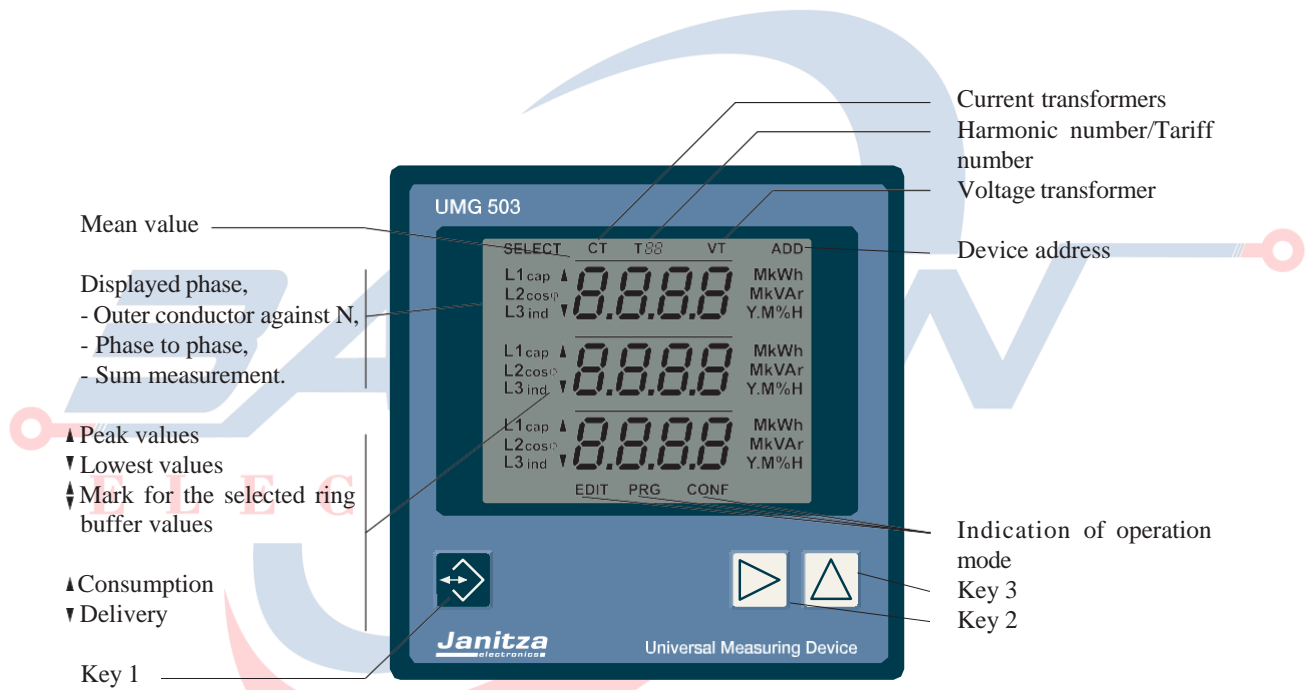

Barzinelectronic.ir

برزین الکترونیک

تعمیرات تخصصی اتوماسیون صنعتی و ابزار دقیق

Table of contents		Configuration	36
Meaning of the symbols	6	Configuration data	37
Generals	7	Konfigurationsdaten	38
Receipt control	7	Current transformer	39
Hints for usage	7	Voltage transformer	39
Hints for maintenance	8	RS485 interface (Option)	40
Repairing and calibration	8	Transmission protocol RS485	40
Face plate	8	Terminal resistance	40
Battery	8	RS232 interface (Option)	40
Waste management	8	Transmission protocols RS232	40
Service	8	Modem	40
Product description	9	Device address	41
Intended use	9	Data recording	42
Functional description	9	Limits	43
Putting into service	10	Internal relay outputs (Option)	43
Auxiliary voltage	10	External relay outputs	43
Measuring voltage	10	Assign limits	44
Testing current	10	Example: Sum real power	44
RS485 Interface cable	10	Example: Real power EMAX	44
Putting into service	14	Example: Real power, sequence chart	44
Removal of errors	15	Three wire measurement (Option)	45
Usage	17	Net frequency	46
Keys	17	Measured value rotation	47
Edit	17	Program changing times	47
Special functions	17	Program measured value selection	48
Main menu	17	Analogue output	49
Measured value indication	18	Internal analogue output (Option)	49
Retrievable meas. and calculated quantities	18	External analogue outputs	51
Calling up additional information	22	Transmission protocol	51
Mean values	22	Pulse output (Option)	54
Minimum and maximum values	23	Assign energy	54
Energy determination	24	Set pulse valency	55
Real power EMAX	25	Event memory	56
EMAX- monthly- peak values	25	Table 3a	56
Reset of the measuring period	26	Internal auxiliary input (Option)	57
Current meas. without measuring voltage	27	Table 3b	57
Harmonics	27	Reset of real power EMAX	57
Total harmonic distortion factor THD(f)	27	Tariff change over	57
Partial harmonics	27	Synchronization of the internal clock	57
Programming	28	Programming	58
Delete real and reactive energy	28	Tariff change over	59
Delete via keyboard	28	External tariff change over (option)	59
Delete via serial interface	28	Internal tariff changeover	60
Delete highest and lowest values	29	Programming	60
Delete all minimum and max. values	29	Clock	61
Delete min. and max. values separately	30	Summer-/Wintertime changeover	61
Ring buffer	31	Software Release	62
Select mean values	31	Serial number	62
Averaging time	32	LCD contrast	62
Duration of the measurement period	32	Password	63
Memory	32	Clearance password	63
Period of storage	33	User password	64
Ring buffer data format	34	Master password	64


Transmission protocols	65	PSWbasic	88
Service protocol	65	Required hard and software	88
Modem	65	Software	88
Modbus RTU	66	Hardware	88
Transmission mode	66	Functions	88
Transmission parameters	66	Configure measured value indications	88
Realized functions	66	Memory	88
Data formats	66	Configuration of UMG 503	89
PROFIBUS DP (Option)	67	Create GSD file	89
Configuration of UMG 503	67	WAGO I/O SYSTEM	90
Profibus DP V0	68	Installation instructions	90
Profibus DP M1	68	Function clamps	90
Higher protocol	68	Bus coupling	91
Create a GSD file	72	Indicating range and accuracy	92
To bind in a GSD file	72	Technical Data	93
GSD file	72	Design for panel mounting	94
Serial interfaces	73	Back side	94
UMG503 - RS485/RS232 - PC	73	Design for DIN Rail Mounting (Option)	94
UMG503 - Modem - PC	73	Back side	94
UMG503 - RS232- PC	73	Side view	94
UMG503 - RS485 - PLC	73	Side view	94
UMG503 - RS485 - WAGO I/O	73	Connection example	95
Tables	74	Brief instructions	96
Overview	74	Current transformer	96
Data formats	74	Voltage transformer	96
Table 1a	75		
Table 1b	76		
Table 2	77		
Table 3a	78		
Table 3b	79		
Table 4	80		
Table 5	80		
Table 6a	81		
Table 6b	81		
Table 6c	82		
Table 6d	82		
Table 7	83		
Table 8	84		
Table 9	85		
Table 10	86		

Barzinelectronic.ir

Meaning of the symbols

&. Warning of dangerous electrical voltage.

.& This symbol is supposed to warn you about possible dangers, which can occur during mounting, putting into service and usage.

 Protective wire connection



Issue note

04.11.1998	First edition.
26.11.1998	Completions.
09.12.1998	Page 22 „password=3846“, page 31 „Gvarh“, page 35 „housing depth“
03.03.1999	Completions.
26.03.1999	Connection diagram.
03.05.1999	cos(phi), event memory.
30.09.1999	Expansion of functions.
02.02.2000	Higher protocol for PROFIBUS.
22.02.2000	Indication of outer conductor voltage.
29.02.2000	Reset of measuring period.
08.02.2000	Delete work via serial interface.
08.06.2000	Profibus DP V1.
15.01.2001	Summer and winter time changeover.
25.01.2001	Measured value rotation, data logging.
08.07.2002	IT-Netz, Profibus 500kbps, tables.
31.07.2002	Ringbuffer uncompressed by choice. Read limit outputs via Profibus.
22.10.2003	Additions.
11.08.2004	Page 70/71, table/address.

Generals

Receipt control

In order to ensure a perfect and safe use of the device, a proper transport, expert storage, erection and mounting and careful usage and maintenance are required. When it may be supposed, that a safe operation is no longer possible, the device has to be put out of service and be protected against unintentional putting into service.

A safe operation can no longer be assumed, when the device

- shows visible damage,
- does not work in spite of intact net supply,
- has been exposed to disadvantageous conditions for a longer time (e.g. storage out of the allowed climate without adaption to the room climate, dew etc.) or transport use (e.g. falling from great height, even without visible damage).

Please test the contents of delivery for completion, before starting the installation of the device. All delivered options are listed on the delivery papers.

Attention!

.& All plugs, which belong to the contents of delivery, are plugged on the device! The 9pole D-Sub plug for RS232 interface does not belong to the contents of delivery.

.& The operating instructions also describe those options, which are not delivered and therefore do not belong to the contents of delivery!

Hints for usage

This device may be put into service and used by qualified personnel according to the safety regulations and instructions only. Please mind the additional legal and safety regulations for the respective application.

Qualified personnel are persons, familiar with erection, mounting, putting into service and usage of the product and having the qualifications such as:

- education or instruction / entitlement to switch, release, ground or characterize current circuits and devices according to the standards of safety techniques.
- education or instruction in the care and usage of suitable safety equipment according to the standards of safety techniques.

Barzinelectronic.ir

Product description

Intended use

The UMG 503 is suited for fix mounting and the measurement of voltage, current, harmonics (2nd to 20th), power etc. in low and medium voltage switchgear. For the operation of the UMG 503 a protective wire is required.

The measurement is laid out for one phase and three phase systems with or without neutral conductor (three wire measurement). If the measurement should be carried out via two voltage transformers only, the option "three wire measurement" is required.

Alternating voltages (50Hz/60Hz) up to 500VAC against ground and 870VAC between the outer conductors can be connected directly. The voltage measurement inputs are not separated galvanically and must be connected to the UMG 503 via external prefuses M2A.

The current measurement is carried out via a $\dots/5A$ or $\dots/1A$ current transformer. In networks with a voltage up to 150 VAC against ground currents up to 6 A can be connected to the UMG 503 directly and measured as well.

The connection of the auxiliary voltage, the measurement inputs etc. are on the rear side via all-insulated plug connectors.

The auxiliary voltage must be connected to the building installation via a separation (switch or power switch) and a 10 A overload protection.

Attention!
.& Measurement in systems with pulse load is not possible, because no continuous scanning of the measuring signals is carried out.


Functional description

The electrical three phase measurement system determines and digitalizes the effective values of voltages and currents in 50/60 Hz networks.

Two random test measurements are carried out each second on all current and voltage measuring inputs. Signal interruptions, which are longer than 500ms are surely recognized. For each random test two periods are scanned. From those sampled values the microprocessor calculates the electrical magnitudes.

These measured values are indicated within the programmable display.

Highest values, lowest values and programming data can be saved in a battery buffered storage. Selected measured values will be saved with date and time in a ring buffer.

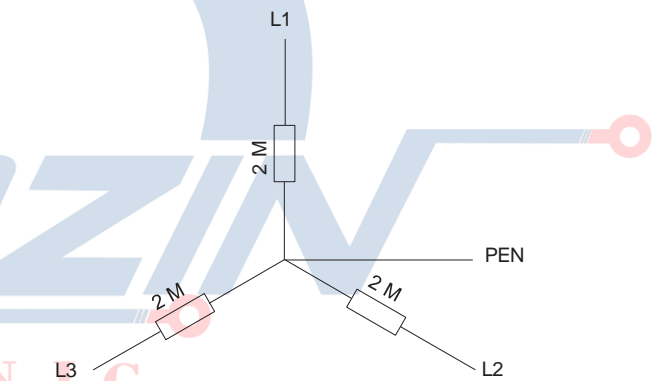

Diagr. Equivalent circuit diagram for voltage measurement

Barzinelectronic.ir

Putting into service

Auxiliary voltage

The input of the auxiliary voltage (terminals 14, 15) of the UMG 503 is suitable for rated voltages up to 300VAC against ground (PE). Higher voltages between auxiliary voltage and ground can damage the UMG 503. To avoid overvoltage, auxiliary voltage should be earthed.

Please also note the following:

- The wiring for the auxiliary voltage must be suited for operating voltage up to 300VAC against ground.
- The auxiliary voltage must be protected with a fuse, which should be in the range of 2...10A.
- A switch or power breaker must be provided for the auxiliary voltage within the installation.
- The switch must be installed near the device and must have an easy access for the user.
- The switch must be marked as a breaker for this device.
- Please ensure, that voltage and frequency match the type plate before connecting it to the auxiliary voltage!
- The device may be operated with earthed housing only!
- Conductors with single soldered wires are not suited for connection to screw clamps!
- The screw clamps may only be connected in dead condition.

Measuring voltage

The wires for the measuring voltage must be suitable for up to 500VAC against ground and 870VAC phase to phase.

Attention!

For the connection examples 5 and 6, the option "three wire measurement" is required. In mains without neutral conductor, voltage transformers must be connected according to the respective connection example.

Testing current

Current transformers of .../5A or .../1A can be connected directly to the current inputs of the UMG 503.

- &. Attention!** Current transformers can lead voltage, which can be live and should be earthed.

RS485 Interface cable

Bus structure

All devices are connected in bus structure (line). In one segment up to 32 participants can be connected. At the beginning and the end of one segment, the cable is terminated with resistors. Within the UMG 503, these resistors can be activated with two plug bridges.

For more than 32 participants, you must use a repeater (line amplifier) to connect the single segments.

Protection

For the connection via RS485 interface, you must use a twisted pair and protected cable. To achieve a sufficient protection result, the protection must be connected to housing or cabinet parts at both ends of cable with large surface.

Cable specification:


The maximum length depends on cable type and baudrate. We recommend type A

Cable parameters	Type A	Type B
Impedance	135-165Ohm (f = 3-20MHz)	100-130Ohm (f > 100kHz)
Capacity	< 30pF/m	< 60pF/m
Resistance	< 110 Ohm/km	-
Diameter	>= 0,34mm2 (AWG22)	>= 0,22mm2 (AWG24)


Cable length

The following table shows the maximum cable length in meter (m) for different baudrates.


Cable type	Baudrate (kbit/s)					
	9.6	19.2	93.75	187.5	500	1500
Type A	1200	1200	1200	1000	400	200
Type B	1200	1200	1200	600	200	70

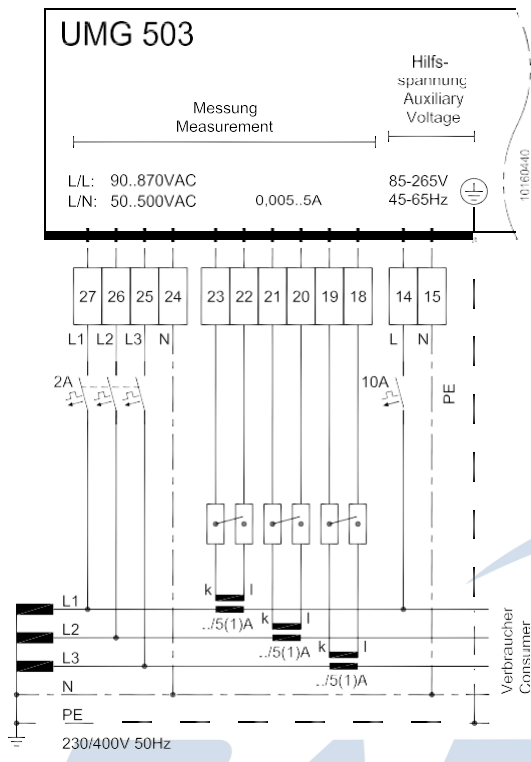


Connection example 2
Four wire measurement with three current transformers

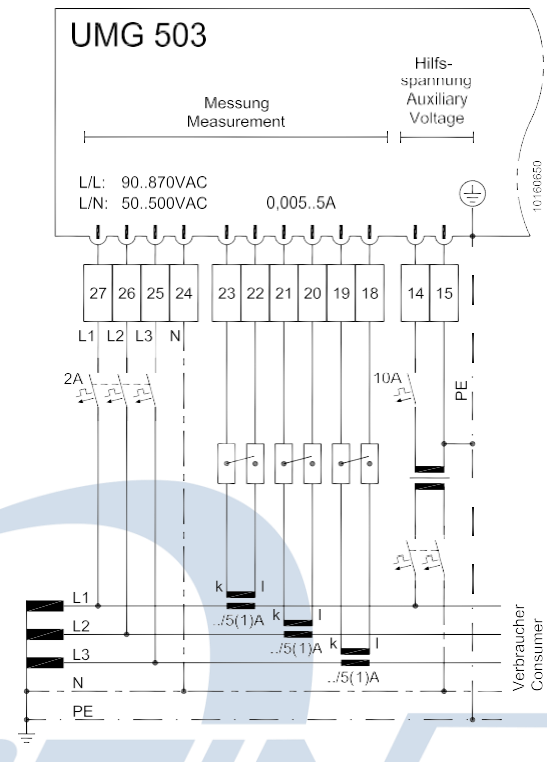


Connection example 2a
Four wire measurement with three current transformers

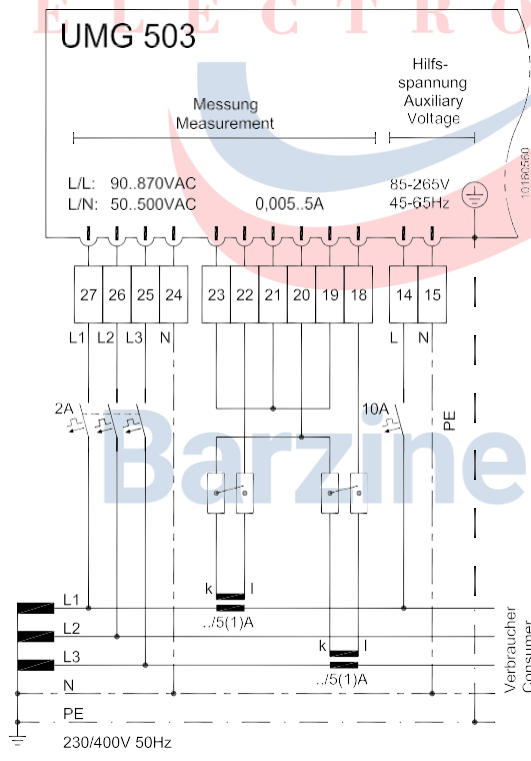


Connection example 3
Four wire measurement with two current transformers

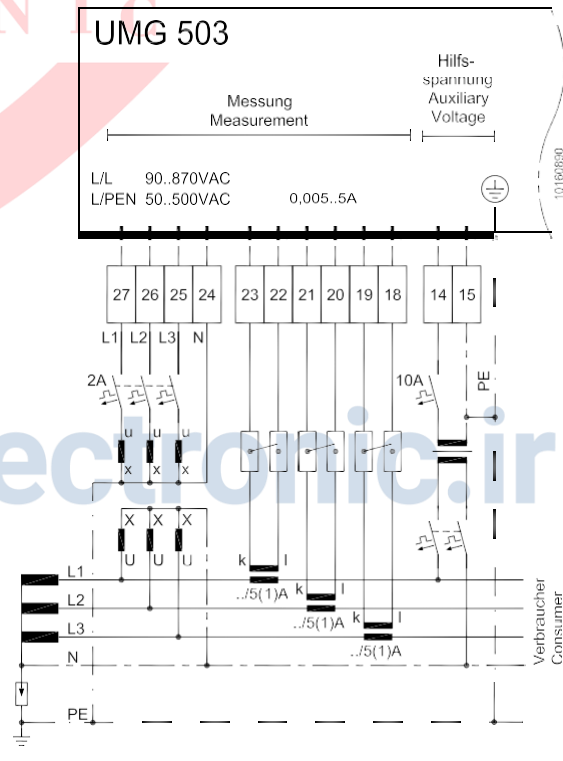


Connection example 3a

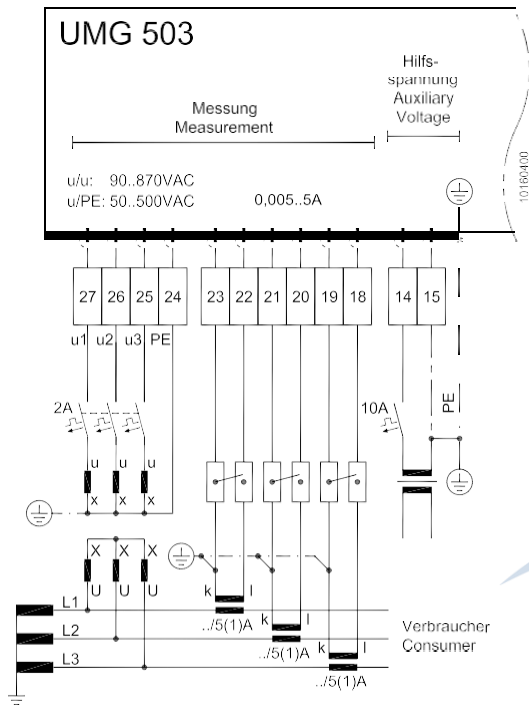


Connection example 5
Three wire measurement with three voltage transformers and three current transformers

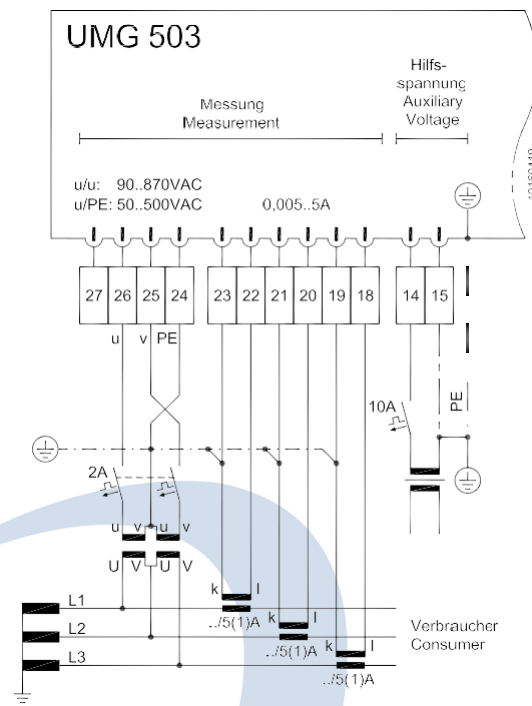


Connection example 6
Three wire measurement with two voltage transformers and three current transformers. (Option "three wire measurement" required)

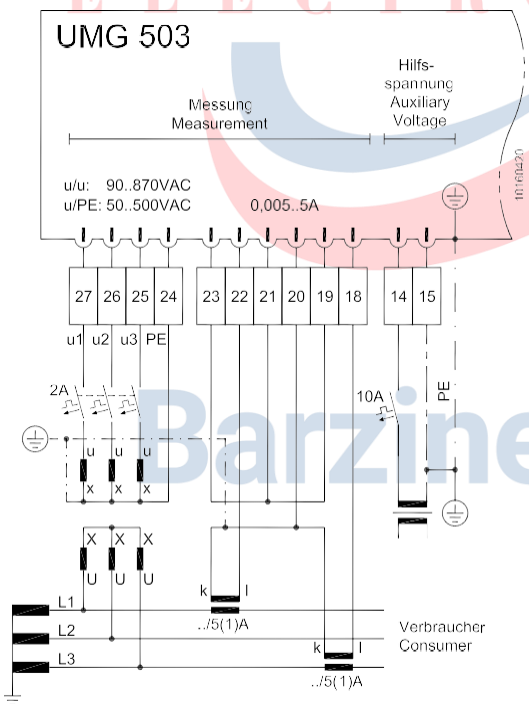


Connection example 7
Three wire measurement with three voltage transformers and two current transformers

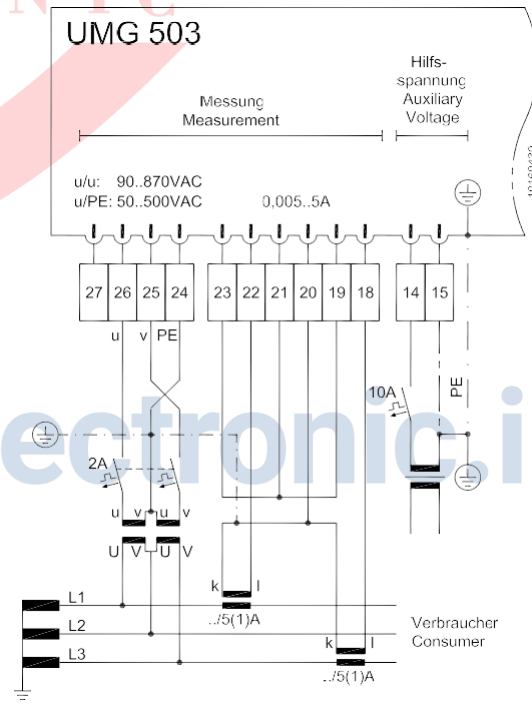

Connection example 8
Three wire measurement with two voltage transformers and two current transformers. (Option "Three wire measurement" required)

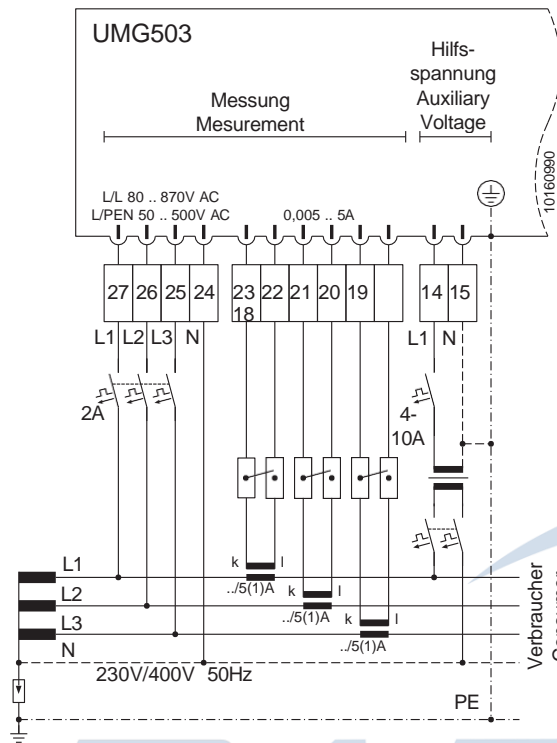

Connection example 9
Measurement in IT-mains with N.

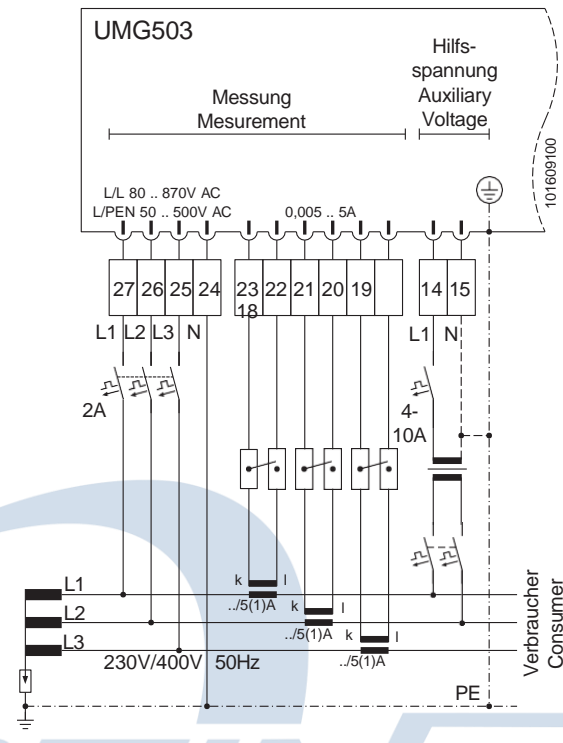

Connection example 10
Measurement in IT-mains without N.



Barzinelectronic.ir

Putting into service

The device should be put into service as follows:

- **Install the device.**

- **Connect auxiliary voltage Uh.**

The size of the auxiliary voltage to be connected must be according to the details on type plate.

& The input of the auxiliary voltage (terminal 14, 15) of UMG503 is suitable for rated voltage up to 300VAC against ground (PE). Higher voltage between auxiliary voltage (terminal 14, 15) and ground (PE) can damage the UMG503. To avoid overvoltage at auxiliary voltage input, the auxiliary voltage should be earthed.

The wiring for the auxiliary voltage must be suited for operating voltage up to 300VAC against ground.

- program **current and voltage transformer.**

- Connect **measurement current** (max. 500VAC against ground) and check measuring voltage indication.

Attention!

& The wiring for the measurement voltage must be suitable for a voltage up to 500VAC against ground and 870VAC phase to phase.

Attention!

& For connection examples 6 and 8 the option "three wire measurement" is required. In networks without neutral conductor, voltage transformers are required and must be connected according to the respective diagram.

- Connect **measurement current** (max. 6A). Check measurement current indication. Short-circuit current transformer and check, whether the measurement current indication is zero Ampere.

Attention!


& None earthed current transformer clamps are dangerous to be touched.

Current transformers, which are not loaded secondarily, can lead live voltage and should be short circuited.

- Check **phase assignment.**

The assignment of outer conductor and current transformer is correct, if no voltage occurs between outer conductor and the respective current transformer (primary).

- Connect **interface** (RS485 2-wire). Please use an interface converter (RS485/RS232), when you connect it to the COM-interface of a PC.

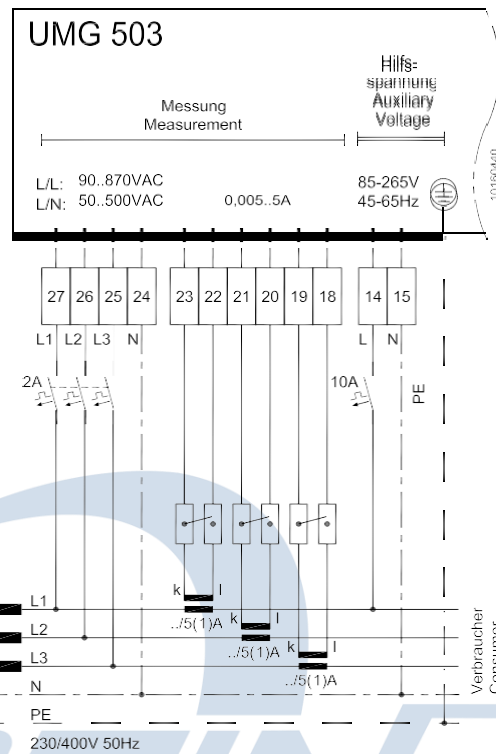

Connection example 1

Four wire measurement with three current transformers

Attention!

- A switch or power breaker must be provided for the auxiliary voltage within the installation.
- The switch must be installed near the device and must have an easy access for the user.
- The switch must be marked as a breaker for this device.
- Please ensure, that voltage and frequency match the type plate before connecting it to the auxiliary voltage!
- The device may be operated with earthed housing only!
- Conductors with single soldered wires are not suited for connection to screw clamps!
- The screw clamps may only be connected in dead condition.

Removal of errors


Faults	Possible reason	Remedy
Indication dark	External prefuse has released. Internal prefuse has released.	Replace prefuse. The fuse cannot be changed by the user. Please send the device back to the manufacturing works
No current indication	Contrast setting too dark. Device faulty. Measurement voltage not connected	Change contrast settings in configuration menu. Please send the device to the manufacturer for repair. Connect measurement voltage.
Current too small	Current measurement in the wrong phase. Current transformer factor programmed incorrectly.	Check and correct connection. Read current transformer ratio on current transformer and program correctly.
Wrong current	Current measurement in the wrong phase. Current transformer factor programmed incorrectly. Measuring range exceeded. The peak current value on measuring input was exceeded caused by harmonics. The current on measuring input was underscored.	Check and correct connection. Read current transformer ratio on current transformer and program correctly. Install bigger current transformer. Install bigger current transformer. Attention: Please ensure, that the measuring inputs are not overloaded. Install smaller current transformer.
Voltage L-N too small	Measurement in wrong phase. Voltage transformer factor programmed incorrectly.	Check and correct connection. Read current transformer ratio on current transformer and program correctly. If the voltage is not measured via voltage transformer please program a voltage transformer ratio of 400/400.
Voltage L-N incorrect	Voltage on measuring input out of measuring range. Measurement in wrong phase. Voltage transformer factor programmed incorrectly. Measured range exceeded. The peak voltage value on measuring input was exceeded caused by harmonics.	Install smaller voltage transformer. Check and correct connection. Read current transformer ratio on current transformer and program correctly. If the voltage is not measured via voltage transformer please program a voltage transf. ratio of 400/400. Install bigger current transformer. Install bigger current transformer. Attention: Please ensure, that the measuring inputs are not overloaded.
Voltage L-L too small/ too big	Outer conductors exchanged. N not connected.	Check and correct connection. Check and correct connection.
Phase shift ind /cap too small or big	Current path is assigned to the wrong voltage path.	Check and correct connection.
Programmed data get lost	Battery empty. The device has been exposed to electromagnetical interference bigger than the allowed by technical data.	Please send device to the manufacturer for exchanging the battery. External protection measure such as shielding, filtering, earthing or spatial separation.

Faults	Possible reason	Remedy
Real power too small / too big	<p>Current transformer factor programmed incorrectly. Current path is assigned to the wrong voltage path. Current on measuring input out of measuring range.</p> <p>Voltage transformer factor programmed incorrectly.</p> <p>Current on measuring input out of measuring range.</p>	<p>Read current transformer ratio on current transformer and program correctly. Check and correct connection.</p> <p>Install bigger or smaller current transformer.</p> <p>Attention: Please ensure, that the measuring inputs are not overloaded.</p> <p>Read current transformer ratio on current transformer and program correctly. If the voltage is not measured via voltage transformer please program a voltage transformer ratio of 400/400.</p> <p>Install bigger or smaller current transformer.</p> <p>Attention: Please ensure, that the measuring inputs are not overloaded.</p>
Real power consumption / supply exchanged.	<p>One current transformer at least exchanged. Current path is assigned to the wrong voltage path.</p>	<p>Check and correct connection.</p> <p>Check and correct connection.</p>
The time is indicated incorrectly.	<p>The device has no automatical summer-/winter change over.</p>	<p>Correct time by hand.</p>
"EEEE" in the display.	<p>The measuring range of current was exceeded. The measuring range of voltage was exceeded.</p>	<p>Check measuring current and insert a suitable current transformer.</p> <p>Check measuring voltage and insert a suitable voltage transformer.</p>
Duration of memory =38 s.	<p>Not enough memory for all selected values.</p>	<p>Select more equal averaging times for the measured values.</p>
Relay output, analogue output or pulse output do not react.	<p>The outputs are not programmed The service protocol 04 is set</p>	<p>Program the outputs.</p> <p>Select another protocol.</p>
The device does not work correctly in spite of the above	<p>Device out of order.</p>	<p>Please send the device to the manufacturer with an exact description of the failure.</p>

Usage

Keys

The UMG503 is operated using the three keys within the front plate.



In the different indications these keys have various meanings.

Edit

In configuration menu **CONF** and in programming menu **PRG** the settings in edit mode **EDIT** can be changed.

In edit mode **EDIT** the keys have the following meaning:

- Key 1 Select cipher/number or leave edit mode.
- Key 3 Change ciphers.
- Key 2 Multiply the number with factor 10.

Special functions

Press and hold **key 1** for about **2 seconds** to return to the first measured value window of the measured value indication from each program part.

Hold **key 2 or key 3** for about **2 seconds** to return to the **previous measured value window**.


Main menu

After a net return the device always starts with the first programmed measured value indication. With **key 1** you change over between

- the measured value indication,
- the **SELECT** mode,
- the configuration menu **CONF** and
- the programming menu **PRG**


Measured value display

Example: Voltages L1-N, L2-N, L3-N.

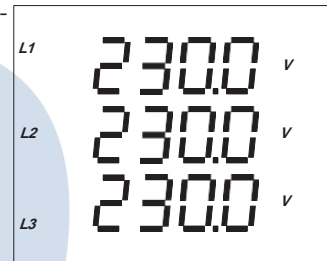


SELECT Mode

Indication of date and time information.

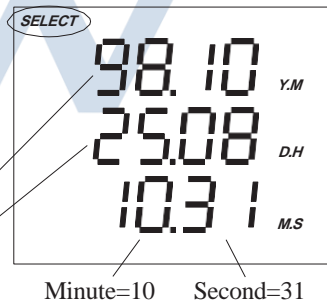


Configuration menu CONF

Example: Ratio current transformer

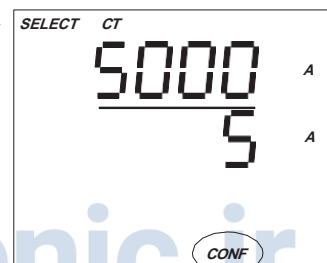

Programming menu PRG


Example: Delete all highest and lowest values

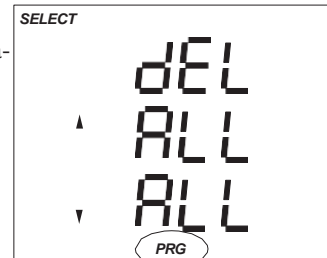

Measured value indication

The display of UMG503 can indicate up to three measured values simultaneously.


Example: Voltages L1-N, L2-N, L3-N

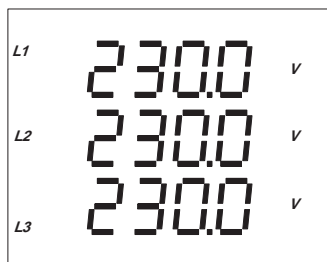

With the keys 2 and 3 one can scroll through those measured value indications.

Using key 3 you scroll to the next measured value indication.

Example: Current in phase L1, L2 and L3

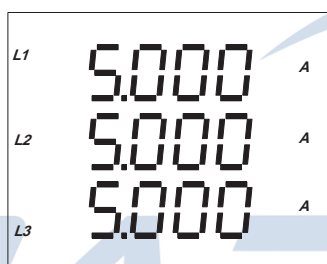

To keep the selection of the indicated measured values clear, only a certain part of all possible measured values is programmed for the display in delivery condition.

In the table "Retrievable measured and calculated quantities" all measured values, which can be called up, are listed. On the pages 32 to 33 the manufacturer's settings of the retrievable values are listed.

If other measured values should be indicated on the display of UMG503, they can be selected in the software **PSW basic**, which belongs to the contents of delivery, and transmitted via serial interface to the UMG 503.

After a net return the device always starts with the first programmed measured value indication.

Retrievable meas. and calculated quantities

Measured quantity	Measured value				Mean value				Measured value		Date and time
	L1	L2	L3	Sum	L1	L2	L3	Sum	Peak value	Lowest val.	
Voltage L-N, L-L	x	x	x		x	x	x		x	x	x
Current	x	x	x	x ¹⁾	x	x	x	x ¹⁾	x	x ²⁾	x
Real power	x	x	x	x	x	x	x	x	x	x	x
Real power, 15min. mean value				x					x	x	x
Apparent power	x	x	x	x	x	x	x	x	x	x	x
Reactive power	x	x	x	x	x	x	x	x	ind	cap	x
cos(phi)	x	x	x	x	x	x	x	x	ind	cap	x
Frequency of voltage	x	x	x	x	x	x	x		x	x	x
Real work											
without reverse running stop				x							Start./run. time
Consumption				x							Start./run. time
Supply				x							Start./run. time
Reactive work											
without reverse running stop				x							Start./run. time
inductive				x							Start./run. time
capacitive				x							Start./run. time
Partial harm. content HDF, I/U	x	x	x		x	x	x		x	x	x
Total harmonic content THD, I/U	x	x	x		x	x	x		x	x	x

1) Current in Neutral

2) Maximum value for current measurement and current mean value

Measured value display (Manufacturer's settings)

	▷	▷	▷	
	Meas. val. voltage L1-N Meas. val. voltage L2-N Meas. val. voltage L3-N	Mean value voltage L1-N Mean value voltage L2-N Mean value voltage L3-N	Max. value voltage L1-N Max. value voltage L2-N Max. value voltage L3-N	Min. value voltage L1-N Min. value voltage L2-N Min. value voltage L3-N
△	Meas. val. voltage L1-L2 Meas. val. voltage L2-L3 Meas. val. voltage L3-L1	Mean val. voltage L1-L2 Mean val. voltage L2-L3 Mean val. voltage L3-L1	Max. value voltage L1-L2 Max. value voltage L2-L3 Max. value voltage L3-L1	Min. value voltage L1-L2 Min. value voltage L2-L3 Min. value voltage L3-L1
△	Measured value current L1 Measured value current L2 Measured value current L3	Mean value current L1 Mean value current L2 Mean value current L3	Max. value current L1 Max. value current L2 Max. value current L3	Min. value current L1 Min. value current L2 Min. value current L3
△	Meas. val. real power L1 Meas. val. real power L2 Meas. val. real power L3	Mean value real power L1 Mean value real power L2 Mean value real power L3	Max. value real power L1 Max. value real power L2 Max. value real power L3	Min. value real power L1 Min. value real power L2 Min. value real power L3
△	Meas. val. app. power L1 Meas. val. app. power L2 Meas. val. app. power L3	Mean value app. power L1 Mean value app. power L2 Mean value app. power L3	Max. value app. power L1 Max. value app. power L2 Max. value app. power L3	Min. value app. power L1 Min. value app. power L2 Min. value app. power L3
△	Meas. val. react. power L1 Meas. val. react. power L2 Meas. val. react. power L3	Mean val. react. power L1 Mean val. react. power L2 Mean val. react. power L3	Max. val. react. power L1 Max. val. react. power L2 Max. val. react. power L3	Min. val. react. power L1 Min. val. react. power L2 Min. val. react. power L3

⏏	⏏	⏏	⏏
Meas. value frequency L1 Meas. value frequency L2 Meas. value frequency L3	Mean value frequency L1 Mean value frequency L2 Mean value frequency L3	Max. value frequency L1 Max. value frequency L2 Max. value frequency L3	Min. value frequency L1 Min. value frequency L2 Min. value frequency L3

⏏	⏏	⏏	⏏
Meas. value cos(phi) L1 Meas. value cos(phi) L2 Meas. value cos(phi) L3	Mean value cos(phi) L1 Mean value cos(phi) L2 Mean value cos(phi) L3	Max. value cos(phi) L1 Max. value cos(phi) L2 Max. value cos(phi) L3	Min. value cos(phi) L1 Min. value cos(phi) L2 Min. value cos(phi) L3

⏏	⏏	⏏
Cons. real energy tariff 00	Cons. real energy tariff 01	Cons. real energy tariff 02

⏏
Delivered real energy

⏏	⏏	⏏
Ind. react. energy tariff 10	Ind. react. energy tariff 11	Ind. react. energy tariff 12

⏏	⏏	⏏
Cap. react. energy tariff 20	Cap. react. energy tariff 21	Cap. react. energy tariff 22



Calling up additional information

Additional information can be called up for the most indicated measured values:

- Date and time for the highest and lowest values.
- Averaging times for the mean values.
- Duration of energy determination.

Mean values

For each measured value, except work, a mean value is calculated. The averaging time is programmable. Only mean values can be marked for storage within the ring buffer.


The calling up - in the example for the power maximum value in phase L3 - is carried out as follows:

Press *key 1* for about 2 seconds and return to the first measured value window of the measured value indication from each program part.


Using *key 3* you scroll to the measured value indication of the real power.



Pressing *key 2* you scroll to the **mean values** of real power.

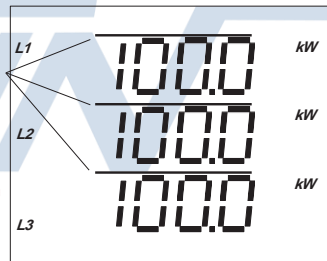

Select the **SELECT** mode using *key 1*. The symbol **SELECT** is flashing.

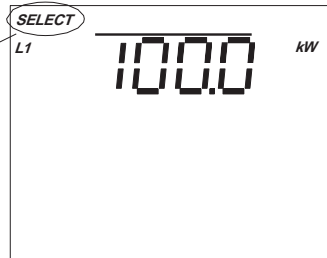


Confirm with *key 2*. The symbol **SELECT** is on.

Select the mean value of the real power in L3 using *key 1*.



Call up the **averaging time** for the real power in phase L3 as an additional information using *key 2*.

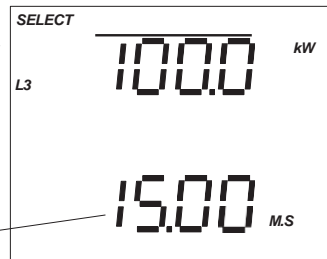

Averaging time = 15 Minutes

Minimum and maximum values

For each minimum and maximum value, the first time of existence is saved with date and time. To call up, for example, the maximum current value in L2, please proceed like mentioned on the right.

Keeping key 1 pressed for about 2 seconds, you return to the first measured value display from all programm parts.

.&


Attention!

After return of the auxiliary voltage, all minimum values are deleted.


Scroll to the display of current using key 3.



Scroll to the maximum values of current using key 2.

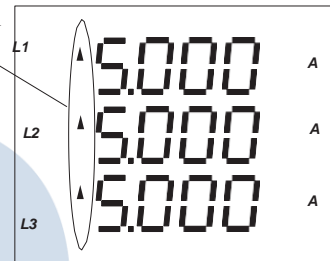


Select mode with key 1. The symbol SELECT is flashing.

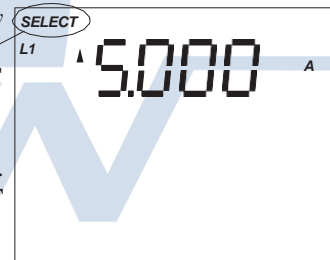


Confirm with key 2. The symbol SELECT is on.

Select maximum current value in L2 with key 1.

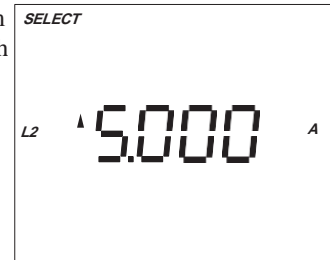

With key 2 call up additional information about date and time for the selected maximum value.

Year=98 Month=10
Day=25 Hour=08

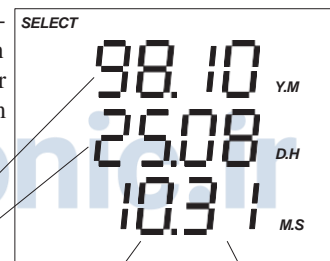

Minute=10 Second=31

Energy determination

Starting time and running time are saved for the following real and reactive energy:


- Real energy without reverse running stop
- Real energy supply
- Real energy consumption (T00)
- Reactive energy without reverse running stop
- Reactive energy ind., (T10)
- Reactive energy cap., (T20)

Starting and running time for energy meters, controlled by internal or external tariff changeovers, are not saved.


The interrogation, for reactive energy ind (T10) for instance, can be carried out as follows:

Press *key 1* for about 2 seconds and you return to the first measured value window of the measured value indication from each program part.


Move to the measured value indication of reactive energy using *key 3*.

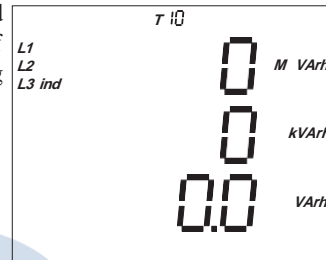


Go to select mode using *key 1*. The symbol **SELECT** is flashing. Confirm with *key 2*. The symbol **SELECT** is on.

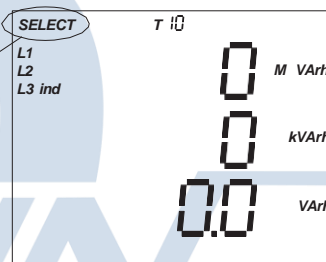

Call up the additional information starting time for reactive energy measurement using *key 2*. Year=99 Month=09 Day=06 Hour=08 Minute=15 Seconds=41

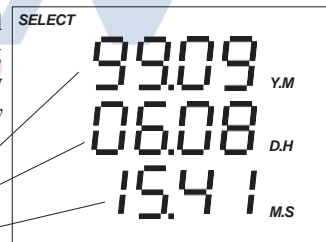


Confirm again with *key 2*. The running time for reactive energy measurement is indicated.

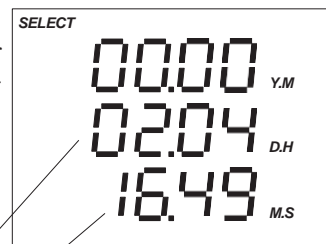

Days=02 Hours=04 Minutes=15 Seconds=41

Real power EMAX


For the most measured values a mean value is build over the last passed period of time within the UMG 503 each second. This passed period of time is the programmable averaging time.

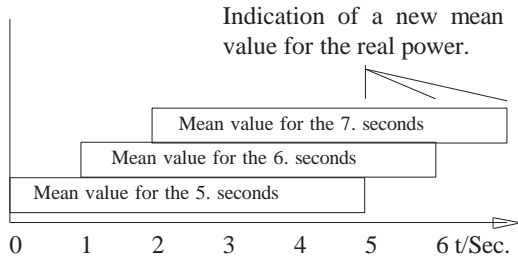

Diagr.: Mean value for real power over 5 seconds.

The real power is an exception. For the real power the mean value **real power EMAX** is build over a programmable measurement period additionally. The measuring period duration for real power EMAX can be 5, 10, 15, 30 or 60 minutes. The manufacturer's setting is 15 minutes.

The real power EMAX is calculated from the work within a certain period of time divided by the passed time of the period. The calculation is done each second, in order to ensure the indication of real power EMAX within the measurement period. For the comparison and storage of the EMAX monthly peak value only the real power, measured at the end of a period, is used.

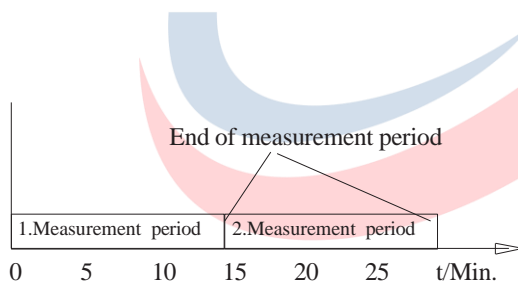

Diagr.: Calculation of mean value for real power EMAX over a measurement period of 15 minutes.

The tariff changeover is not only valid for real and reactive energy meters but also for real power EMAX.


	Energy meter				
	Programmable via				
	Time programs 1-4				
	Aux. input				
Energy work cons.	T00	T01	T02	T03	T04
Reactive energy ind.	T10	T11	T12	T13	T14
Reactive energy cap.	T20	T21	T22	T23	T24
Real power EMAX	00	01	02	03	04

EMAX- monthly- peak values

All EMAX-monthly-peak values are saved for all tariffs each month. The old EMAX-monthly-peak values are overwritten at the beginning of a new year.

If the real power EMAX is configured for the display software PSWbasic, real power EMAX can be indicated in the display of the UMG 503 as well.

The EMAX- monthly- peak values can be read out directly at the UMG503 and via the serial interface, with the software PSWbasic, for instance.

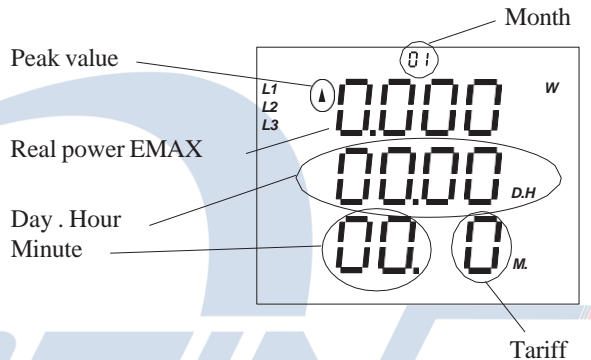

Attention!
 .& Real power EMAX is calculated from energy without reverse running stop.

Attention!
 .& The real power EMAX is not indicated in the standard indications.

Reset of the measuring period

The reset of the measuring period deletes real power EMAX and starts a new period.

If no external reset is carried out within the programmed period, the reset is carried out by the internal clock.

If there are less than 30 seconds between two resets, the measuring period is reset and real power EMAX is deleted. The obsolete measured value is not saved in the maximum and minimum memory and **not** be deposited within the event memory, if programmed.

The measuring period for real power EMAX can be reset by the following means:

- automatically, after measuring period,
- internally, via keyboard,
- internally, via auxiliary input (Option),
- externally, via connected WAGO- Modules,
- externally, via PROFIBUS DP Protocol,
- externally, via MODBUS Protocol. (Table 5)


Reset of the measuring period by keyboard

With *key 3* you scroll to the indication of real power EMAX.

Real power EMAX (Example 100W).

Rest time of period (Example. 8Min. 10Seconds).

Measuring period (Example 15Minutes).

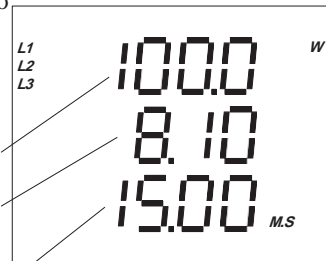


With *key 1* go to Select-Mode.

The symbol **SELECT** flashes.

Confirm with *key 2*.


The symbol **SELECT** is visible.

Press *Key2* again. The rest time is deleted.

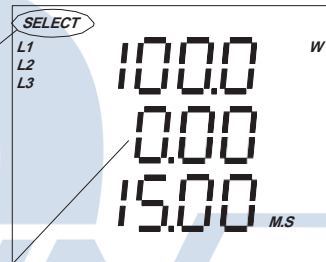


The symbol **SELECT** disappears.

The period for real power EMAX is started again.

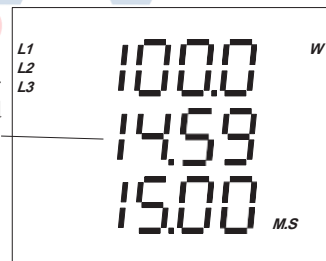

Pressing **key 1** for about **2 seconds**, real work will be deleted and you return to the first programmed measured value window of the measured value indication!

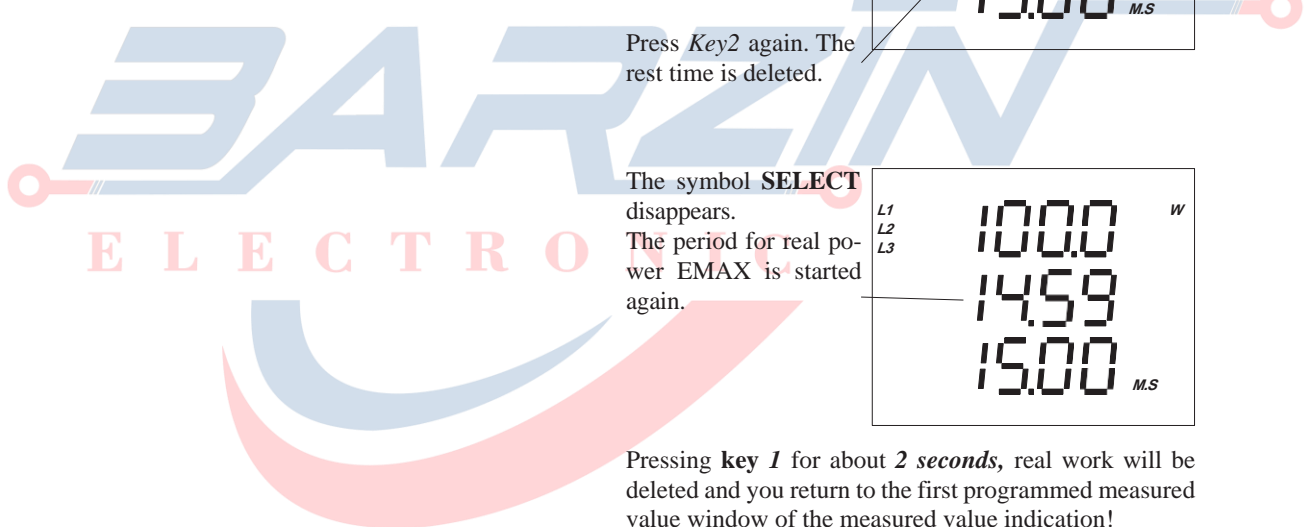

Barzinelectronic.ir

Current meas. without measuring voltage

The net frequency is detected from the measuring voltage within the UMG 503. From the net frequency, the scanning frequency for current and voltage inputs is calculated.

If the measuring voltage is missing, net frequency and scanning frequency cannot be detected. Voltage, current and all resulting values cannot be calculated and are indicated with zero.

If current should be measured without measuring voltage, the net frequency must be selected as a stable frequency at UMG 503.

As stable frequency, 50Hz and 60Hz are available.

Harmonics

Harmonics are the integer multiples of the fundamental. The UMG503 measures the fundamental of voltage in the range of 45 to 65 Hz. The calculated harmonics of voltage and current apply to this fundamental. For too distorted voltages, the fundamental cannot be detected accurate enough. Nevertheless it is possible to calculate the harmonics by selecting a stable fundamental of 50Hz or 60Hz. See also chapter "Net frequency".

The UMG503 calculates up to the 20th harmonic.

Total harmonic distortion factor THD(f)

The calculated total harmonic distortion factor THD(f) is the effective ratio of the harmonics compared to the fundamental. The total harmonic distortion is given in %.


As the total harmonic distortion corresponds to the fundamental but not to the total value, it can exceed 100%.

THD(f) = Total Harmonic Distortion (fundamental)

Partial harmonics

In further descriptions, the single harmonics are described as partial harmonics.

The partial harmonics of current are given in Ampere and the partial harmonics of voltage are given in Volt.

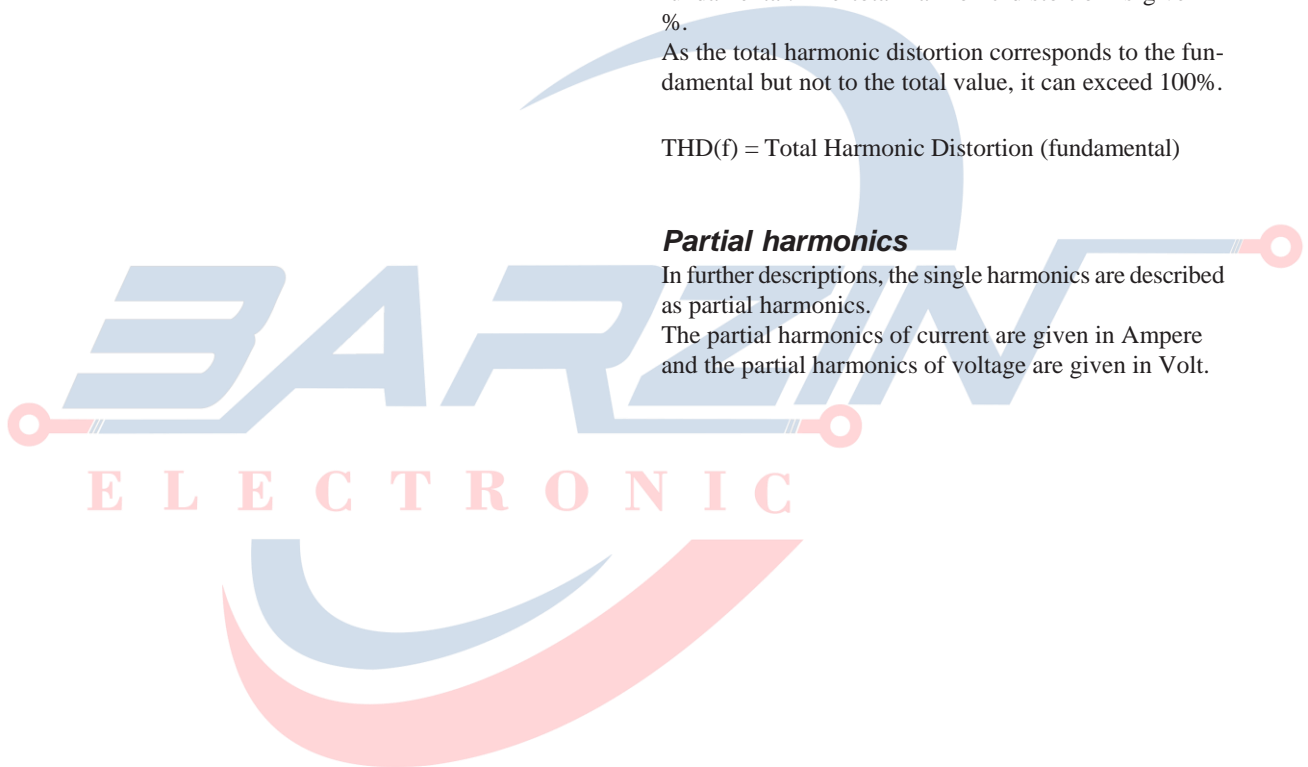

Barzinelectronic.ir


Programming

The following settings can be carried out in the menu **PRG**:


- Delete real and reactive energy,**
- Delete all highest and lowest values "dEL"**
- Select measured values for the **ring buffer**,
- Select averaging time** for the measured values,
- Delete single highest and lowest values,**
- Read out duration of storage** of the ring buffer.

To reach the menu **PRG**, for example from the indication of voltage, please proceed like this:


Confirm with *key 1*.
In the measured value indication the text **SELECT** appears flashing.

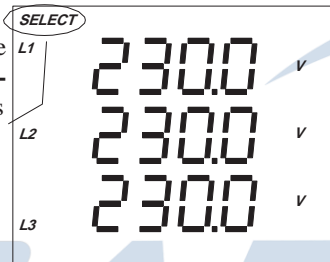

Confirm *key 1* again.
Now you are in the menu **CONF**.

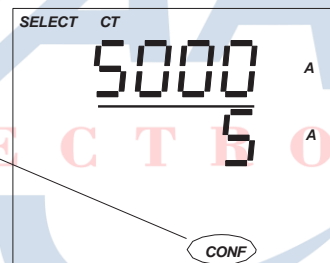

Confirm *key 1* again.
Now you are in the menu **PRG**.

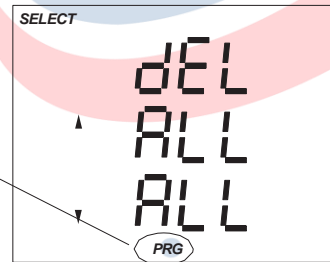

Confirm the selection of the menu **PRG** using *key 2*.
The text **SELECT** disappears from the display.




Delete real and reactive energy

Real and reactive energy can be deleted separately via keyboard or serial interface. Starting time and running time will be actualized. If real energy is deleted, all corresponding tariffs are reset. If reactive energy is deleted, the meters for inductive and capacitive energy are reset.

Delete via keyboard


Please go to menu **PRG** (See chapter programming).

Confirm the selection of the menu **PRG** using *key 2*. The text **SELECT** disappears.

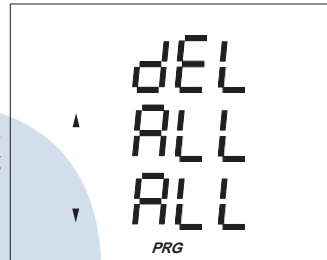

Pressing *key 2* again, the delete menu for **real and reactive energy** appears.


The arrows for minimum and maximum values disappear.

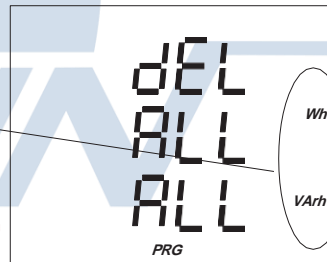


Select the work to be deleted by pressing *key 1*, for example real energy.

The text **EDIT** appears and "ALL" flashes.

Confirming with *key 3*, a "0" flashes in the indication.

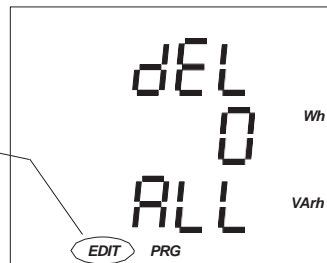

Pressing **key**  for about **2 seconds**, real work will be deleted and you return to the first programmed measured value window of the measured value window!

Delete via serial interface

In address 5000 a 17Byte large control word is deposited. A part of this control word is used for deletion of energy:

Byte 7 > 0, delete real energy

and

Byte 8 > 0, delete reactive energy.

In order to overwrite a Byte, first

read control word,

overwrite Byte7/8 with e.g. 1


and rewrite the changed control word to address 5000.

Attention!


Changing the control Byte incorrectly can lead to malfunctions of the UMG 503.

Delete highest and lowest values

Highest values are marked with an arrow upwards, the lowest with an arrow downwards.

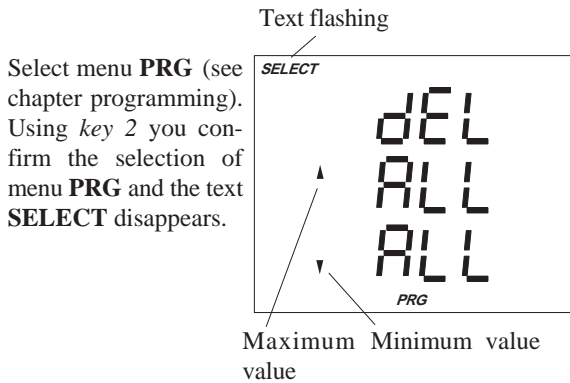

Using *key 2* you confirm the selection of menu **PRG** and the text **SELECT** disappears.

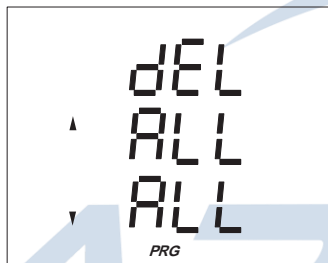

There are two possibilities of deleting the highest and lowest values:


- Delete all minimum and maximum values,
- Delete min. and maximum values separately.

The monthly peak values of the real power EMAX belong to the maximum values and are deleted together with them.


.& **Attention!**
After return of auxiliary voltage, all minimum values are deleted.

Delete all minimum and max. values

If you want to delete all maximum values with *key 1*, the indication "ALL" flashes.

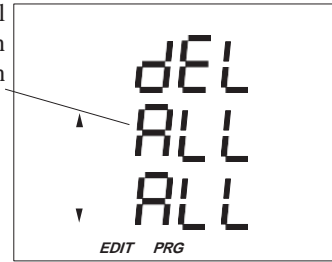

Using *key 3*, a "0" appears within the indication and all highest values are marked for deletion.

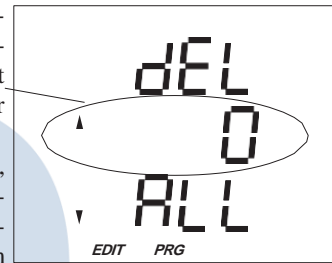

Pressing *key 1* again, you change to the indication of minimum values. Now the minimum values could be marked for deletion.


Pressing *key 1* for about **2 seconds**, the highest value is deleted and you return to the first measured value window of the measured value indication!

Barzinelectronic.ir

Delete min. and max. values separately

If you are in the menu **PRG** and you would like to delete the highest voltage values only, please proceed as follows:

Change to the measured value indication using *key 3*. In this example the programming of the current in the three phases is shown. All three currents are programmed for the ring buffer.

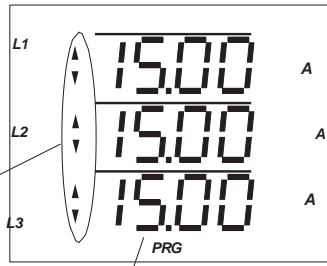

Averaging time =15 Minutes


Pressing *key 1* again, the highest value in phase L2 is indicated.


If this highest value should be deleted, please press *key 3*.

The indicated value is set to 000.0 for a short duration and is overwritten by the next measured value.




Now scroll to the measured value indication of the voltages by using *key 3*.

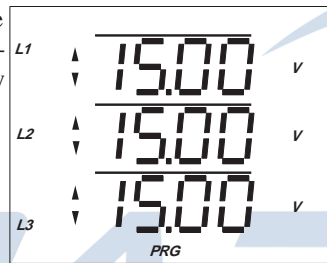

Pressing the *key*  for about **2 seconds**, you leave the **PRG** menu and return to the first measured value window of the measured value indication!

Now scroll to the highest values of voltage using *key 2*.

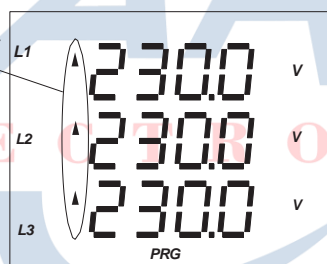

Pressing *key 1*, the highest value in phase L1 is indicated. The text **EDIT** appears.



Ring buffer

For the most measured values a mean value is calculated (please see table "Measured and calculated values"). These mean values can be selected for storage in the ring buffer.

The mean values are marked with a horizontal bar on top of the measured value. The mean values, selected for storage in the ring buffer, can be called up in the menu **PRG** and are marked by the flashing of both of the arrow symbols.

Additionally, the following **energies** can be selected for storage in the memory:

- Real energy,
- Real energy consumption,
- Real energy supply,
- Reactive energy,
- Reactive energy inductive,
- Reactive energy capacitive.

Those energies with the various tariffs cannot be selected for storage in the ring buffer. For **energies**, the period between two savings is set to one hour.

The more mean values are selected for storage in the ring buffer, the earlier the ring buffer is complete and will be overwritten. The period of storage for the ring buffer can be read out in the measured value indication.

The stored measured values can be read out of the ring buffer using the "programming- and reading out software PSWbasic" only.

Attention!

.&

If the averaging time, the current transformer ratio, voltage transformer ratio, three wire or four wire measurement or the selection of the measured values stored in the ring buffer are changed, the contents of the ring buffer are deleted completely.


Select mean values

If you are in menu **PRG** and would like to save the mean value of voltage L2 within the ring buffer, please proceed as follows:

Confirm selection of the menu **PRG** using key 2, the text **SELECT** disappears.




Change over to mean value indication using key 3. In this example the programming of current in the three phases is indicated.

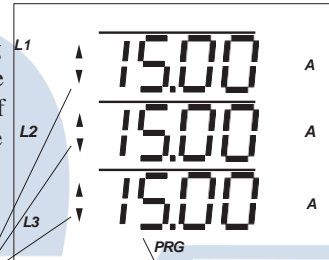

All three currents are programmed for storage in the ring buffer.

Averaging time=15Minutes..

Press key 3 to scroll to the mean value indication of voltage.

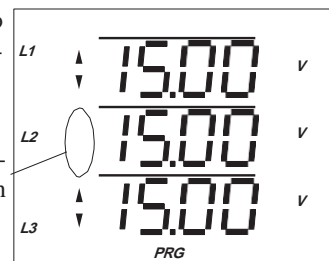


Voltage L2 is not programmed for storage in the ring buffer.

With key 3 you select the voltage in phase L2.



Switch on or off the arrow symbols using key 2.

If the arrow symbols are switched on, this mean value is stored every 15 minutes in the ring buffer.

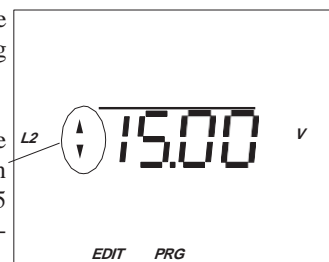

Averaging time

An averaging time can be assigned to each mean value. All averaging times are programmed to 15 minutes, when the device leaves the factory.

Setting range


Description	Setting range
Averaging time	5, 10, 15, 30Sec., 1, 5, 10, 15, 30, 60Min.
Ring buffer	All measured values (See table "Measured and calculated quantities")

Presettings

Description	Presettings
Averaging time	All measured values 15.00 m.s.
Ring buffer	U1, U2, U3, I1, I2, I3, P1, P2, P3

If the averaging time, for example, for voltage L2 should be changed to 5 seconds, please proceed as follows:

Select mean value as described in chapter "select mean value".

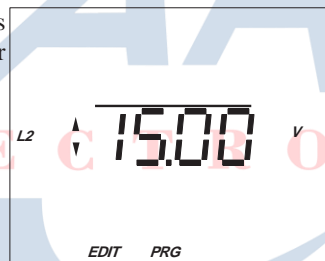

The averaging time is selectable from 5, 10, 15, 30 seconds, 1, 5, 10, 15, 30 and 60 minutes.

Select averaging time of 5 seconds using key 3.



Pressing key \Rightarrow for about 2 seconds, the highest value is deleted and you return to the first measured value window of the measured value indication!

Duration of the measurement period

The averaging time for *real power EMAX* is called measuring period.

Within the measuring period, the real work is measured and divided by the time passed by. As the result, the *real power EMAX* is indicated. When the measuring period is over, the added real work is deleted.

The measuring period for *real power EMAX* can be set to **5, 10, 15, 30 and 60 minutes**. The factory presetting is a measuring period of 15 minutes.

Attention!

If the averaging time, the current transformer, the voltage transformer, the three or four wire measurement or the measured value selection is changed, the ring buffer is deleted.

Memory

The memory of the UMG 503 is split into three areas: The event memory, the peak and lowest value storage and the ring buffer. The event memory and ring buffer can only be read out via PC using the programs **PSWbasic** or **PSWprofessional**. The read out data are available in ASCII-format, and the ring buffer data in binary format additionally. With **PSWprofessional** you can create graphics from those binary data.

In the **peak and lowest value storage**, the peak and lowest values of the measurement values are saved with date and time. All EMAX monthly peak values are saved for each months and all tariffs. The old EMAX monthly values are overwritten at the beginning of a new year.

In the **ring buffer** all measurement values, marked for storage, are saved. The configuration of the ring buffer is only possible with the option "Configuration UMG503".

In the **event memory** the following events can be saved with date and time:

- Deleting the event memory,
- Relay output 1 on/off,
- Relay output 2 on/off,
- Breakdown and return of the auxiliary voltage,
- Breakdown and return of the measurement voltage.

The breakdown of the measurement voltage will be recognized, when:

- The measurement voltage is smaller than 50% of the set primary voltage of the current transformer,
- and the breakdown lasts longer but 500ms.

Period of storage

The more mean values are marked for storage in the ring buffer, the shorter becomes the period of storage. With the factory's presettings

Mean values: U1, U2, U3, I1, I2, I3, P1, P2, P3

Averaging time: 15 minutes.

The mean values of about 1 year are saved in a device with 512kRAM. In devices with 128kRAM, this duration is about 3 months. If this period is over, the most ancient mean values are overwritten.

If various averaging times are assigned to the mean values to be stored, more room for storage can be required, and the period of storage can get much shorter.

If only **38 seconds** are indicated for the period of storage, it cannot be granted any more, that the selected values are saved in the UMG 503. To enlarge the period of storage, you can remove some measured values with large periods or increase little periods of storage.


Attention!

After the selection of the measured values to be saved, the actual **period of storage** must be checked! If the period of storage is below 38 seconds, it cannot be granted, that the selected values are saved in the

.& UMG 503.


An estimate of the period of storage can be read out in menu **PRG**.

Text flashing Peak values

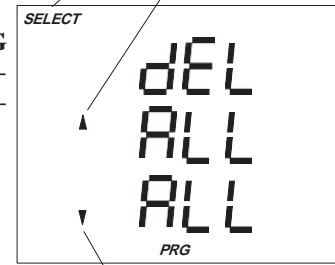

Selecting menu **PRG** (see chapter programming), the following indication appears first:


Lowest values

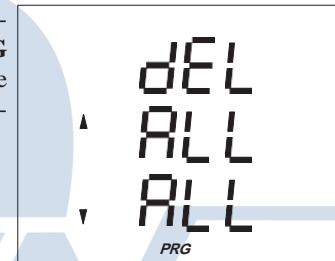

With *key 2* the selection of the menu **PRG** is confirmed, and the text **SELECT** disappears.

Scroll to the indication besides using *key 3*.

Here, for example, the period of storage is estimated at more than one year.

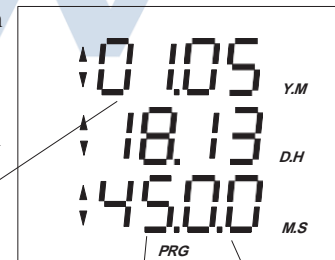

1year, 5months, 18days, 13hours, 45minutes, 0seconds

Barzinelectronic.ir

Ring buffer data format

Data sets can be saved in compressed or uncompressed form. With the presettings, the data are saved compressed.

The programming and reading out software PSW503basic can read compressed data from ring buffer only. Other applications can read data sets in uncompressed form only.

An uncompressed data set consists of the type of measured value, the date and the measured value. This value is always given in Float format.

Type of measured value

The type of the measured value can be determined by the addresses from the tables 1a and 1b. Example: If the type is marked by the decimal number „1004“, this corresponds to the current mean value in phase L2.

Type	Date	Meas. value
2 Bytes	6 Byte	4 Byte (float)

**Table 1a, Measured value
Meas. val. in floating point form.**

Description	Addr.(dez)	r/w(1)	Type
Current	1000	r	Meas. val. ²⁾ A L1, L2, L3
	1001	r	Actual value in L2
	1002	r	Actual value in L3
	1003	r	Mean value in L1
	1004	r	Mean value in L2
..
Voltage N-L	1012	r	Meas. val. ²⁾ V L1, L2,
Voltage L-L	1024	r	Meas. val. ²⁾ V L1-L2, L2-L3,
Real power	1036	r	Meas. val. ²⁾ W Sign -=Supply.
..

Diagr. Assign measured value type.

Changeover ring buffer

The changeover from compressed to uncompressed storage of data is carried out via the serial interface. If the Modbus RTU protocol is used, please use the **addresses**. If the Profibus DP protocol is used, please use the **index**.

If data should be saved uncompressed within the ring buffer, address **19010dez** (Index **11**) must be overwritten by 2 Bytes of a content by choice.

If data should be saved uncompressed within the ring buffer, address **19020dez** (Index **12**) must be overwritten by 2 Bytes of a content by choice.


.& Attention! If another way of compression is selected, the total content of the ring buffer is **deleted**.

.& Attention! The inaccuracy of the compressed memory data is max. $\pm 0,4\%$ rng.

Read ring buffer

If the data sets have been saved uncompressed, they can be read via the serial interface with Modbus protocol.

To make this reading easy, there is a **ring buffer pointer** (4 Byte) available. This ring buffer pointer always points to the beginning of a data set. One data set consists of 12 Bytes.

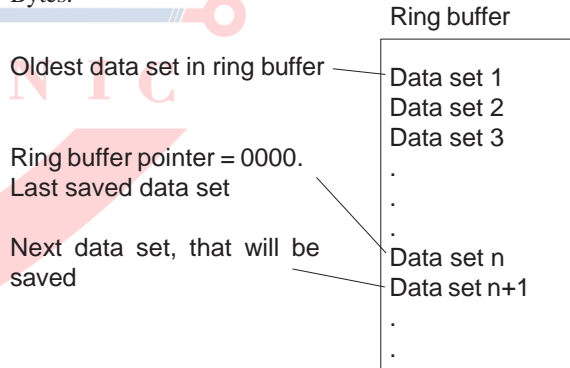


Diagr. Data sets in ring buffer.

Date

In the part of the data set with the description „Date“, the date and time of the measurement are saved.

Meas. val. type	Date	Meas. value
2 Bytes	6 Byte	4 Byte (float)

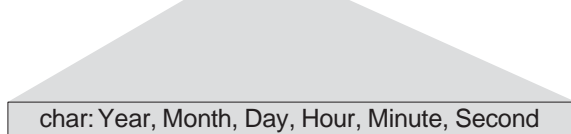

Diagr. Structure of „Date“

¹⁾ r/w = read/write

²⁾ Measured values {float: Actual value[L1, L2, L3], **Mean value**[L1, L2, L3], Minimum[L1, L2, L3], Maximum[L1, L2, L3]}

Read data sets

The reading of data sets is controlled by the following addresses:

Read address 19000_{dez} (Index 231).

The first 4 Bytes provide the contents of the ring buffer pointer.

The next 12 Bytes provide the first data set, which the pointer points on.

The ring buffer pointer is increased **automatically** by the number of read Bytes, but the first four Bytes are not included.

Write address 19000_{dez} (Index 10).

Set ring buffer pointer on a data set of the ring buffer.

If the ring buffer pointer is overwritten by 0000, it points on the last read beginning of ring buffer with address 19008_{dez} (Index 235).

Read address 19002_{dez} (Index 232).

Read a number (4 Bytes) of data sets from that address on, on which the pointer points. The ring buffer pointer is increased **automatically** by the number of read Bytes. The number of read Bytes must be divisible by 12.

Read address 19004_{dez} (Index 233).

Provides that address (4 Bytes), on which the actual pointer points.

Read address 19006_{dez} (Index 234).

Read a number of data sets, from that address on, on which the pointer points. The ring buffer pointer is not increased.

Read address 19008_{dez} (Index 235).

Delivers the number (4 Bytes) of the Bytes saved in ring buffer. If you divide this number by 12, the result is the number of the saved data sets.

The ring buffer pointer is set to the last data set in ring buffer. The contents of this pointer is therefore zero.

Overwrite address 19010_{dez} (Index 11) with 2 Bytes with a content by choice

New data sets are written into the ring buffer uncompressed. If data were saved before in a compressed form, the ring buffer will be deleted.

Read address 19010_{dez} (Index 236).

Delivers the storage format of the ring buffer in 2 Bytes.
00=compressed ring buffer
01=uncompressed ring buffer

Overwrite address 19020_{dez} (Index 12) with 2 Bytes with a content by choice.

New data sets are written into the ring buffer compressed. If data were saved before in a uncompressed form, the ring buffer will be deleted.

Overwrite address 19030_{dez} (Index 13) with 2 Bytes with a content by choice.

The ring buffer will be deleted.

Example 1: Read the last saved data set.

Read address 19008_{dez} (Index 235). The ring buffer pointer (0000) is set to the last data set in ring buffer.

Read 12 Bytes from address 19006_{dez} (Index 234). 12 Bytes correspond to one data set. The ring buffer pointer is not increased.

Example 2: Read all saved data sets.

1.) Read address 19008_{dez} (Index 235). The number of saved Bytes is read. If you divide the result by 12, the number corresponds to the saved data sets. The pointer points to the last saved data set in ring buffer.

2.) Read the content of the Bytes in ring buffer by address 19002_{dez} (Index 232). With the MODBUS-Protocol, at maximum 240 Bytes=20 data sets can be read per reading. The number of read Bytes must be divisible by 12.

The ring buffer pointer is increased automatically by the number of read Bytes and points to the next data set, which has not been read yet.

3.) Repeat reading of address 19002_{dez} (Index 232) as long as all data sets have been read.

.& Attention!

If a failure appeared during data transmission, the complete procedure must be repeated, starting with step 1.

Example 3: Read all saved data sets.

1.) Read address 19008_{dez} (Index 235). Reads the number of saved Bytes in ring buffer. Divided by 12, the number of saved data sets is the result. The pointer points to the last saved data set.

2.) Read address 19000_{dez} (Index 231). The first 4 Bytes refer to the actual address of the pointer. The next 12 Bytes provide the first data set of the ring buffer. With MODBUS-Protocol you can read 244Bytes (4Byte + 20 data sets) at maximum per reading.

3.) Repeat reading address 19000_{dez} (Index 231) as long as all data sets have been read.

.& Attention!

If a failure occurred during data transmission, the last actual address of the ring buffer pointer must be written on address 19000_{dez} (Index 10) and the last reading procedure must be repeated.

Configuration

In configuration menu **CONF** the required settings are noted for operating the UMG503 (see also "Table of configuration data"). When the device is delivered, these settings are not protected and can be changed. An unintended change of the settings can be avoided using a password.

The following settings can be read out and changed:

Current transformer

Voltage transformer

Interfaces

RS485 interface (option)

RS232 interface (option)

Infrared interface (option)

Device address

Data recording

Limit group 1 (Option)

Limit group 2 (Option)

Three wire measurement (Option)

Scanning frequency

Measured value rotation

Analogue output (Option)

Pulse output (Option)

Event memory

Auxiliary input (Option)

Tariff change over, real energy consumption

Tariff change over, reactive energy inductive

Tariff change over, reactive energy capacitive

Clock

summer-/wintertime

Software Release

Serial number


LCD contrast

Password

To jump from a measured value indication, in this example the indication of voltage, to the menu **CONF**, please proceed as follows:


Press *key 1*.

The flashing text **SELECT** appears in the indication.

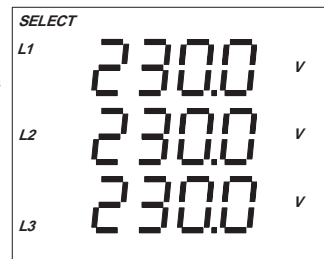

Press *key 1* again.


Now you are in the menu **CONF**.

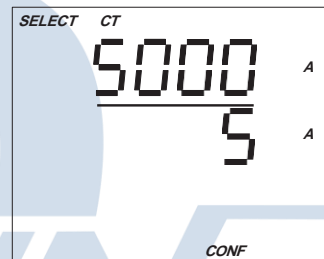

Confirm the selection of the menu **CONF** using *key 2*.

The text **SELECT** disappears.

Now you are in the menu **CONF**, and the settings of the current transformer are indicated.

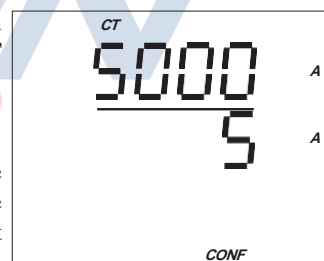

Barzinelectronic.ir

Configuration data

Description	Indication	Setting range	Settings
Current transformer, primary	CT	1A .. 999,9MA	"5000" A
Current transformer, secondary	CT	1A .. 5A	" 5" A
Voltage transformer, primary	VT	100V .. 99,99kV	" 400" V
Voltage transformer, secondary	VT	100V .. 500V	" 400" V
Serial interfaces		RS485, RS232, Infrared	
RS485	" 485"		
Baud rate			
MODBUS RTU		9.6, 19.2, 38.4, 57.6 ¹⁾ , 115.2kbps ¹⁾	"38.4"
PROFIBUS DP ³⁾		9.6, 19.2, 93.75, 187.5, 500, 1500kbps	
Protocol		oFF, 1, 2, 3, 4, 5, 6	"2"
RS232	" 232"		
Baud rate		9600bps, 19.2kbps, 38.4kbps	"38.4"
Protocol		oFF, 1, 2, 3, 4, 5, 6	"oFF"
Infrarot	"InFr"		
Baud rate		9600bps, 19.2kbps, 38.4kbps ²⁾ , 57.6kbps ²⁾ , 115.2kbps ²⁾	"19.2"
Protocol		oFF, 1	"oFF"
Relay outputs			
Number	"S. "	1, 2	" 1"
Limit		All measured values	"L1 0.000 A"
Minimum connection time	" . M.S"	1 .. 59 Seconds	"00.01 M.S"
Exceeding	▲		
Underscoring	▼		
Three wire measurement (Option)	" nEt"	3L, 4L	"4 L"
Net frequency	"FrE "	Auto, 50Hz, 60Hz	"Auto"
Measured value rotation	"Pic "		
Changing time		0 .. 9999 seconds	"0000"
Display selection		All displays	no rotation
Analogue output	"AnLo"	0/4-20mA	"4 20"
Measured value		All values apart from energy	Sum real power
Minimum value			"0000"
Maximum value			"0000"
Pulse output	"PuLS"		
Measured value		All reactive and real works	T"00"
Pulse valency		0.000(W/var)h .. 99.99k(W/var)h	"0.000 Wh"
Event memory	"Prot"		
Devices with 128k RAM		0-2000 Events	0 events
Devices with 512k RAM		0-9999 Events	1000 events
Auxiliary input	"rSEt"	oFF = Auxiliary input not used 1 = external reset of the 15 minutes power mean value. 2 = External tariff change over 3 = Synchronize internal clock	"oFF"

1) These baud rates are not available in the version UMG503LS.


2) These baud rates are not available with any PC

3) The baud rates for PROFIBUS DP are mentioned within the GSD-file.

These baud rates cannot be changed at UMG503!

Konfigurationsdaten

Description	Indication	Setting range	Settings
Tariff times			
Work	Txx	0x = Real work, consumption 1x = Reactive work, capacitive 2x = Reactive work, inductive x = Tariff number 0 .. 4	"00"
Time number	"P. 0"	0 .. 9	" 0"
Week day			"17.xx d.h."
Beginning		1 = Monday, .. 7 = Sunday	1 = Monday
End		1 = Monday, .. 7 = Sunday	7 = Sunday
Starting time			
Hours		00 h .. 24 h.	"xx.24 d.h."
Minutes/seconds		00.00 m.s .. 59.00 m.s.	"00.00 m.s."
Date and time			Date and time
Summertime	"oFF"	oFF, on, Eu	oFF
Wintertime	"oFF"	oFF, on, Eu	oFF
Software release	"rEL"	4-digits	loaded software release
Serial number	"S. nr"	8-digits	serial number
LCD Contrast	"cont"	170 .. 230	185
Inner temperature	"88°"	2-digits	-
User password	"PASS"	0000 .. 9999	"0000"

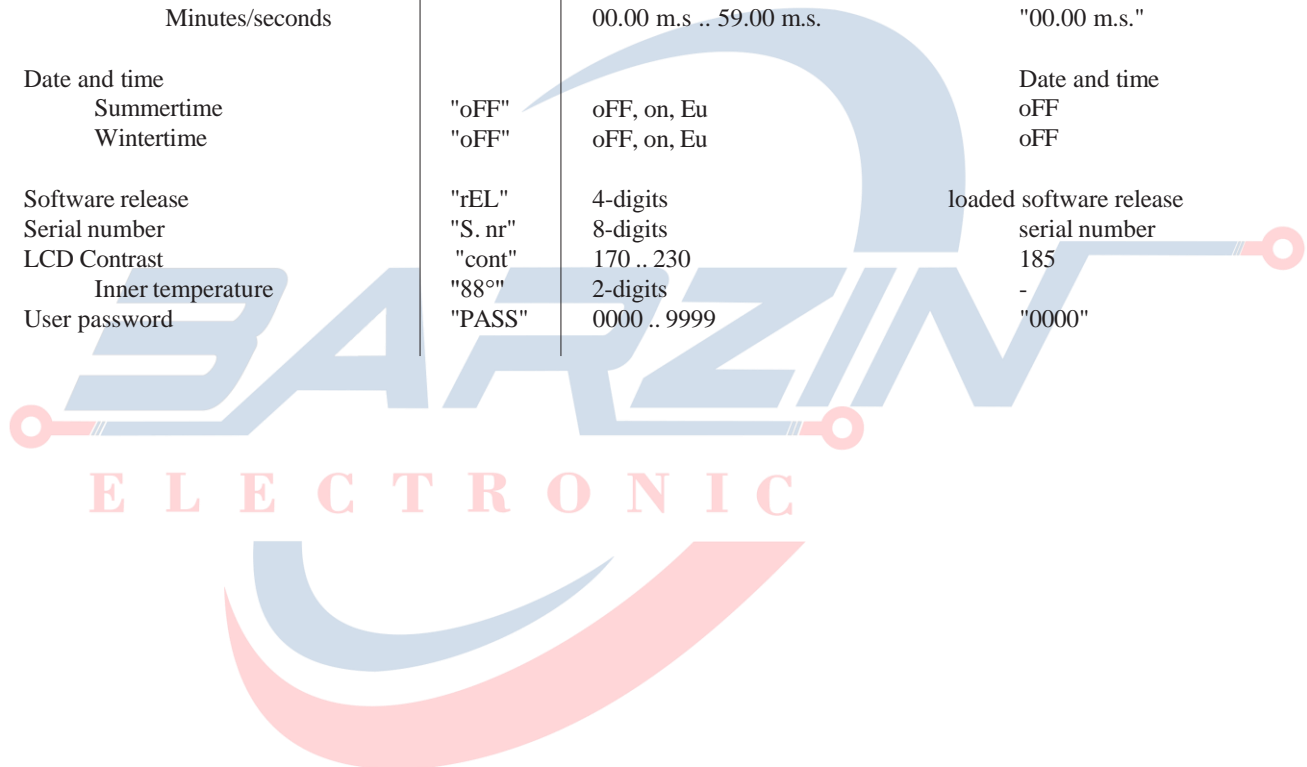


Barzinelectronic.ir

Current transformer

The ratio of the current transformer is set in configuration menu **CONF**. The secondary current can either be set to $..1A$ or $..5A$.


If you are in configuration menu **CONF**, the current transformer ratio can be changed as follows:

Select:
Confirm the selection of the current transformer menu with key 2.
The text **SELECT** disappears.

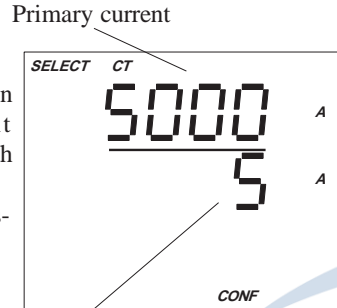

Secondary current

Set:
Select the number to be changed using key 1. The selected number flashes. The text **EDIT** appears.
Change the selected number using key 3.
Multiply the number with a factor 10 with key 2.

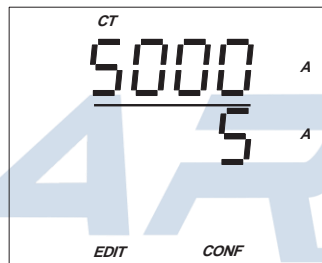

When the ratio of the current transformer is set, press key 1 as often, as no number is flashing any longer. **EDIT** disappears.


With key 3 you move to the next menu. The ratio of the current transformer is saved.

Voltage transformer

The ratio of the voltage transformer is set in configuration menu **CONF**. The secondary voltage can be set in the range of 100V up to 500V.


If you are in configuration menu **CONF**, change the ratio of the current transformer as follows:

Select
Confirm selection of current transformer menu with key 3.
The text **SELECT** disappears.

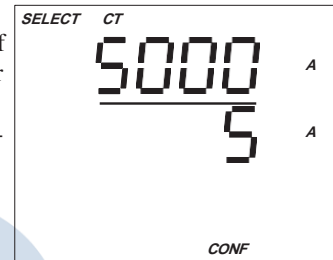


Primary voltage

Select
With key 3 you move to the voltage transformer menu.

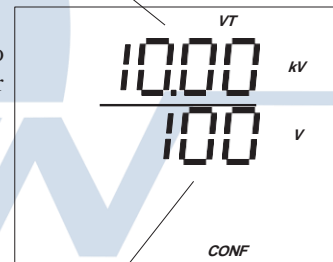

Secondary voltage

Set
Using key 1 the number to be changed is selected. The selected number flashes. The text **EDIT** appears.
With key 3 the selected number is changed.
Key 2 multiplies the number with a factor 10.

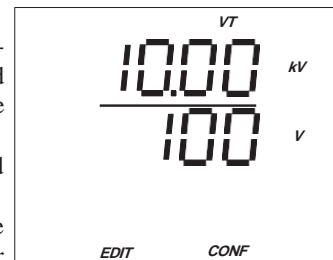


If the ratio of the voltage transformer is set, press key 1 as often, as no number is flashing any longer. **EDIT** disappears.

With key 3 you move to the next menu. The ratio of the voltage transformer will be saved.

RS485 interface (Option)

The RS485 interface is suited for transmission of data over a distance of 1200 m. Up to 31 UMG503 and a master (PC or SPS) can be connected.

As PCs usually only have a RS232 interface, a suitable interface converter must be connected between UMG 503 and PC. The distance between interface converter and PC may be 4 m at maximum. The distance between UMG 503 and interface converter may be 1200 m at maximum.

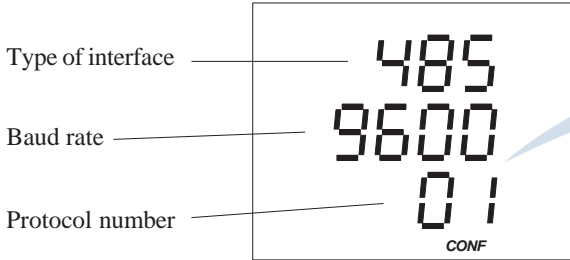


Transmission protocol RS485

The following protocols can be selected:

- off no protocol, interface disconnected
- 1 Standard Protocol
- 2 Modbus Protocol
- 3 -
- 4 Service Protocol
- 5 PROFIBUS DP (Slave), (Option)
- 6 Modbus RTU (Master)*1)

Terminal resistance

If the device is connected to the end of a bus cable, the bus cable must be terminated by terminal resistances. The required terminal resistances are integrated within the device and are activated in condition ON.

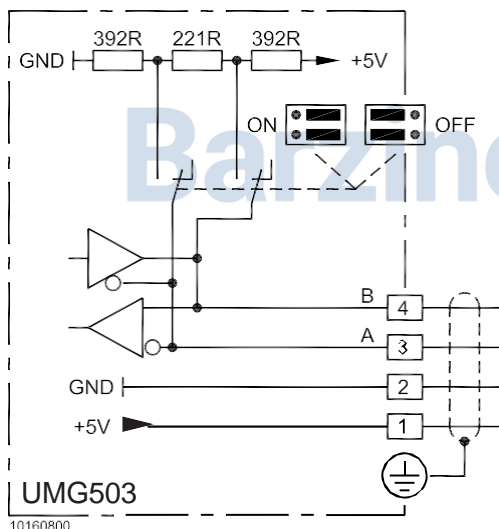

Diagr. Connection diagram RS485



RS232 interface (Option)

The RS232 interface is suited for transmission of data over a distance of 15m. The UMG 503 can be connected directly via this interface to the COM-port of PC or an external analogue modem.

The connection to PC must be carried out via a **zero modem cable**.

Transmission protocols RS232

- off no protocol, interface disconnected
- 1 Standard protocol
- 2 Modbus RTU protocol
- 3 -
- 4 Service protocol
- 5 Modem
- 6 Modbus RTU (Master)*1)

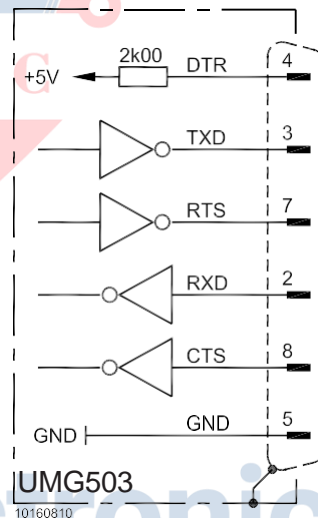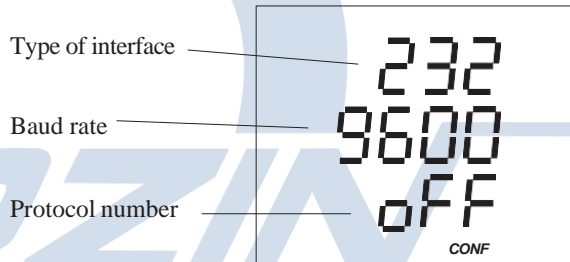

Diagr. Connection diagram RS232

Modem

Via the RS232 interface, the UMG503 can be connected to an external analogue modem. The connection between UMG503 and the Modem is carried out via a "point to point" cable.

For modem operation, the transmission protocol 5 (modem) must be selected for the RS232 interface.

*1) The protocol 6 can run on one interface RS232 or RS485 only.

Device address

If several devices are connected via the **RS485 interface**, a master device (PC, PLC) can distinguish them by the device address only. Therefore each UMG 503 must have another device address.

Device addresses can be given from 0 to 255.

Attention!


With **PROFIBUS DP** protocol device addresses from 0 to 126 are managed.

The set device address can be called and changed in menu **CONF**. Please move to menu **CONF** (See chapter "configuration").

Select


In menu **CONF** you move to indication of device address using *key 3*.

In this example the factory's presetting is indicated as "1".

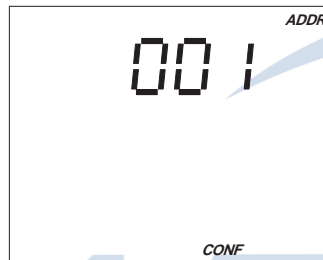

Change


With *key 1* a number of the device address can be selected and be changed using *key 3*. The selected number is flashing.

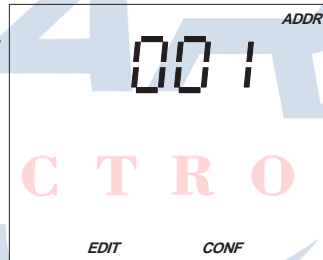

Save

If you have set the desired device address, please use *key 1* as often as no number is flashing any longer.

Pressing *key 2*, the text **EDIT** disappears, and the indicated device address will be saved.

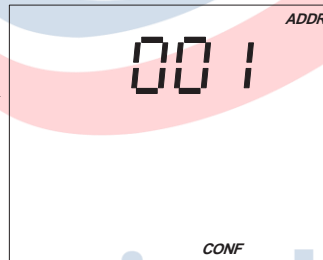

Data recording

The memory of UMG 503 is divided into three areas:

The event memory, the peak and lowest value storage and the ring buffer.

In the **peak and lowest value storage**, all peak and lowest values are saved with date and time.

In the **ring buffer** all measured values are deposited, as long as they are marked for storage.

In the **Event memory** all switchings of relay outputs and breakdown of supply voltage are saved.

In delivery condition is

Data recording = **on**

and all memory areas can be written. If no data recording should be carried out, data recording must be **off**.



Select

In menu **CONF** scroll to display of data recording "dAtA".

Confirm selection with key 1.

The text **EDIT** appears. The set data recording is displayed and flashing.

In this example, data recording is **on**, which means, data are recorded.



In delivery condition is

Data recording = **on**

and all memory areas can be written. If no data recording should be carried out, data recording must be **off**.


Change

The set data recording is flashing.

Using key 1 you can change over between **on** and **off**.

Confirming key 1, the text **EDIT** disappears.

Confirming key 3, you change to the programming of limits.

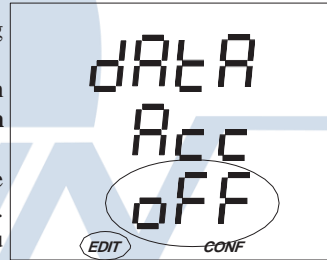


Pressing key 1 long, the programming is saved and you change back to the first measured value display.

ELECTRONIC

Barzinelectronic.ir

Limits


6 limits of measured values can be programmed for supervision. Violations of these limits can be saved with date and time within the event buffer.

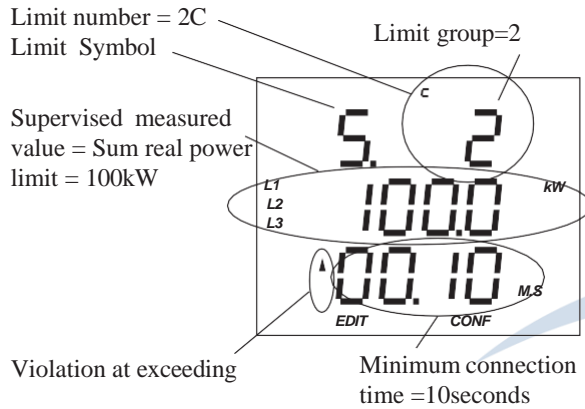

Internal relay outputs (Option)

The limits 1A up to 2C are assigned to the relay outputs K1 and K2.

If one or more limits, which are assigned to an internal relay output, exceeded, the corresponding relay releases. To avoid too frequent switchings, a minimum connection time is programmable for each relay output.

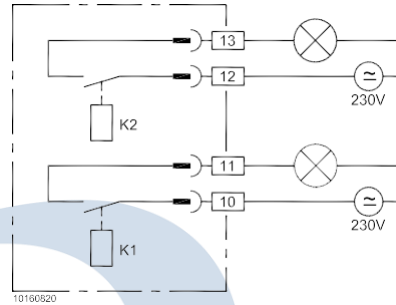

Diagr. Connection example for internal relay outputs

Limits can be positive (+) or negative (-). For positive limits (+), the sign is not indicated.

The limits are divided into the limit groups 1x and 2x and have the following descriptions:

1A, 1B, 1C,
2A, 2B, 2C

The limits are assigned to two internal and 6 external relays.

Relay outputs	inter.	external	Limits					
			1A	1B	1C	2A	2B	2C
K1			x	x	x			
K2						x	x	x
DAK1		x						
DAK2			x					
DAK3					x			
DAK4						x		
DAK5							x	
DAK6								x

Kx = Relay output(internal)
DAKx = Digital output clamp (external)

Diagr. Assignment of the limits

Attention!

.& On the relay contacts K1 and K2, no touchable low voltage and life voltages may be used at the same time.

The wiring for the relay outputs must be suitable for voltage up to 300VAC against ground.

External relay outputs

Additional relay outputs can be controlled via a bus coupling and digital output clamps of the company WAGO.

Each digital output clamp supervises one limit:

- Digital output clamp DAK1 = Limit 1A
- Digital output clamp DAK2 = Limit 1B
- Digital output clamp DAK3 = Limit 1C
- Digital output clamp DAK4 = Limit 2A
- Digital output clamp DAK5 = Limit 2B
- Digital output clamp DAK6 = Limit 2C

The connection of the UMG 503 to the bus coupling can be carried out via the RS232 or RS485 interface. Both devices, UMG503 and bus coupling, must have the same interface.


.& **Attention!** An event buffer must be reserved for the storage of limit violations.

Assign limits


In menu **CONF** you leaf to the indication of the desired **limit group** using **key 3**.

The limit number here is indicated as **1A**.

Now change over between the limit numbers **1A, 1B and 1C** using **key 2**.

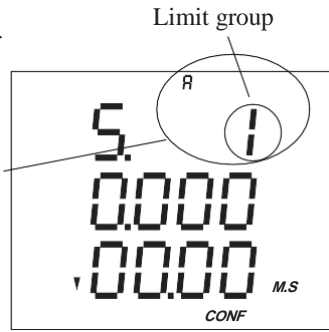

Example: Sum real power

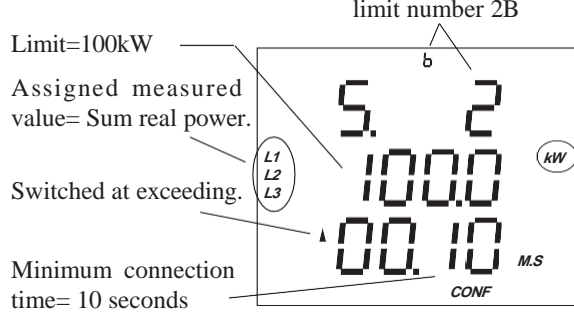


Attention!

To be able to distinguish between the measured values "Sum real power" and "Real power EMAX", the phases for "Real power EMAX" are shown in the first line.

Assign measured value:


Pressing **key 1**, the middle indication is flashing, and a **measured value** can be selected.

The text **EDIT** appears.

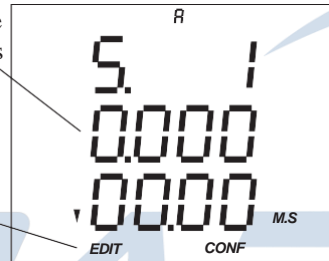


Pressing **key 2** and then **key 3** you leaf through the measured value indications.

A measured value can be selected using **key 1**. Please confirm with **key 2**.

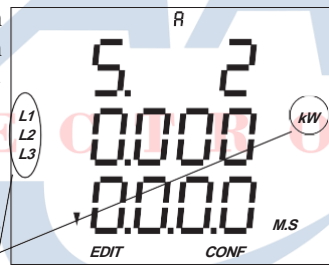


Example: Real power EMAX

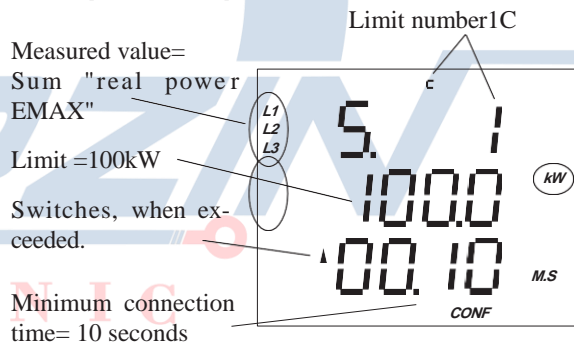

If you have confirmed the selected measured value with **key 2**, the first number of the middle indication flashes.


With **key 1** you can change between the ciphers of the **limit**, the **minimum connection time** and the symbols for **underscoring / exceeding**.

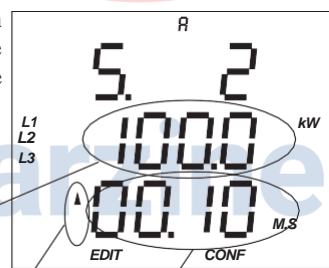

Limit Underscoring/ Exceeding Minimum connection time

The selected numbers or symbols can be changed with the **keys 2 and 3** (see chapter **Edit**).
If the limit is set, please press **key 1** as often as no numbers flashing any longer. **EDIT** disappears.
With **key 3** you reach the next menu point. The **limit** is now saved.

Example: Real power, sequence chart

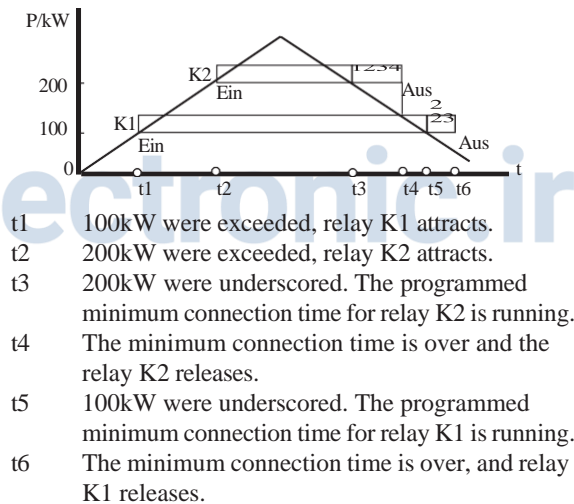

Three wire measurement (Option)


The UMG503 is suited for measurement in networks with or without neutral conductor. Networks with a neutral conductor are called four wire networks, without neutral conductor are called three wire networks. The option "three wire measurement" is needed for the connection examples 5 and 6.

When option "three wire measurement" is released, you can select between three wire measurement "3L" and four wire measurement "4L" in menu CONF.

Select


In menu CONF you move to the indication of three or four wire measurement using key 3.

In this example the four wire measurement "4L" is activated.

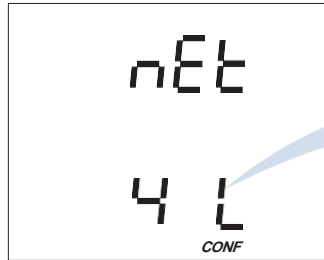


Change


With key 1 can be switched between four wire (4 L) and three wire measurement (3 L).

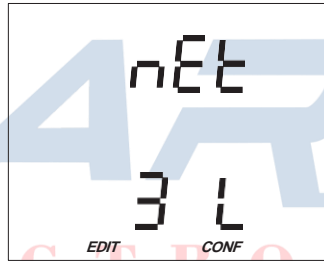

Attention!
 & In networks without neutral conductor voltage transformers must be used!

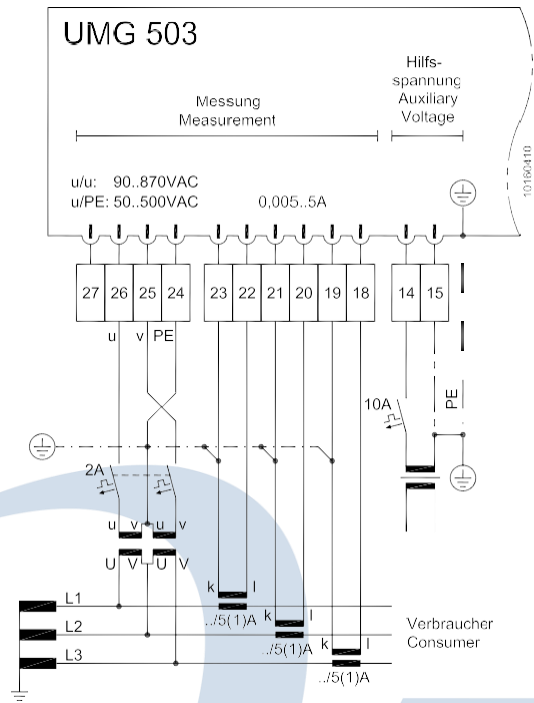

Diag: Three wire measurement with two voltage transformers and three current transformers. (Option "Three wire measurement" required)

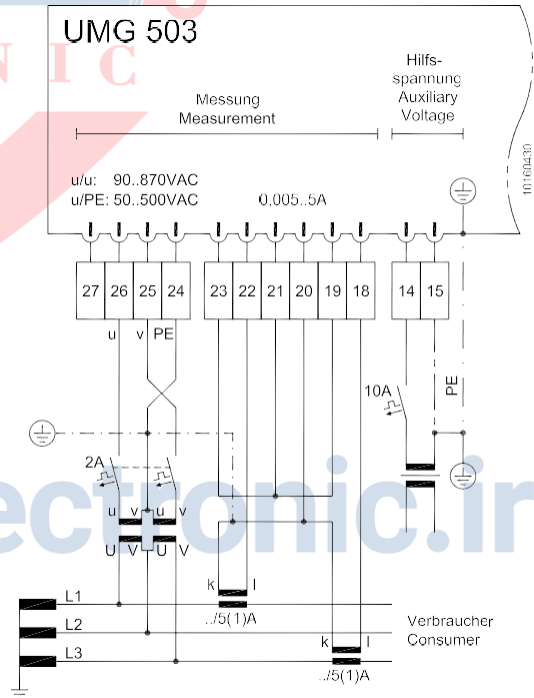

Diag: Three wire measurement with two voltage transformers and two current transformers.. (Option "Three wire measurement" required)

Net frequency

The net frequency is determined from the measuring voltage within the UMG 503. From this net frequency, the scanning frequency for current and voltage inputs are calculated.

For measurements with very distorted voltages, the frequency of the voltage fundamental cannot exactly be determined any longer. Voltage distortion occurs in measurements at consumers, which are driven with phase changing controllings.

For measuring voltage, which shows strong distortion, the corresponding stable net frequency should be set.

Distortion of the current does not affect the determination of the frequency.

If the measuring voltage is missing, no net frequency can be determined and no scanning frequency can be calculated. Voltage, Current and all resulting values are not calculated and indicated by zero.

If the current should be measured without measuring voltage, the net frequency should be set at UMG 503.

The determination of the scanning frequency can either be done automatically or programmed.

The following settings for the determination of the frequency are at your disposal:


- "Auto" Automatical frequency
- "50"Hz Stable frequency
- "60"Hz Stable frequency

The proceeding for the determination of the frequency can be called up and changed in the menu **CONF**.

Select

In menu **CONF** you can leaf to the indication of the frequency determination using *key 3*.


In this example, the frequency is determined automatically.

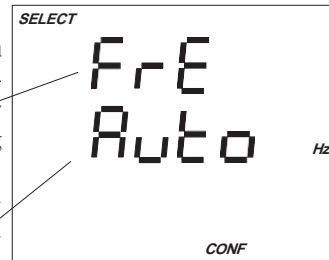

Change

Using *key 1*, the determination of the frequency is selected, and the text "Auto" flashes. In the indication, the text **EDIT** appears.

Using *key 3*, you can change over between the two methods of frequency determination.

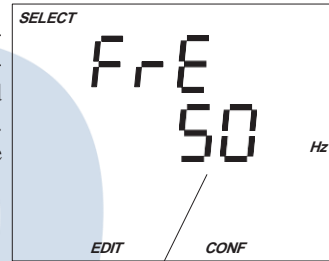

In this example a fix frequency of **50Hz** is set.

E L E C T R O N I C

Barzinelectronic.ir

Measured value rotation

All measured values are calculated two times per second and can be displayed.

Normally the selection and displaying of measured values is carried out via the keys 2 and 3. Additionally, there is the possibility of measured value rotation, which means to show selected measured values one after the other without keypress.

If no key is pressed for about 60 seconds, the measured value rotation becomes active, if programmed.



For the measured value rotation, all displays, which are retrievable by the key, are at your disposal.

The changing time for the displays can be set in the range of

0 .. 9999 seconds

To activate the measured value rotation, at least one measured value must be selected and the changing time must be programmed for more than 0 seconds.

If a changing time is programmed with 0 seconds, there is no change of the display.

If the changing time is bigger than 0, but only one display has been selected, only this display is indicated.

Program changing times


Select

Please scroll to display "changing time Pic" in menu CONF using key 3.

Confirm selection with key 1.

The text EDIT appears. The set changing time is indicated and flashes.

In this example, a changing time of 0 seconds is indicated, which means the measured value rotation is not active.

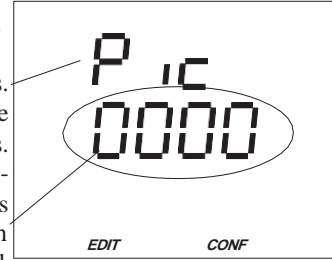

Change

The set changing time is flashing.

Confirm selection with key 1.

The first digit of the changing time is flashing.


Now select the number to be changed with key 1.

If a number is flashing, it can be changed using key 3.

If all numbers of the changing time are flashing, you can change to the measured value selection with key 2.

If no number is flashing, you can change to the programming of the analogue output using key 3.

By a long press of key 1 you save programming and go back to the first measured value indication.

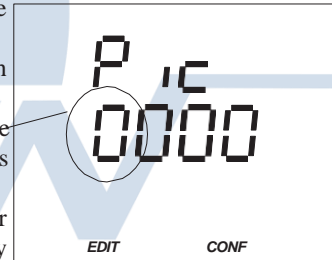

Barzinelectronic.ir

Program measured value selection


Select

Please scroll to display "changing time Pic" in menu CONF using key 3.

Confirm selection with key 1.

The text EDIT appears. The set changing time is indicated and flashes.


In this example, a changing time of 0 seconds is indicated, which means the measured value rotation is not active.

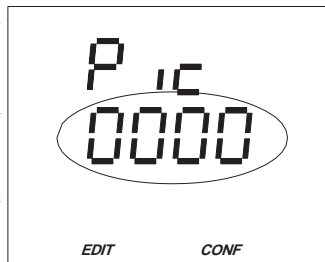


Change to the measured value selection with key 2.

In this example, the measured value indication for voltage L against N appears.

The measured value indication has not been programmed for the measured value rotation yet.

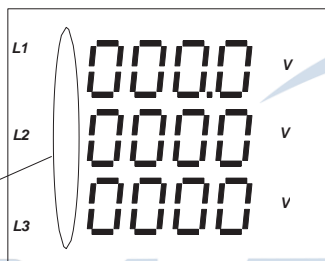

Pressing key 1 shortly, the measured value indication becomes active for the measured value rotation.

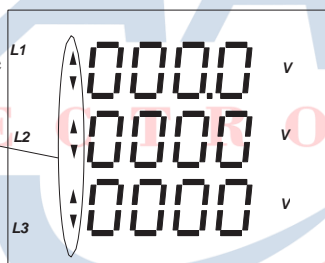

Pressing key 1 again shortly, the display becomes inactive again.

Pressing key 1 longer, you change back to the programming of changing time. The number 1 of changing time is flashing.

By a long press of key 1 you save programming and go back to the first measured value indication.

Barzinelectronic.ir

Analogue output

All measured values except real and reactive work, can be given out as a current via the analogue output. One internal and six external analogue outputs can be programmed at maximum.

The external analogue outputs are controlled via a bus coupling and analogue output clamps of the company **WAGO**. The connection of the UMG 503 to the bus coupling is carried out via the RS232 or RS485 interface. Both devices, UMG503 and bus coupling, must be connected to each other via the same interface. Each analogue output can be assigned to

- one measured value,
- one scale starting value and
- one scale end value

Only the **internal** analogue output in the UMG 503 can be switched between

- 0-20mA and
- 4-20mA

additionally. For the **external** analogue outputs analogue output clamps with the signal types

- 0-20mA,
- 4-20mA and
- +/-10V

are available.


Attention!

- & The internal analogue output can be used only, if the option "analogue output" is released.

Internal analogue output (Option)


For the operation of the internal analogue output an external auxiliary voltage from 20V up to 30V DC is required. The connectable maximum load is 500Ohm. If the analogue output is loaded with a higher resistance, the output range (20mA) is limited.

internal analogue output

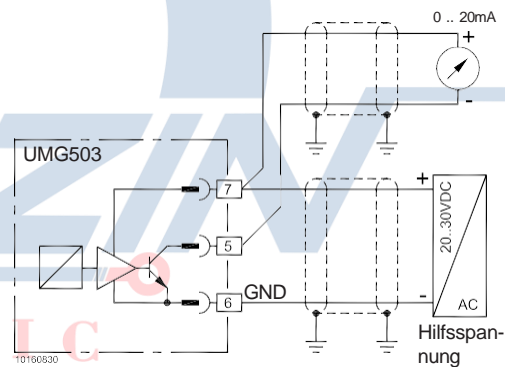

Diagr. Connection example, internal analogue output

Barzinelectronic.ir

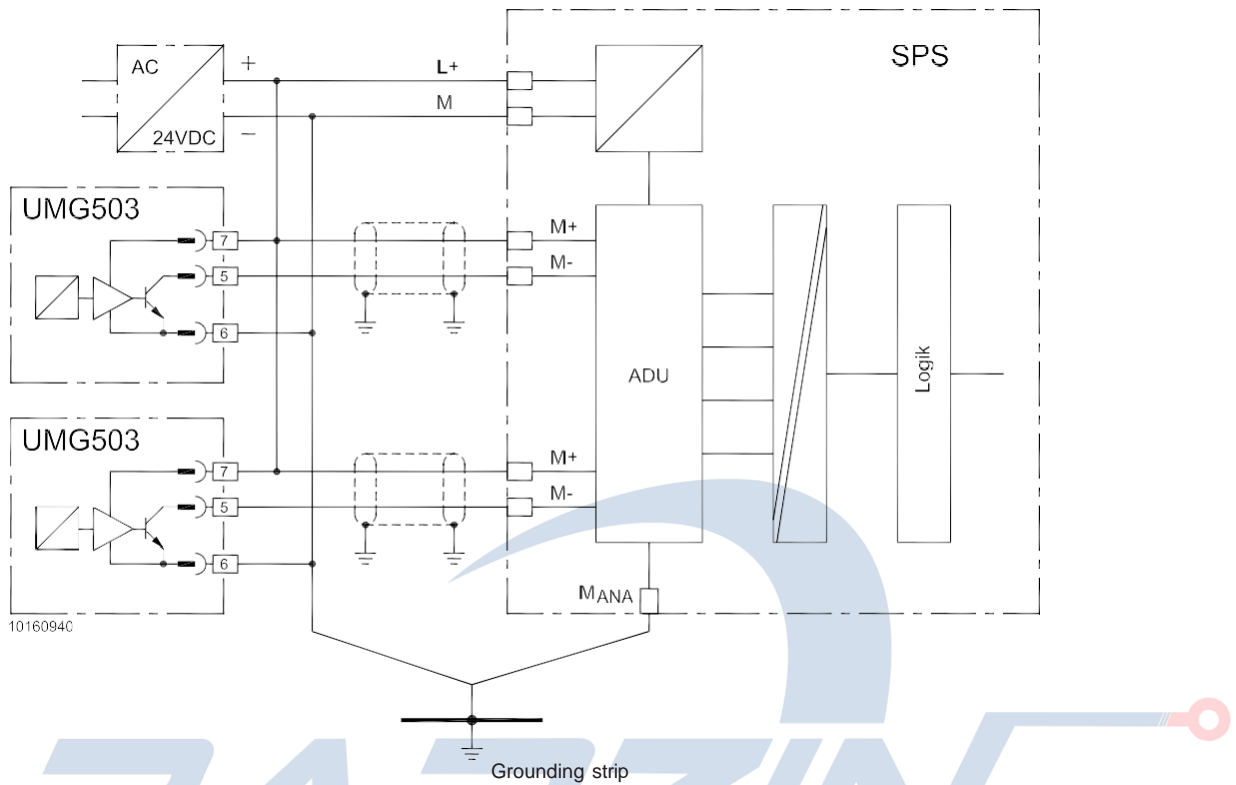


Diagr.: Connection example for 2 UMG503 with analogue outputs to a PLC-analogue input module.

ELECTRONIC

Barzinelectronic.ir

External analogue outputs

The external analogue outputs are controlled via a bus coupling and analogue output clamps of the company **WAGO**. The connection between UMG 503 and bus coupling can be carried out via RS232 or RS485 interface. Both devices, UMG 503 and bus coupling, must be connected with the same interface.

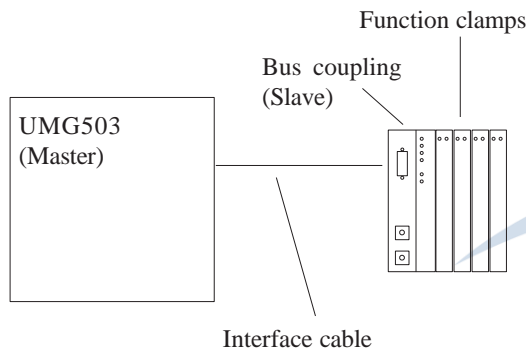

Attention!

For the transmission via RS232, only "point to point" connection with a maximum distance of 5m can be achieved.

The RS485 allows a bus length of maximum 1200m.

The following external analogue output clamps of the company **WAGO** can be controlled by the UMG 503:

Item code WAGO	Number of outputs	Signal type
750-550	2	0 .. 10V
750-552	2	0 .. 20mA
750-554	2	4 .. 20mA
750-556	2	+/- 10V

Transmission protocol

The MODBUS RTU protocol is used as transmission protocol between the UMG 503 and the bus coupling of the company **WAGO**. The UMG 503 becomes the master and the bus coupling becomes the slave.

In the UMG 503 the protocol "06" (Modbus RTU Master) must be set.


Indication in the configuration menu

External analogue outputs are indicated with the numbers 01 up to 06 in the UMG 503. The numbers correspond to the sequence of the analogue output clamps connected to the bus coupling.

The menu "external analogue output" can only be called up, if the protocol number "06" (Modbus RTU Master) is set at the UMG 503.

If you are in the menu **CONF**, leaf to the indication of the external analogue outputs using *key 3*. Analogue output number 01 is indicated.

Please leaf to the analogue outputs 02 up to 06 using *key 2*.

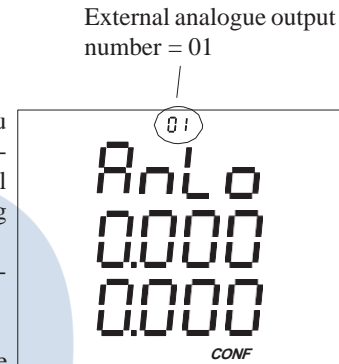

Assign measured value

All measured values, which are configured for the measured value indication, except real and reactive energy, can be given out of the analogue outputs. From the measured value tables, the desired measured value, "sum real power", for instance, are chosen and assigned to the analogue output.

Please scroll to the display analogue output in menu **CONF**.


Text "AnLo" flashes.

Now a measured value table can be selected with *key 2*. The measured value table for voltage appears.

Now you can select a measured value table with *key 3*.

Select a measured value *key 1* from the measured value table and confirm with *key 2*.

The text "AnLo" does not flash anymore and the selected value is indicated.

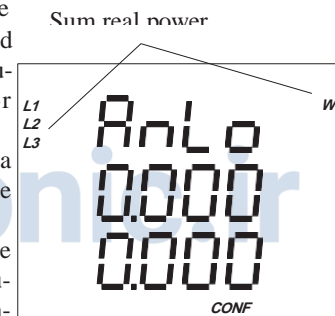


Scale starting value and scale end value

The scale starting value and the scale end value can be set in the indication range of the corresponding measured value

The text "AnLo" flashes. Press *key 1*.

The text **EDIT** appears and the first number of the scale starting value is flashing.


By further pressing of the *key 1*, each cipher of the scale starting value or the scale end value can be selected.

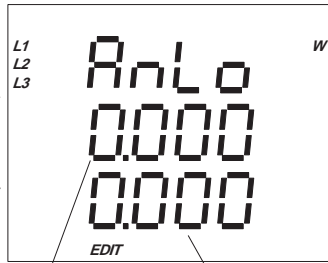

Scale starting value Scale end value

Scale end value = 400kW

With *key 3*, the flashing cipher can be changed. With *key 2* the decimal point is moved.

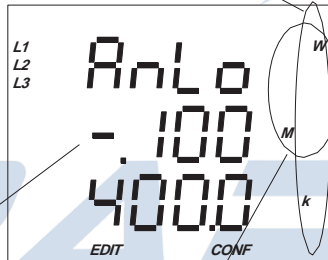

Sign

Scale starting value = - 0.100MW = - 100kW

In the first digit of the scale starting and scale end value, the sign "-" can be set. The sign appears after the number "9".

After selecting the last cipher of the scale end value the text **EDIT** disappears. Now change to the next menu using *key 3*.


Set output range

The output range for the external analogue outputs cannot be programmed, as it is fixed for the used type of the function clamps.

The output range of the internal analogue output of the UMG 503 can be programmed to 0 .. 20mA or 4 .. 20mA. In delivery condition, the analogue output is preset to 4 .. 20mA.

The text "AnLo" is flashing. Pressing *key 2*, the output range is indicated in "mA".

Output range (4..20mA / 0..20mA)

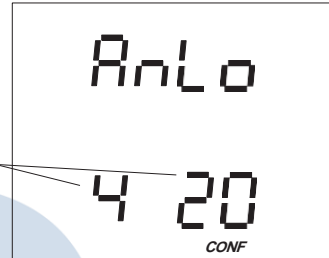

Select the output range with *key 1*. The text **EDIT** appears.

Pressing *key 3* you select the output range from 0 to 20mA.



Barzinelectronic.ir

Programming

The external analogue outputs can only be indicated and programmed, when the protocol "06" (Modbus RTU Master) is set at the UMG 503. The programming of the internal and external analogue output is very similar except some small exceptions.


If you are in the menu **CONF**, you leaf to the indication of the internal analogue output using *key 3*.

With *key 1*, the selected analogue output is confirmed and can be programmed. The text "**AnLo**" is flashing.



If the protocol "06" (Modbus RTU Master) is selected, the first external analogue output "01" is indicated besides the internal analogue output. Otherwise the indication of the menu for the pulse output appears.

To display the other external analogue outputs "02" up to "06", please press *key 2*. Confirm the selected analogue output with *key 1* and program it. The text "**AnLo**" flashes.

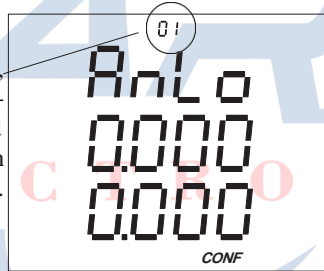

Example: Sum real power

On the internal analogue output of the UMG 503 the sum of real power shall be given out as a current. As a generator shall be switched on sometimes, the delivered real power shall be retrieved as well. Real power supplied is indicated by a "-" before the real power value.


The following settings are required:

- Output range = 0 .. 20mA
- Measured value = Sum real power
- Scale start value = -100kW (Delivery to energy supplier)
- Scale end value = 400kW (Consumption)

With the selected settings, a power range of 100kW + 400kW = 500kW is covered. So is 500kW = 20mA. 1mA corresponds to 500kW/20 = 25kW.

If no real power is supplied or consumed, a current of 4mA is flowing.


If real power is supplied, a current smaller but 4mA is flowing.

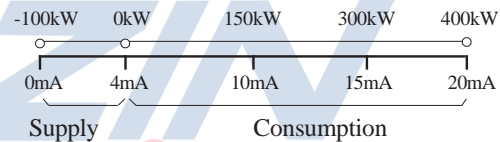

Example: cos(phi)

- output range = 4 .. 20mA
- Scale start value = 0.700inductive
- Scale end value = 0.900capacitive

So the scale range is divided from 0, 400 to 16mA, and cos(phi)1.000 corresponds to 16mA.




Barzinelectronic.ir

Pulse output (Option)

Corresponding to the mechanical energy meters, the UMG 503 has a pulse output as well. At the pulse output, the energy of real and reactive energy meters can be given out. The minimum pulse duration is 50 ms and the maximum frequency is 10Hz.

If more than one pulse per second is given out by the pulse output, the pulse gap is not proportional to the power anymore. If less than one pulse per second is given out by the pulse output, the pulse gap is proportional to the power. The inaccuracy of the pulse gap is ± 10 ms.


Display example for the pulse output:

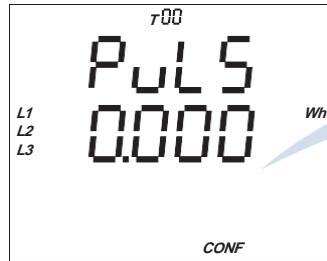

Attention!

When the pulse output is assigned to **real energy meter without reverse running stop**, pulses are given out for consumption and supply.
If the pulse output is assigned to the **reactive energy meter without reverse running stop**, pulses are given out for inductive and capacitive load.

If the measured work exceeds the set pulse valency, so that the maximum for the pulse output is exceeded, the rest of the pulses are saved and given out later. Up to 32000 pulses are saved in the pulse memory.

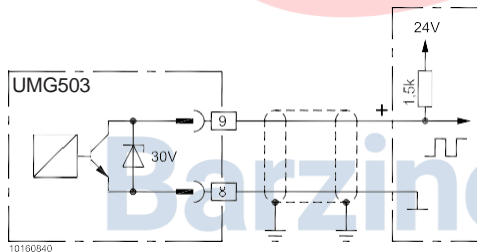

Diagr.: Connection example for pulse output

Assign energy

Various measured values can be assigned to the pulse output of the UMG 503

Without reverse running stop

Consumption T00, T01, T02, T03, T04

Supply T00, T01, T02, T03, T04


Reactive energy

Without reverse running stop

inductive (ind) T00, T01, T02, T03, T04

capacitive (cap) T00, T01, T02, T03, T04


Scroll to the indication of the pulse output in menu CONF with key 3.

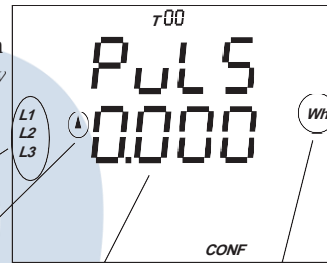

Sum Consumption Pulse valency Real energy
Iw=0,000Wh/Pulse

Confirm the selection using key 1.


The middle indication is flashing and the text EDIT appears.

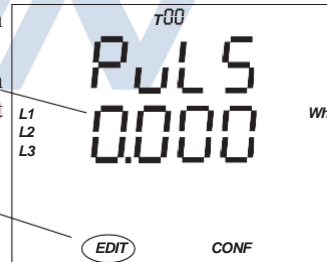

Switch to the measured value selection pressing key 2.

The picture in the margin appears.


With key 2 and key 3 the desired energy can be assigned to the pulse output.

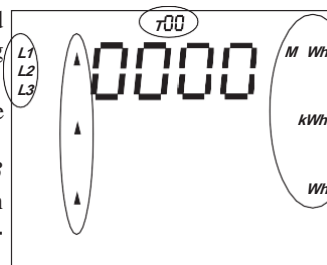

Confirm selection with key 1.

The text EDIT appears. With key 2 change into the edit mode.

The first number is flashing.

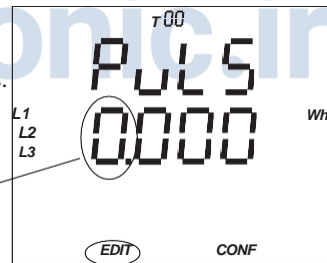

To leave the menu, press key 1 so often until the text EDIT disappears. Pressing key 3 you switch to the next menu.

Set pulse valency

The pulses from the UMG 503 can be assigned to certain work. The energy per pulse is given as pulse valency Iw in Wh/puls.

$$I_w = \text{energy/pulse}$$

The pulse valency must not be confused with a meter constant. The meter constant is given in revolutions per kWh.

The connection between pulse valency and meter constant can be seen in the following correlations:

$$\begin{aligned} \text{meter constant} &= 1/\text{pulse valency} \\ \text{pulse valency} &= 1/\text{meter constant} \end{aligned}$$

Example: Pulse valency

The pulse valency Iw should be destined for a three phase network with connected consumers of maximum P=400kW.

In one hour, a maximum work A of:

$$A = P * t \quad (t = 1\text{Stunde})$$

$$A = 400\text{kW} * 1\text{h}$$

$$A = 400\text{kWh} \text{ can be consumed.}$$

This means a pulse valency Iw of


$$I_w = A/\text{pulse}$$

$$I_w = 400\text{kWh}/\text{pulse}$$

$$I_w = 400\text{kW}$$

This means, that the pulse valency Iw must be set equal or higher than 400kW at the UMG 503.

In the menu **CONF** scroll to indication of the pulse output with key 3.

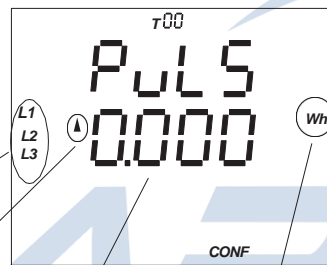

Sum Consumption Pulse valency Real energy
Iw=0,000Wh/pulse

Example: Maximum power

A pulse collecting device can only manage a pulse valency of 9999Wh/pulse.

What power can be transmitted at maximum?

$$I_w = A/\text{pulse}$$

The work A can be calculated with:

$$A = I_w * \text{pulse}$$

$$A = 9999\text{Wh}/\text{pulss} * \text{pulse}$$

$$A = 9999\text{Wh}$$

This means a pulse valency Iw of

$$I_w = A/\text{pulse}$$


$$I_w = 9999\text{Wh}/\text{pulse.}$$

which must be set at the UMG 503.

Confirm selection with key 1.

The middle indication flashes and the text **EDIT** appears.


Press key 1 again, and the first digit flashes.

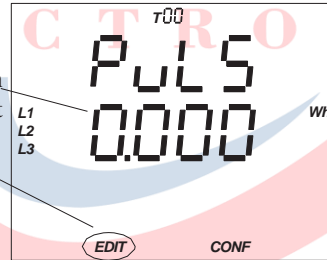

Using key 1, you switch to the next digit.

With key 3 the number will be changed.

With key 2, the decimal point is moved.

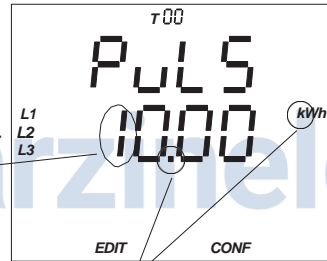

Change with key 2 .

To leave the menu, press key 1 so often until the text **EDIT** disappears. Pressing key 3 you switch to the next menu.

Event memory

The following events can be saved in the event memory with date and time:

- Deletion of the event memory,
- Relay outputs 1A, 1B, 1C on/off,
- Relay outputs 2A, 2B, 2C on/off,
- Auxiliary input on/off,
- Breakdown and return of the auxiliary voltage,
- Breakdown and return of the measurement voltage,
- Reset of real power EMAX,
- Synchronization of the internal clock,
- Tariff change over 1/2.

The event memory can be read out with PC and the programming and reading out software **PSWbasic**.

A breakdown of the measurement voltage is recognized, if:

- the measurement voltage is smaller than 50% of the set primary voltage of the voltage transformer
- and the breakdown lasts longer but 500ms without interruption.

In the device a memory is available, which is divided into the ring buffer and the event memory. The dimension of the event memory can be programmed to determine the number of events, that can be saved in the memory. If the number is set to "0", the whole memory is available for the ring buffer.

If the number of events is changed, the contents of the event memory and ring buffer are deleted.


The dimension of the memory for event memory and ring buffer is depending on the RAM of the UMG 503.

The number of events, that should be saved, can be displayed and changed in the menu **CONF**.

Display

Scroll to the indication of the event memory in menu **CONF** using *key 3*.

In the example, the number is set to 1000.

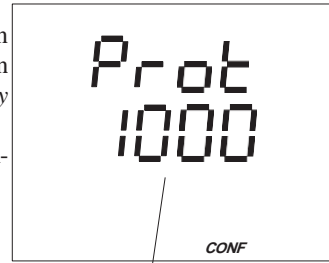


Number of events = 1000

Change

The digit to be changed can now be selected with *key 1* and be changed with *key 3*. The symbol "EDIT" appears and the selected number is flashing.



	Memory	
	128k RAM	512k RAM
Event memory		
Setting range	0 - 2000	0 - 9999
Presettings	0	1000

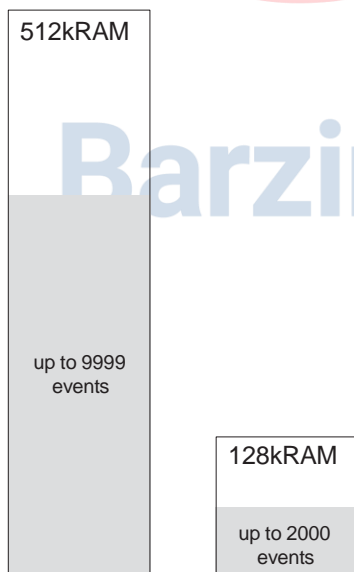

Internal auxiliary input (Option)

The functions

- Reset real power EMAX,
- Tariff change over and
- Synchronizing the internal clock

can be controlled by the internal auxiliary input (option) and external digital inputs of the **WAGO I/O System**.

Changes of condition of each auxiliary input are saved in the event memors with date and time. The storage of the changes of condition cannot be given up!

The assignment of the functions to the inputs is laid out by the ciphers 1 to 6. If the internal auxiliary input (option) and the external digital inputs are not used, "oFF" appears in the indication. The producer's presetting is "oFF".

The following assignment is possible:

Function	oFF	Auxiliary inputs					
		internal				extern.	
		1	2	3	4	5	6
Reset real power EMAX	-	-	-	i	i	e1	e1
Tariff change over	z	i	z	z	z	e2	e2
Synchron. of the int. clock	-	-	i	-	i	i	e3

- = Locked
- z = Via internal time program
- i = Internal auxiliary input
- e1 = external "digital input 1"
- e2 = external "digital input 2"
- e3 = external "digital input 3"

Table: Assignment of auxiliary inputs

Attention!

- & The assignment 5 and 6 cannot be programmed not before the assignment of a serial interface of the UMG 503 to **protocol "06"** (Modbus RTU Master).

Reset of real power EMAX

If an external reset occurs within the 15 minutes period, the EMAX real power is deleted and a new period is started.

If no external reset occurs within the programmed measuring period, the reset is done by the internal clock.

If there are less than 30 seconds between two resets, the measurement period is reset and the EMAX real power is deleted. The former measured value is not used for highest nor lowest value storage and not saved in the ring buffer although programmed.

Tariff change over

The tariff change over can be carried out externally via the auxiliary input or internally via programmed switching times. If the tariff change over is carried out via the auxiliary input, the change over is carried out by the tariff meters Tx1 and Tx2.

If there is no voltage at the auxiliary input, tariff meter **Tx1** is active. If there is voltage at the auxiliary input, tariff meter **Tx2** is active.

Synchronization of the internal clock

Inaccuracies of the internal clock can be corrected via the keys on UMG 503 or via the auxiliary input.

If a voltage is connected to the auxiliary input, the clock within the UMG 503 will be set to the next full hour.

Example 1

If the UMG 503 shows a time of 15:05, and a synchronization is carried out, the time will be corrected to 15:00.

Example 2

If the UMG 503 shows a time of 15:35, and a synchronization is carried out, the time will be corrected to 16:00.

Programming

The external digital inputs can only be indicated and programmed, if the protocol "06" (Modbus RTU Master) is set at the UMG503.

The functions


- Reset real power EMAX,
- Tariff changeover and
- Synchronization of internal clock

can be programmed according to the table "assignment of auxiliary inputs" on page 50.

Select

In menu **CONF** move to the indication of auxiliary input using key 3

Symbol text for the auxiliary input

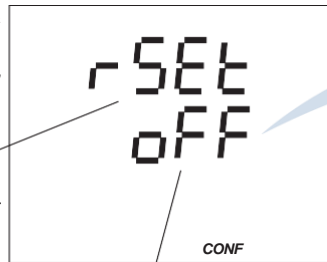

Set function = oFF

The tariff changeover is carried out by the internal time program "z".

Change

Confirm with key 1. The set function appears and can be changed with key 3.

The text **EDIT** appears.




On the internal auxiliary input, only the tariff changeover is active.

If the function for the auxiliary input is set, press key 1 as often as no digit is flashing any longer. **EDIT** disappears.

With key 3 you move to the next menu point. The function is stored.


For devices with the auxiliary voltage of "85 .. 265VAC, 120 .. 370VDC" the auxiliary input is activated with an **alternating voltage** of 85 .. 265VAC .

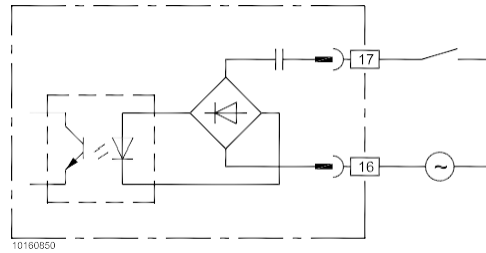

Diagr.: Auxiliary voltage for alternating voltage only

For devices with an auxiliary voltage of "15 .. 55VAC, 20 .. 80VDC" the auxiliary input is activated with an **alternating voltage** of 15 .. 55VAC or a **direct current voltage** of 20 .. 80VDC.

For devices with an auxiliary voltage of "40.. 115VAC, 55.. 165VDC" the auxiliary input is activated with an **alternating voltage** of 40.. 115VAC or a **direct current voltage** of 55.. 165VDC.

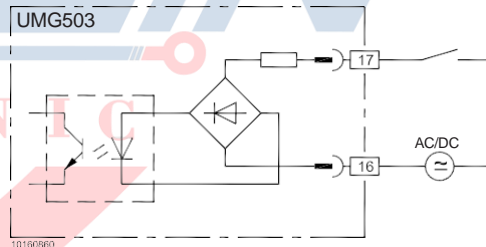

Diagr.: Auxiliary for direct current and alternating voltage

Attention!

The wiring for the auxiliary input must be suitable for voltages up to 300VAC against ground.

Tariff change over

For energy measurement, which should be carried out in certain periods, four tariffs are available:


T01 .. T04 Real energy consumption and real power EMAX,

T11 .. T14 Reactive energy, inductive and

T21 .. T24 Reactive energy, capacitive.

The tariff changeover is carried out internally via a time program or externally via the auxiliary input. To each of the three tariff groups T0x, T1x and T2x 10 changeover times can be assigned.

Work meter Tx0 is not programmable.

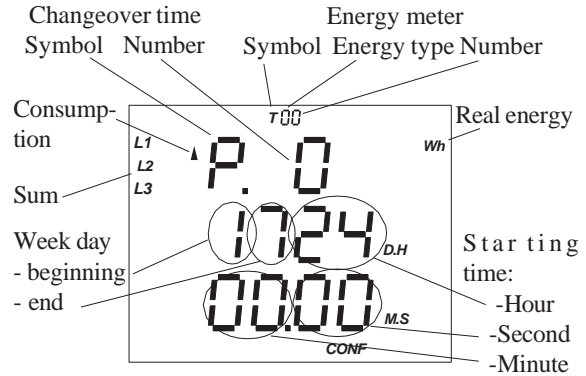

	Energy meter				
	Controlled via				
	Internal time program				
	Auxiliary input				
Real energy					
Without reverse running stop	T50				
Consumption, real power EMAX	T00	T01	T02	T03	T04
Supply	T30				
Reactive energy					
Without reverse running stop	T40				
inductive	T10	T11	T12	T13	T14
capacitive	T20	T21	T22	T23	T24

ELECTRONIC

External tariff change over (option)

The first two work meters can be changed over via the auxiliary input.

When the contact is open, work meter Tx2 is active.

When there is voltage on the auxiliary input, work meter Tx1 is active.

When the auxiliary input is programmed for tariff change over, only the work meters Tx3 and Tx4 can be controlled via the time program.

Attention!

- & The energy meters (Tariffs) cannot be deleted individually. If reactive or real energy is deleted, all corresponding energy meters (tariffs) are deleted.

Internal tariff changeover

The internal tariff changeover is carried out via time programs. When the auxiliary input is programmed for tariff changeover, only the work meters Tx3 und Tx4 can be controlled via time program.

The time program can be programmed by PC or directly at UMG 503.


Assignment of the week days:

- 1 - Monday
- 2 - Tuesday
- 3 - Wednesday
- 4 - Thursday
- 5 - Friday
- 6 - Saturday
- 7 - Sunday

For each three selectable work up to 10 changeover times can be programmed. In the changeover time the starting time is determined for the corresponding work meter in
Week day, beginning/end and
Hours/Minute

If energy measurement (P3) does not follow energy measurement (P1), the changeover time for the end of energy measurement must be laid out to tariff zone Tx0, which is not programmable. In the example, this is changeover time "P2".


If the starting time is set to "24h 00:00", the corresponding energy meter is not activated.

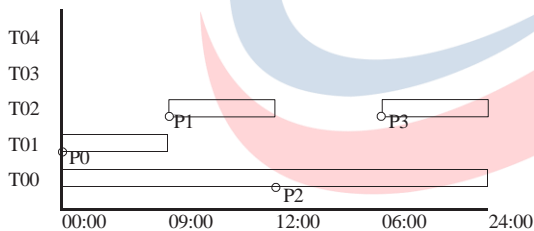

Diagr. Energy meter T0x, real energy consumption

Programming

In menu **CONF** move to the indication of work meters using *key 3*. Here consumed real work was selected.

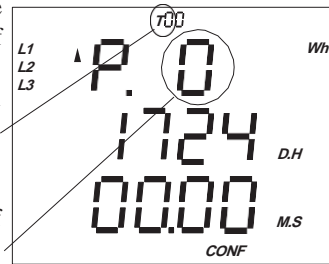


With *key 2* you can select the number (0-9) of the changeover time.

Pressing *key 1*, you can select the number and the text **EDIT** appears.

Changeable Values:

- Week day beginning
- Week day end
- Start time - Hour
- Start time - Minute
- Start time - Second

The selected numbers can be changed using the keys 2 and 3 (see chapter **Edit**).

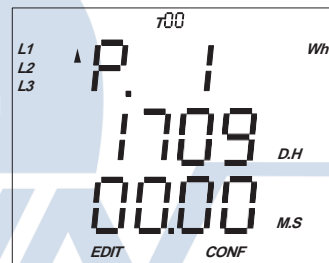

If the changeover times are set, press *key 1* as often as no number is flashing any longer. **EDIT** disappears.

With *key 3* you move to the next menu point. The time program is saved.

Barzinelectronic.ir

Clock

Date and time are needed as time information for highest and lowest value and storage of measured values in the ring buffer.

Date and time are set to the Middle European summer time.

Date and time can be called up and changed in menu **CONF**. Therefore please change to menu **CONF** (See chapter "configuration").


Select

In menu **CONF** move to the indication of date and time with *key 3*.
In this example the date is 10.08.1998 and the time is 14:27:15.




Change

With *key 1* a digit can be selected and changed with *key 3*.
The selected number is flashing.
The text "**EDIT**" appears. Date and time stop.

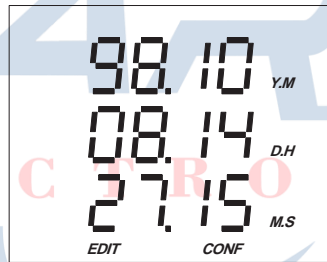

Save

When you have set the actual date and time, please press *key 1* as often as no number is flashing any longer.
Pressing *key 2*, the text **EDIT** disappears and date and time run with their new settings.

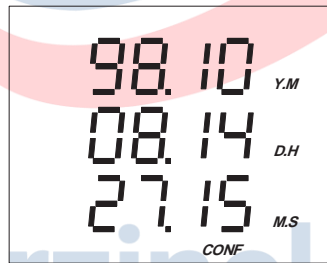

Comment:

The device is Year 2000 concurring according to DP2000-1:1998 of BSI (British Standards Institution).

Summer-/Wintertime changeover

The UMG503 can carry out an automatical summer and wintertime changeover. The following possibilities are available:

- oFF - No summer and winter time changeover.
- on - Your own changeover times
- Eu - Listed changeover times

At the date, which is marked by an arrow downwards, time leaps back from 03:00 to 02:00.

At the date, which is marked by an arrow upwards, time leaps forward from 02:00 to 03:00.

Your own changeover times

If summer-/winter changeover is "on", both changeover times can be entered individually. The changeover times within the list are not valid.

Listed changeover times


In UMG503 a list of changeover times up to year 2020 is deposited. In this list, the last weekend in March and the last weekend in October of each year has been respected. If summer-/wintertime is set to "Eu", the changeover times of this list are used.

Select

In menu **CONF** you can scroll to the display of date and time using *key 3* and then with *key 2* to the summer time changeover.


In this example, the date 25.03.2001 is indicated.

Summer time changeover

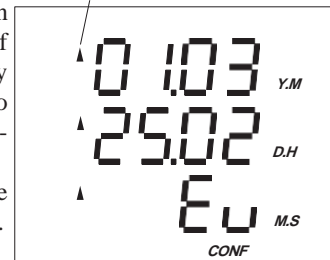

Pressing *key 2* again, the time for winter changeover is indicated.

Winter time changeover

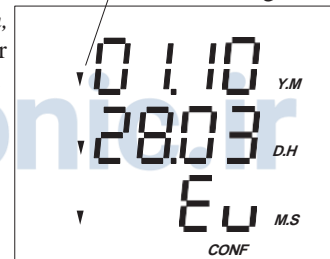

Software Release

The software within the device is improved and expanded continuously. Therefore the condition of software is marked by the software release. The software release cannot be changed.

The software release can be called up in menu **CONF**. Please move to the menu **CONF** (See chapter "configuration").

Select

In menu **CONF** move to the indication of the software release using *key 3*.

In this case the software release is indicated 1.210.




Serial number

Each device has its own 8 digit serial number, which cannot be changed by user.

For certain device variants the user can release functions (options) later on. In that case the serial number is needed in the manufacturing works.

For each device passwords are deposited in the manufacturing company for releasing certain functions (options).

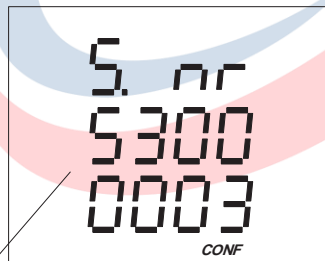

Example:

Serial number = 5300 0003

LCD contrast

The best view for the LCD display is "from below". The contrast of the LCD display can be adapted by the user. The contrast setting is possible in the range of 170 to 230 in 5 point steps.

230 = very light

170 = very dark

In order to reach the optimum contrast for the whole operating temperature range, the **inner temperature** is measured within the device, and the **contrast setting** is corrected automatically. This correction will not be indicated in the *contrast settings* indication.

Selection

In menu **CONF** move to indication of LCD contrast using *key 3*.

In this case the inner temperature is 28°C and the contrast setting is 185.



Contrast setting


Inner temperature

Change

With *key 1* the contrast setting is selected, and the number is flashing. In the indication the text **EDIT** appears.

Increase the contrast setting in 5 point steps using *key 3*.

If 230 is exceeded, the value jumps back to 170.

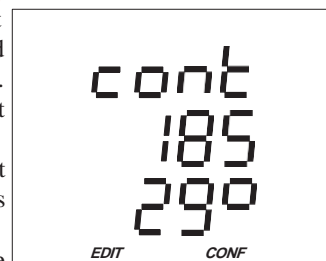

Barzinelectronic.ir

Password


Certain functions are protected by a user password.

There are three types of passwords:


- Clearance password (8-digits)
- User password (4-digits)
- Master password (4-digits)

User password or Master password

Function

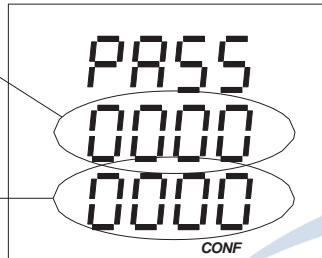

Clearance password

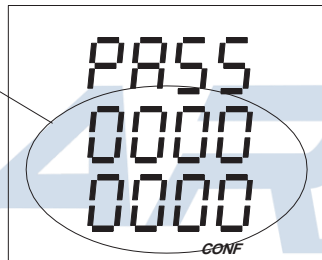

Clearance password

In the various device variants functions are available as an option. These function expansions can be released in the manufacturing works, when ordering.

When later a functional expansion shall be released by the user, a clearance password is needed with 8 digits. This password is deposited in the manufacturing works.

Functional expansions (options), that can be released, are:


- Relay outputs
- Impuls output
- Analogue output
- RS232 interface
- Auxiliary input
- Infra red interface
- Three wire measurement
- PROFIBUS DP (Slave)

To release a functional expansion via the clearance password, please proceed as follows:

Select

In menu **CONF** you move to the indication of the password with *key 3*.

In the basic setting a 0000 0000 is indicated.

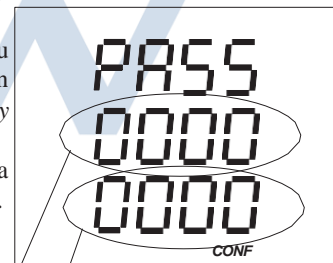


Clearance password "0000 0000"

Input

With *key 1* you select the digit to be changed.

The text **EDIT** appears within the display.

With *key 3* you change the selected digit.

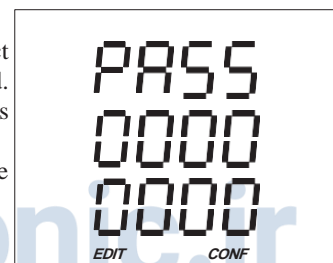

Save

When the password is put in, please confirm *key 1* as often as no digit is flashing any longer and confirm with *key 2*.

When the password is accepted, the password is deleted and 0000 0000 appears in the indication.

Now the released functional expansion can be called up in the programming or configuration menu.

User password

With the four digit user password the user can protect the programmed data and configuration against unintentional change. The programming and configuration will nevertheless be displayed.

In delivery condition the user password is "0000".

If the user cannot remember the user password, it can be changed with the master password only.

The protection of the user password is not available for access to data within the UMG503 via the serial interfaces.

There are four functions for the user password at your disposal:

Function	Description
1	Lock programming and configuration
2	Admit programming and configuration.
3	Input user password
4	Delete user password.

To activate a function, the user password and the desired function must be put in the password menu.

A new user password can be put in, when it was deleted with function 4 by putting in the old user password. A deleted password is indicated with "0000".

Master password

The four digit master password is needed for service purpose only and it is not announced to the user.

Function	Description
0004	Delete user password
3846	software update
7645	Restore delivery conditions of the device.

After calling function "0004" the user password is reset to delivery condition:

User password = "0000".


Now programming can be allowed with user password "0000" and configuration with function "0002".

The input of the master password is done just like the input of the user password.

ELECTRONIC

User password or master password

Function

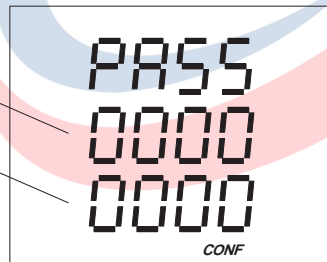

Input

Select the digit to be changed using *key 1*.

The text **EDIT** is flashing in the indication. The selected digit is flashing.

Change the selected number using *key 3*.



Save

When you have put in the password and function, press *key 1* as often as no digit is flashing any longer and confirm with *key 2*.

Transmission protocols

For the connection of the UMG 503 to existing field bus systems, two transmission protocols are at your disposal:

- PROFIBUS DP (Slave)
- Modbus RTU (Master and Slave)

The following protocols can be operate via **RS485** interface:

- off no protocol, interface is not active.
- 1 Reserved
- 2 Modbus RTU (Slave)
- 3 -
- 4 Service protocol
- 5 PROFIBUS DP (Slave), (Option)
- 6 Modbus RTU (Master)*¹⁾

The following protocols can be operate via **RS232** interface:

- off no protocol, interface is not active.
- 1 Reserved
- 2 Modbus RTU (Slave)
- 3 -
- 4 Service protocol
- 5 Modem
- 6 Modbus RTU (Master)*¹⁾


Service protocol

The service protocol is used for calibration and testing purpose in the manufacturing works only.

Modem

For the connection of the UMG 503 to a modem, the protocol "modem" must be set at the UMG 503.

Operation of the UMG 503 via modem is only safe with modems tested by the producer.

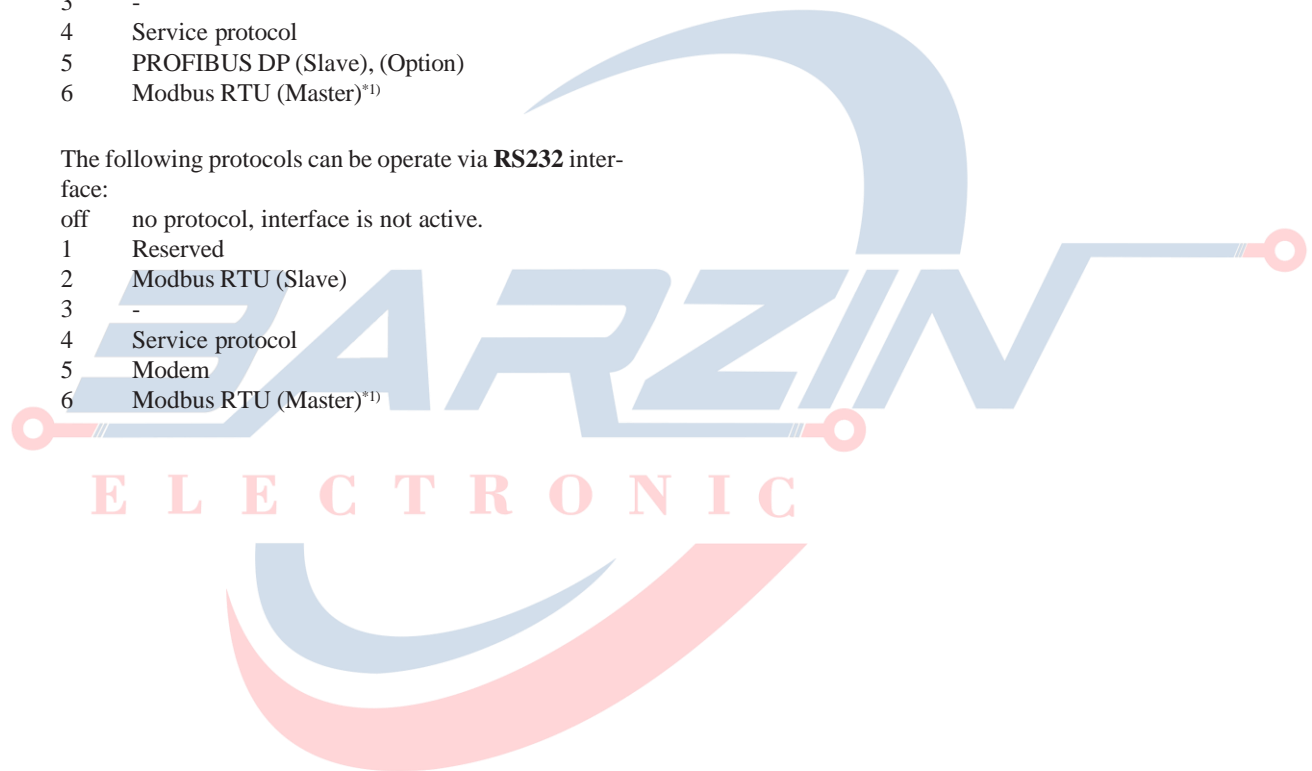

Barzinelectronic.ir

*¹⁾ Protocol 6 can run only on one interface, RS232 or RS485, at the same time.

Modbus RTU

With Modbus RTU protocol all addresses of the following tables can be retrieved.

Table 1a	Measured values (floating point format)
Table 1b	Measured values (floating point format)
Table 2	Energy (floating point format)
Table 3a	Time information for min. and maximum values and system time
Table 3b	Time information for min. and maximum values and time of summer/ winter changeover
Table 4	Avaraging times of mean values
Table 5	Internal control word
Table 6a	Measured values, integer format
Table 6b	Mean values, integer format
Table 6c	Maximum values, integer format
Table 6d	Minimum values, integer format
Table 7	Energy, integer format
Table 8	Scale of measured values, which are called up in integer format
Table 9	In- and outputs
Table 10	EMAX-peak values

Transmission mode

RTU- Mode with CRC-Check.

Transmission parameters

Baud rate

RS232 : 9.6,19.2 and 38.4
RS485 : 9.6,19.2, 38.4, 57.6 and 115.2

Data bits : 8
Parity : none
Stop bits (UMG503) : 2
Stop bits (extern) : 1 or 2

Realized functions

Read Holding Register, function 03
Preset Single Register, function 06
Preset Multiple Registers, function 16

Data formats

The data are in the following formats at your disposal:

char: 1 Byte (0 .. 255)
word: 2 Byte (- 32 768 .. + 32 767)
long: 4 Byte (- 2 147 483 648 .. + 2 147 483 647)

The sequence of the bytes is high before low byte.

Example: Reading of system time

The system time is deposited under address 3000 in table 1. The system time is deposited in 6 bytes with year, months, day, hours, minutes and second in the format "char" = 0..255. The device address of the UMG 503 is determined as address = 01.

The "Query Message" looks as follows:

Description	Hex	Comment
Device address	01	UMG503, Address = 1
Function	03	"Read Holding Register"
Start address Hi	0B	3000dez = 0BB8hex
Start address Lo	B8	
No. of values Hi	00	6dez = 0006hex
no. of values Lo	06	
Error Check	-	

The "Response" of UMG503 can look as follows:

Description	Hex	Comment
Device address	01	UMG503, Address = 1
Function	03	
Byte Counter	06	
Data	00	Year = 00 _{hex} = 00 _{dez} = 2000 _{dez}
Data	0A	Month = 0A _{hex} = 10 _{dez} = Oct.
Data	0C	Day = 0C _{hex} = 12 _{dez}
Data	0F	Hour = 0F _{hex} = 15 _{dez}
Data	1E	Minute = 1E _{hex} = 30 _{dez}
Data	0A	Second = 0A _{hex} = 10 _{dez}
Error Check (CRC)	-	

PROFIBUS DP (Option)

The UMG 503 corresponds to the field bus norm PROFIBUS DP, DIN E 19245 part 3 as a slave device. The device is listed by the PROFIBUS user organisation e.V. with the following entries:

Device description : UMG 503
Ident-Number : 044C HEX
GSD : U503044C.GSD

For transmission of measured values with the PROFIBUS DP protocol integer formats are used by the UMG 503 such as char, int and word.

The UMG503 is suitable for the connection to controls of the type DP-Master Class 1 (DP M1). The maximum baud rate is **1500kbps**.

.& Hints and examples for DP can be found on our homepage.

Configuration of UMG 503

The following requirements and settings are necessary for the operation of UMG 503 at Profibus DP:


- A RS485 interface,
- A device address,
- Protocol "05" = PROFIBUS DP

The baud rate is determined automatically between the master (SPS) and slave (UMG503). The setting of the device address is described in chapter "device address".

In menu **CONF** scroll to the indication of **RS485 interface** with key 3.

Manufacturer's settings:

Baud rate = 38,4kbps
Protocol = 02

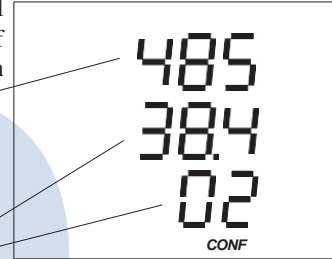


Protocol

Conf ir ming key 1 twice, the lower indication is flashing.

The text **EDIT** appears.

The protocol can now be changed.

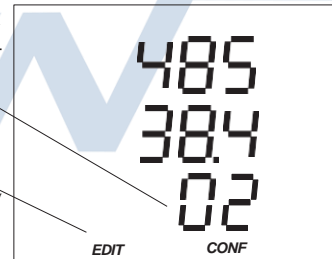

Using key 3 you select **Protocol "05"**.

If protocol "05" is entered, the baudrate is set to "Auto" automatically and cannot be changed.



Pressing key 1 again, the text **EDIT** disappears.



Profibus DP V0

In Profibus version "DP V0" only a cyclic data transmission is possible between master PLC and slave UMG503. The transmission data have been determined in the GSD file and the PLC has to request this data set from UMG503 (Slave).

Profibus DP M1

In Profibus version (DP M1) even none cyclical data can be retrieved additionally to the cyclic data. Please note, that calling none cyclical data (DP M1) takes a longer time than using cyclical communication services (DP V0).

The functional expansion for none cyclical data transmission is specified according to the technical directive 2.082.

Higher protocol

Dependant on the format of the measured values to be transmitted, **up to 21 measured values** can be transmitted from UMG 503 to PLC by PROFIBUS DP protocol **cyclically**.


To transmit more measured values from UMG 503 than determined in the GSD file, you must use a GSD file, which determines the values to be transmitted during operation.

With the program **PSWbasic**, which belongs to the contents of delivery, a GSD file is created. In this GSD-file a 32 words large output range and a 28 words large input range is determined.

In the output range, the PLC can save the desired measured value addresses in the control words 4 to 32 and in the input range, the corresponding measured values can be retrieved in the control words 2 to 28. A control word consists of 2 Byte.

For controlling purpose, a number is sent by each request for new measured values. The requested measured values are written to the input range, when the PLC replies the request number.

Please note, that the request number must be written to the measured value addresses into the output range before, as thereby it is ensured, that the read measured values correspond to the new measured value addresses.

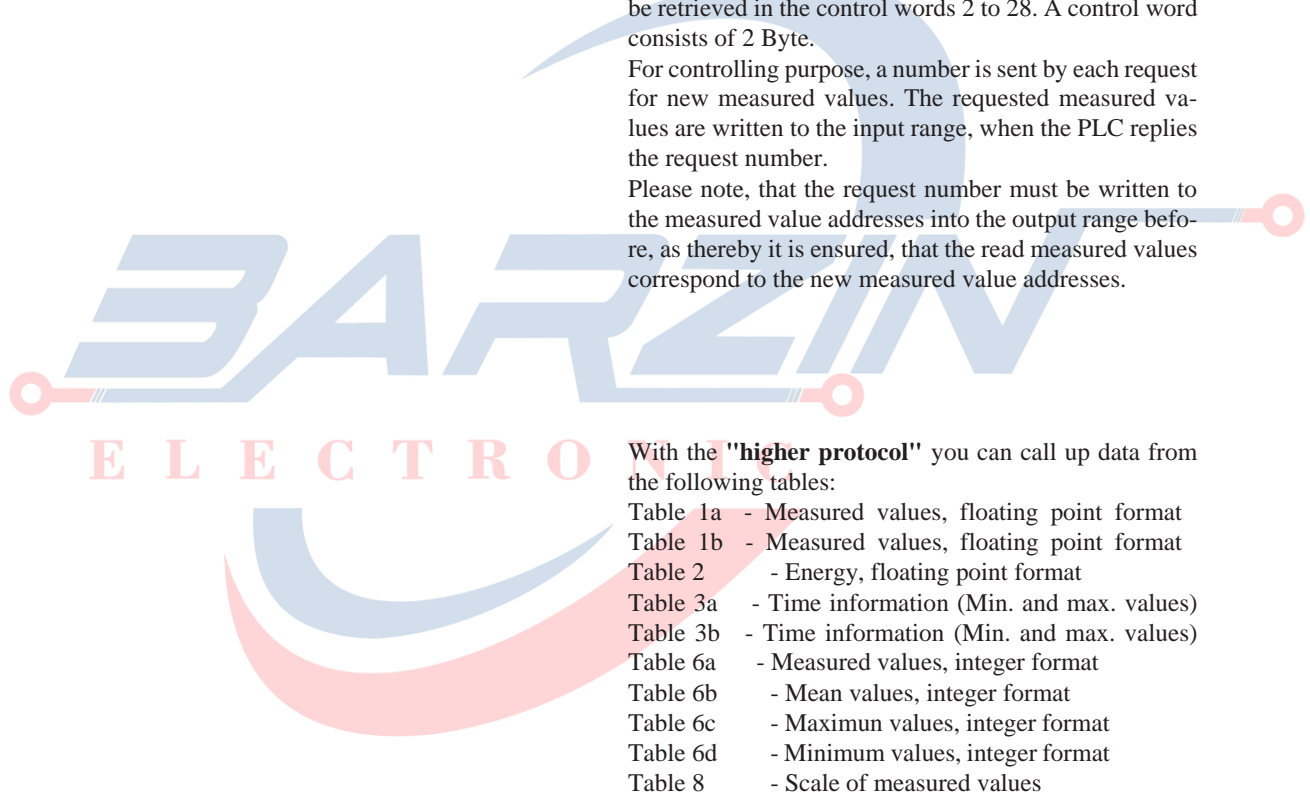

With the "**higher protocol**" you can call up data from the following tables:


- Table 1a - Measured values, floating point format
- Table 1b - Measured values, floating point format
- Table 2 - Energy, floating point format
- Table 3a - Time information (Min. and max. values)
- Table 3b - Time information (Min. and max. values)
- Table 6a - Measured values, integer format
- Table 6b - Mean values, integer format
- Table 6c - Maximum values, integer format
- Table 6d - Minimum values, integer format
- Table 8 - Scale of measured values

The measured values from table 4 are scaled by the addresses in table 3.

The scaling of the measured values depends on the ratios for current and voltage transformer set at UMG 503 and must be read by changing the ratios only.

The output and input range can be read out and overwritten by the control words 1 and 2 from PLC.

With the "Remote bits" an output is selected for controlling by the PLC.

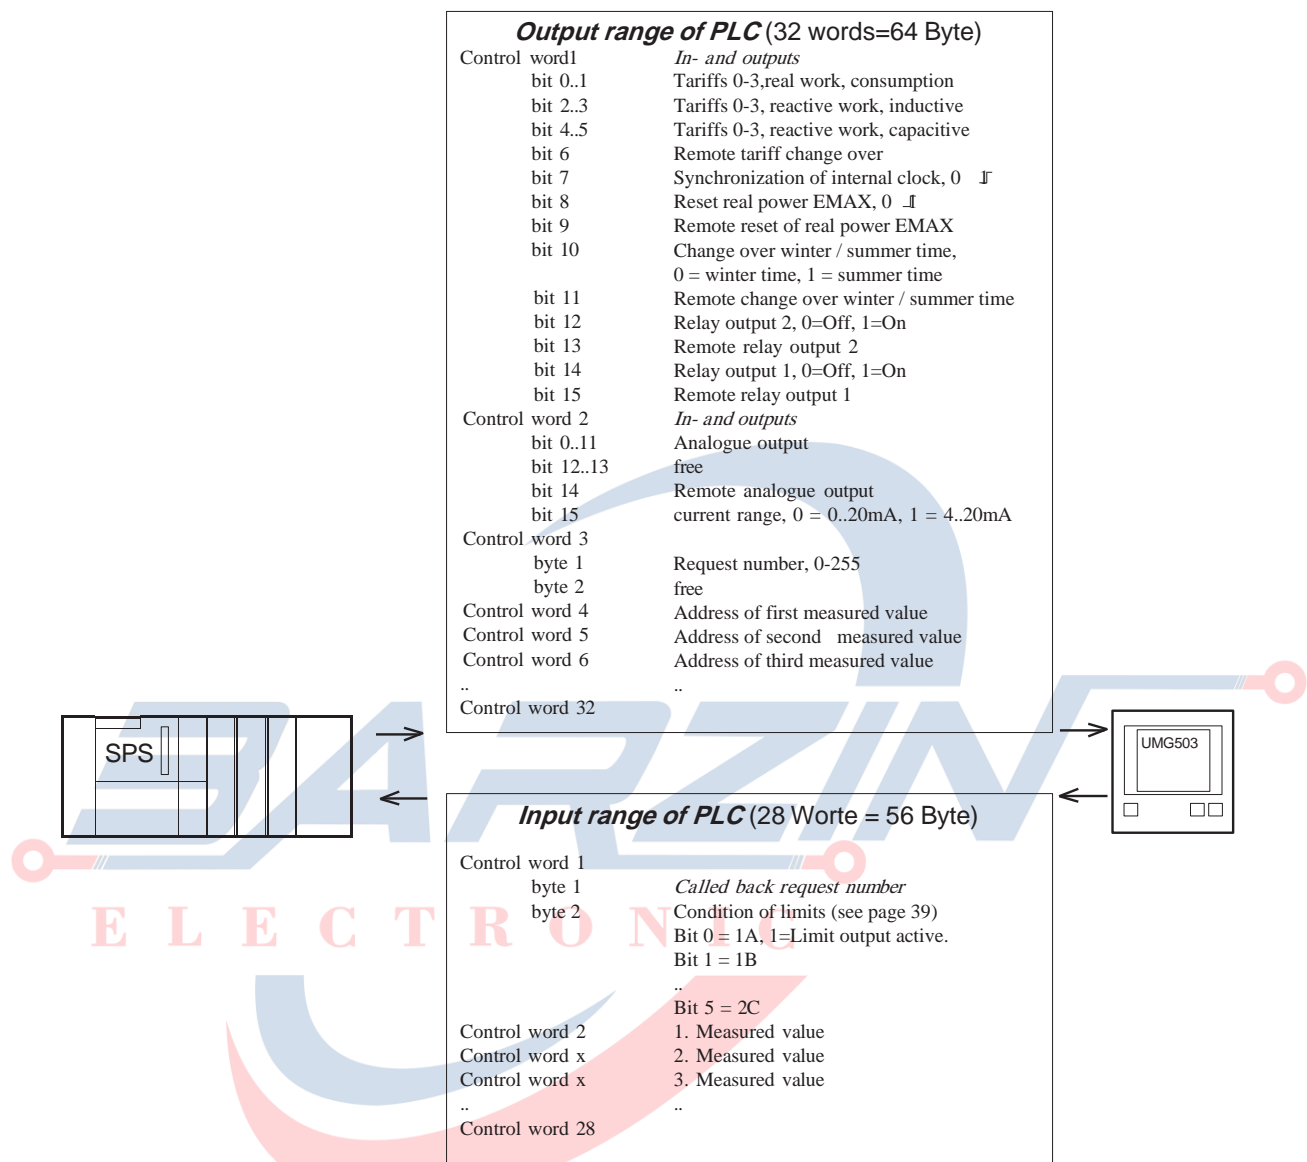

Diagr. Data transmission with higher protocol

Example: Measured values in integer format

The UMG503 and PLC are set for "Higher protocol". There is a current transformer of 500A/5A and a voltage transformer of 400V/400V.

The currents in L1, L2, L3 and the sum of real power should be transmitted in integer format.

Read out scale

The scale of the measured values depends on the set current and voltage transformer ratios, which are set at UMG 503, and must only be read after a change of those ratios

The scales of the measured values can be found in table 8.

Scale	Address
Currents	9100
Power	9102

Within the PLC the output range with control words (4-5) must be overwritten for the scale and afterwards with the control word (3) for the request number.

Control word 1 = In- and outputs "0000" (Example)

Control word 2 = In- and outputs "0000" (Example)

Control word 4 = Scale "9100" (Currents)

Control word 5 = Scale "9102" (Power)

Control word 3 = Request number "1" (Example)

Control word 6..32 free

After that, the following scales are available in the input range of PLC:

Control word	Measured value	Contents
1	Request number	1
2	Scale, Currents	0 (*1)
3	Scale, Powers	3 (*1000)
4..28	not defined	

Read measured values

The measured values in integer format can be found in table 6. The following addresses can be found in table 6.

Measured value	Address
Current L1	8000 A
Current L2	8001 A
Current L3	8002 A
Real power, Sum	8024 W

Control word 1 = In- and outputs "0000" (Example)

Control word 2 = In- and outputs "0000" (Example)

Control word 4 = Measured value address "8000" (Current in L1)

Control word 5 = Measured value address "8001" (Current in L2)

Control word 6 = Measured value address "8002" (Current in L3)

Control word 7 = Measured value address "8024" (Real power sum.)

Control word 3 = Request number "2" (Example)

Control words 8..32 free

After that the following measured values are available in the input range of the PLC:

Control word	Measured value	Contents (Example)
1	Request number	2
2	Current L1	100 (A)
3	Current L2	120 (A)
4	Current L3	140 (A)
5	Real power, Sum.	82800 (W)
6..28	not defined	

Example: Measured values in floating point format

The UMG 503 and the PLC are suited for "higher protocol". A current transformer of 200A/5A and a voltage transformer of 400V/400V have been set.

Real energy consumption and reactive power inductive should be transmitted in floating point format and voltage in L1, L2 and L3 against earth in integer format.

Read scale

The scale of the measured values depends on the set current and voltage transformer ratios only and must only be read after changing those ratios.

The scale for voltage measured values can be found in table 8.

Scale	Address
Voltage	9101

Within the PLC, the output range must be overwritten with control word 4 for the scales of voltage and with control word (3) for the request number.

Control word 1 = In- and outputs "0000" (Example)

Control word 2 = In- and outputs "0000" (Example)

Control word 4 = Scale "9101" (Voltage)

Control word 3 = Request number "3" (Example)

Control words 5..32 free

After that, the following scales are available for voltage in the input range of PLC:

Control word	Measured value	Contents
1	Request number	3
2	Scale, voltage0	(*1)
3..28	not defined	

Read measured values

The measured values in floating point format can be found in table 1. The following addresses can be read in table 1:

Measured value	Address	Contents (Example)
Voltage L1-N	1012	230 (V)
Voltage L2-N	1017	225 (V)
Voltage L3-N	1014	235 (V)
Real energy cons.	2000	60444 (Wh)
React. energy ind.	2020	23501 (varh)

In the PLC the output range must be overwritten with the control words (4-7) for the measured value addresses and afterwards with control word (3) for the request number.

Control word 1 = In- and outputs "0000" (Example)

Control word 2 = In- and outputs "0000" (Example)

Control word 4 = Measured value address "1012" (Voltage L1-N)

Control word 5 = Measured value address "1013" (Voltage L2-N)

Control word 6 = Measured value address "1014" (Voltage L3-N)

Control word 7 = Measured value address "2000" (Real energy, consumption)

Control word 8..10 = free

Control word 11 = Measured value address "2020" (Reactive energy ind.)

Control word 12..14 = free

Control word 3 = request number "4" (Example)

Control words 15..32 = free

After that the following measured values are available in the input range of the PLC:

Control word	Measured value	Contents (Example)
1	Request number	4
2	Voltage L1-N	230 (V)
3	Voltage L2-N	225 (V)
4	Voltage L3-N	235 (V)
5..8	Real energy cons.	604,44(Wh)
9..12	Reac. energy ind.	235,01(varh)
13..28	not defined	

The voltages each are transmitted in one word (2 Byte) and real and reactive energy each in 4 words (8Byte). Therefore real and reactive energy need 4 control words each and the measured value of reactive energy is deposited from control word 9.

GSD file

The GSD file is a file specific for the device, in which the transmission parameters and the kind of measuring data between PROFIBUS Master and the PROFIBUS Slave are laid. The PROFIBUS Slave here is the UMG 503 and the PROFIBUS Master is a PLC, for instance.

Depending on the format of the values to be transmitted, at minimum 7 measured values and **at maximum 21 measured values** can be transmitted.


If more measured values are required, a GSD file must be created, that determines a 32 word large output range and a 28 words large input range. In the output range, the PLC can deposit the desired measured value addresses and retrieve the corresponding measured values within the input range. If the addresses in the output range are not changed further, the UMG 503 delivers new measured values continuously to the input range of PLC.

This method of retrieving measuring data is depicted as "higher protocol" in the description.

Create a GSD file

The program PSW 503 belongs to the contents of delivery for the device and includes the module "PROFIBUS configuration". Measured values and in- and outputs can be selected for transmission to PLC with that module.

As a result of the configuration, a GSD file for the PLC is created.

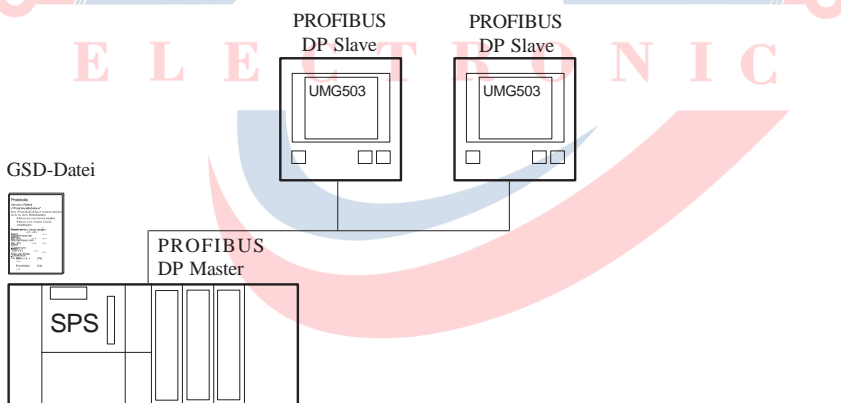

Diagr. Two UMG 503 and one PLC at PROFIBUS DP

To bind in a GSD file

The binding of the GSD file in a program is carried out by the customer. It is very different from application to application.

Instructions for binding in a UMG 503 in a Siemens SPS S7 (CPU 315-2DP) can be downloaded from the internet page "<http://www.janitza.de>".


Serial interfaces

The UMG503 is available with the serial interfaces RS232, RS485 and Infrared. In the basic edition, at least one interface RS485 or RS232 is at your disposal. The interfaces can be used at the same time, even with different protocols. Please note, that not all combinations of interfaces and protocols are allowed.


UMG503 - RS485/RS232 - PC

For the connection to PC an interface converter from RS485 to RS232 must be used.

The maximum distance for RS485 is 1200m and for RS232 about 5m.

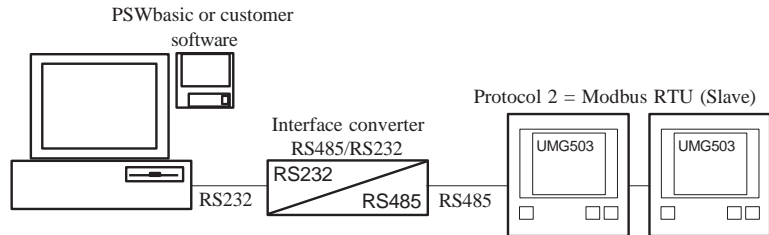


UMG503 - Modem - PC

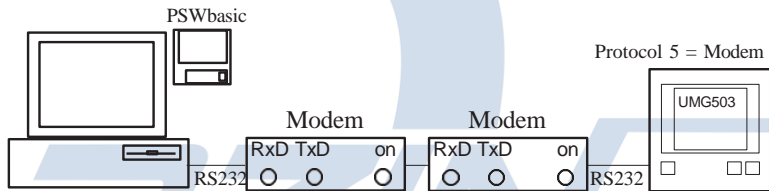

UMG503 - RS232- PC

Direct connection to PC via **zero modem cable**.


The maximum distance between PC and UMG503 can be 5m at maximum.

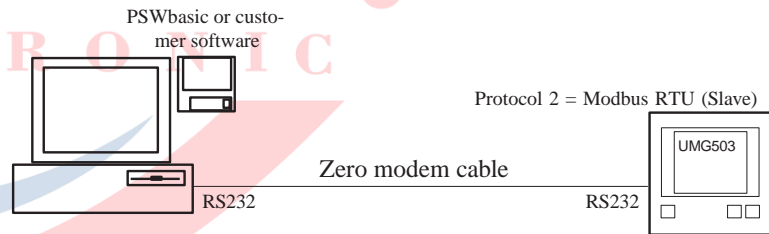

UMG503 - RS485 - PLC



UMG503 - RS485 - WAGO I/O

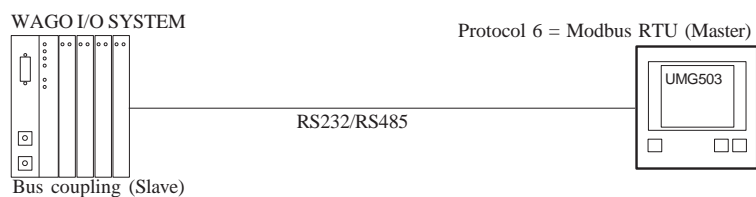

Tables

Overview

Table 1a	Measured values, floating point format
Table 1b	Measured values, floating point format
Table 2	Energy, floating point format
Table 3a	Time information for minimum and maximum values and system time
Table 3b	Time information for minimum and maximum values and summer/winter changeover
Table 4	Averaging time of mean values
Table 5	Internal control word
Table 6a	Measured values, integer format
Table 6b	Mean values, integer format
Table 6c	Maximum values, integer format
Table 6d	Minimum values, integer format
Table 7	Energy, integer format
Table 8	Scale of measured values, which are retrieved in integer format.
Table 9	Inputs and outputs
Table 10	EMAX peak values

Data formats

The data are available in the following formats:

char	: 1 Byte (0 .. 255)
word	: 2 Byte (- 32 768 .. + 32 767)
long	: 4 Byte (- 2 147 483 648 .. + 2 147 483 647)
float	: 4 Byte (IEEE754)
double	: 8 Byte (IEEE754)

The sequence of the bytes is high before low byte.

Barzinelectronic.ir

Table 1a

Measured values in floating point format

Description	Index DPV1	Address _(dez) DPV0/MODB.	r/w ¹⁾	Type	Unit	Comment
Current	64	1000	r	meas. val. ²⁾	A	L1, L2, L3
Voltage N-L	65	1012	r	meas. val. ²⁾	V	L1, L2, L3
Voltage L-L	66	1024	r	meas. val. ²⁾	V	L1-L2, L2-L3, L1-L3
Real power	67	1036	r	meas. val. ²⁾	W	Sign -=Supply, +=Consumption
Apparent power	68	1048	r	meas. val. ²⁾	VA	L1, L2, L3
Reactive power	69	1060	r	meas. val. ²⁾	var	Sign -=cap, +=ind
cos(phi)	70	1072	r	meas. val. ²⁾		Sign -=cap, +=ind
Frequency	71	1084	r	meas. val. ²⁾	Hz	L1, L2, L3
Real power, sum	72	1096	r	sum ³⁾	W	Sign -=Supply, +=Consumption
Apparent power, sum		1100	r	sum ³⁾	VA	
Reactive power, sum		1104	r	sum ³⁾	var	Sign -=cap, +=ind
cos(phi), sum	73	1108	r	sum ³⁾		Sign -=cap, +=ind
Total harmonic distortion _U						
Measured value		1112	r	float[3]	%	L1, L2, L3
Maximum value		1115	r	float[3]	%	L1, L2, L3
Total harmonic distortion _I						
Measured value		1118	r	float[3]	%	L1, L2, L3
	74	1120				
Maximum value		1121	r	float[3]	%	L1, L2, L3
Partial harmonics _U						
Maximum value		1124	r	float[20][3]	V	Partial harmonics 1-20; L1, L2, L3
	75	1132				
				
	79	1180				
Partial harmonics _U						
Measured value		1184	r	float[20][3]	V	Partial harmonics 1-20; L1, L2, L3
	80	1192				
				
	84	1240				
Partial harmonic _I						
Maximum value		1244	r	float[20][3]	A	Partial harmonics 1-20; L1, L2, L3
	85	1252				
				
	89	1300				
Partial harmonic _I						
Measured value		1304	r	float[20][3]	A	Partial harmonic 1-20; L1, L2, L3
	90	1312				
				
	94	1360				
Real power EMAX		1365	r	float	W	Sign -=Supply, +=Consumption
	95	1372				
	96	1384				

1) r/w = read/write

2) measured value {float: measured value[L1-L3], mean value[L1-L3], lowest value[L1-L3], peak value[L1-L3]}

3) sum {float: measured value, mean value, lowest value, peak value}

Table 1b*Measured values in floating point format*

Description	Index DPV1	Address ^(dez) DPV0/MODB.	r/w ¹⁾	Type	Unit	Comment
Total harmonic distortion _U Mean value		1390	r	float[3]	%	L1, L2, L3
Total harmonic distortion _I Mean value		1393	r	float[3]	%	L1, L2, L3
	97	1396				
Partial harmonics _U Minimum value		1400	r	float[20][3]	V	Partial harmonic 1-20; L1, L2, L3
	98	1408				
				
	102	1456				
Partial harmonics _I Minimum value		1460	r	float[20][3]	A	Partial harmonic 1-20; L1, L2, L3
	103	1468				
				
	107	1516				
Partial harmonics _U Mean value		1520	r	float[20][3]	V	Partial harmonic 1-20; L1, L2, L3
	108	1528				
				
	112	1576				
Partial harmonics _I Mean value		1580	r	float[20][3]	A	Partial harmonic 1-20; L1, L2, L3
	113	1588				
				
	117	1636				
Total harmonic distortion _U Minimum value		1640	r	float[3]	%	L1, L2, L3
Total harmonic distortion _I Minimum value		1643	r	float[3]	%	L1, L2, L3
Current, N		1646	r	float	A	
	118	1648				
	119	1660				
Maximum of current mean value		1663	r	float[3]	A	L1, L2, L3

Table 2*Energy in floating point format*

Description	Index DPV1	Address _(dez) DPV0/MODB.	r/w ¹⁾	Type	Unit	Comment
Real energy, Consumption	220	2000	r	double[4]	Wh	Energy, Tariff1, Tariff2, Tariff3, Tariff4
Reactive energy, inductive	221	2010	r	double[4]	varh	Energy, Tariff1, Tariff2, Tariff3, Tariff4
Reactive energy, capacitive	222	2020	r	double[4]	varh	Energy, Tariff1, Tariff2, Tariff3, Tariff4
Real energy, supply	223	2030	r	double[4]	Wh	Energy, Tariff1, Tariff2, Tariff3, Tariff4
Reactive energy without rev. running stop	224	2040	r	double[4]	varh	Energy, Tariff1, Tariff2, Tariff3, Tariff4
Real energy without rev. running stop	225	2050	r	double[4]	Wh	Energy, Tariff1, Tariff2, Tariff3, Tariff4

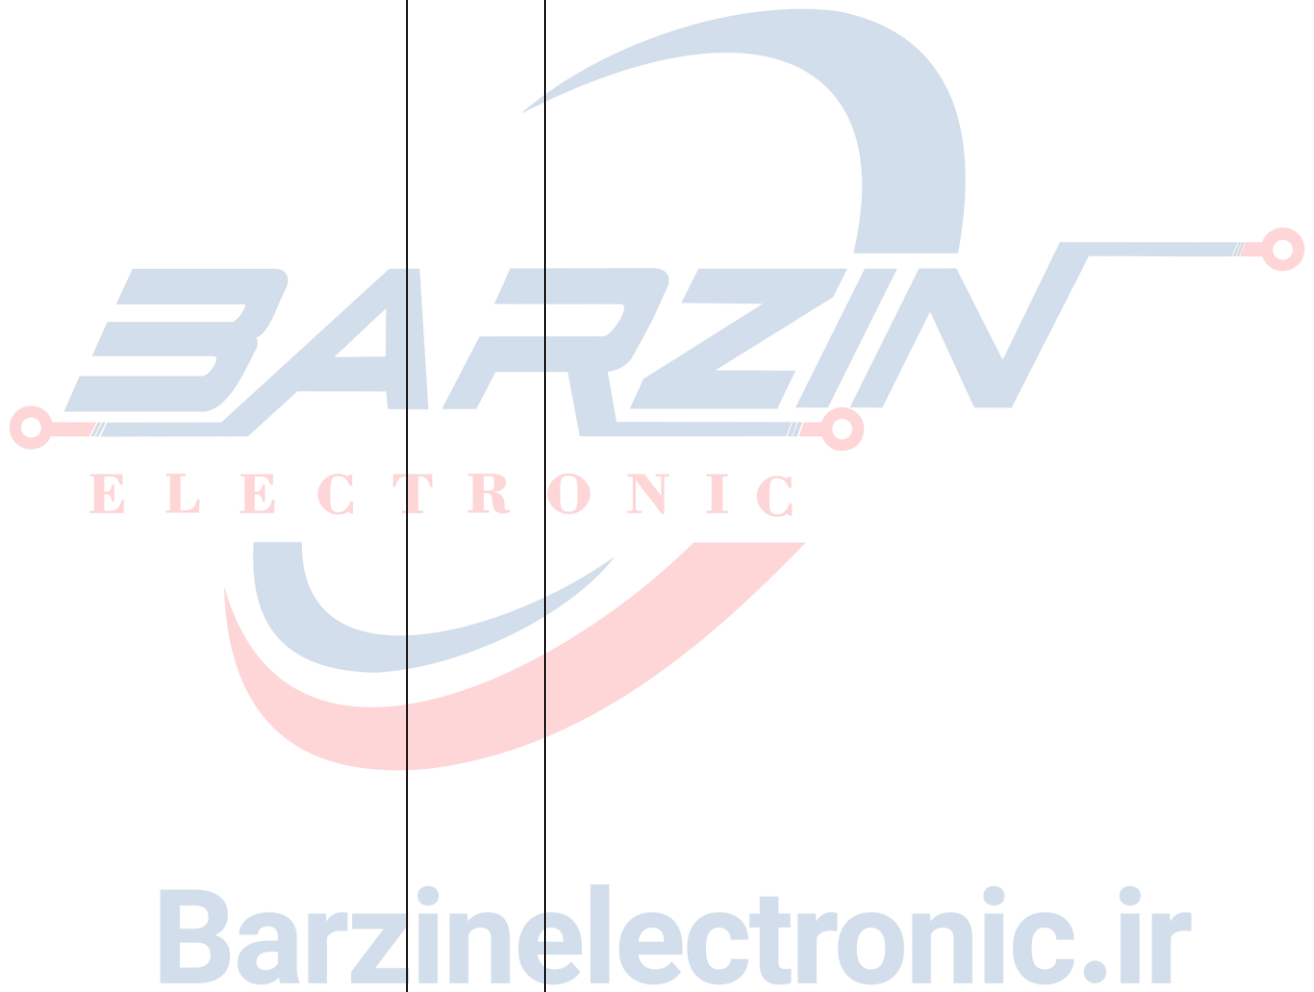


Table 3a

Time information for minimum and maximum values and system time

Description	Index DPV1	Address(dez) DPV0/MODB.	Type	Comment
System time	230	3000	char	System time
Current L1, L2, L3	128	3001	char[2][3]	Min. value, Max. value; L1, L2, L3
Voltage N-L	129	3007	char[2][3]	Min. value, Max. value; L1, L2, L3
Voltage L-L	130	3013	char[2][3]	Min. value, Max. value; L1, L2, L3
Real power	131	3019	char[2][3]	Min. value, Max. value; L1, L2, L3
Apparent power	132	3025	char[2][3]	Min. value, Max. value; L1, L2, L3
Reactive power	133	3031	char[2][3]	Min. value, Max. value; L1, L2, L3
cos(phi)	134	3037	char[2][3]	Min. value, Max. value; L1, L2, L3
Frequency	135	3043	char[2][3]	Min. value, Max. value; L1, L2, L3
Real power, sum	136	3049	char[2]	Min. value, Max. value;
Apparent power, sum		3051	char[2]	Min. value, Max. value;
Reactive power, sum		3053	char[2]	Min. value, Max. value;
cos(phi), sum	137	3055	char[2]	Min. value, Max. value;
Total harmonic distortion _U				
Maximum value		3057	char[3]	L1, L2, L3
Total harmonic distortion _I				
Maximum value		3060	char[3]	L1, L2, L3
	138	3061		
Partial harmonics _U				
Maximum value		3063	char[20][3]	Partial harmonics 1-20; L1, L2, L3
	139	3067		
		
	148	3121		
Partial harmonics _I				
Maximum value		3123	char[20][3]	Partial harmonics 1-20; L1, L2, L3
	149	3127		
		
	158	3181		
free	159	3187		
free		3188		
free		3189		
Real energy, starting time consumption		3190	char	Starting time of energy measurement
Reactive energy, starting time inductive		3191	char	Starting time of energy measurement
Reactive energy, starting time capacitive		3192	char	Starting time of energy measurement
Real energy, starting time supply	160	3193	char	Starting time of energy measurement
Reactive energy, starting time without reverse running stop		3194	char	Starting time of energy measurement
Real energy, starting time without reverse running stop		3195	char	Starting time of energy measurement
free		3196		
..		..		
free		3198		
free	161	3199		

Format of time information: {char: year, month, day, hour, minute, second}

Year: 00 .. 99 = 2000 .. 2099

Table 3b

Time information for minimum and maximum values and system time

Description	Index DPV1	Address(dez) DPV0/MODB.	Type	Comment
free	162	3205		
Partial harmonics _U				
Minimum value		3210	char[20][3]	Partial harmonics 1-20; L1, L2, L3
	163	3211		
		
	172	3265		
Partial harmonics _U				
Minimum value		3270	char[20][3]	Partial harmonic 1-20; L1, L2, L3
	173	3271		
		
	182	3325		
free	183	3331		
free		3332		
Total harmonic distortion _I				
Minimum value		3333	char[3]	L1, L2, L3
Current, N		3336	char[2]	Minimum value, Maximum value
	184	3337		
Real power EMAX		3338	char[2]	Minimum value, maximum value
Current mean value (L1, L2, L3)		3340	char[2][3]	Min. and maximum value; L1, L2, L3
Time changeover		3343	char[2]	Summer time, winter time

E L E C T R O N I C

Barzinelectronic.ir

Table 4

Averaging times of the mean values.

The averaging times cannot be retrieved via Profibus DP V1.

Description	Index DPV1	Address _(dez) DPV0/MOVB.	Type	Comment
Current		4000	char[3]	L1, L2, L3
Voltage N-L		4003	char[3]	L1, L2, L3
Voltage L-L		4006	char[3]	L1-L2, L2-L3, L1-L3
Real power		4009	char[3]	L1, L2, L3
Apparent power		4012	char[3]	L1, L2, L3
Reactive power		4015	char[3]	L1, L2, L3
cos(phi)		4018	char[3]	L1, L2, L3
Frequency		4021	char[3]	L1, L2, L3
Real power, sum		4024	char	
Real power EMAX		4156	char	5=5, 6=10, 7=15, 8=30, 9=60Minutes
Apparent power, sum		4025	char	
Reactive power, sum		4026	char	
cos(phi), sum		4027	char	
Current, N		4028	char	
Total harmonic distortion _U		4150	char[3]	L1, L2, L3
Total harmonic distortion _I		4153	char[3]	L1, L2, L3
Partial harmonics _U		4030	char[20][3]	Partial harmonics 1-20; L1, L2, L3
Partial harmonics _I		4090	char[20][3]	Partial harmonics 1-20; L1, L2, L3

Format of time information: {char: Year, month, day, hour, minute, second} Year: 00 .. 99 = 2000 .. 2099

Table 5

Internal control word

Description	Address _(dez)	r/w ¹⁾	Format	Comment
Internal control word	5000	r/w	char[17]	Byte 0 Only internal use. Byte 1 Only internal use. Byte 2 Delete minimum value. (Byte > 0) Byte 3 Delete maximum value. (Byte > 0) Byte 4 Only internal use. Byte 5 Only internal use. Byte 6 Delete real energy. (Byte > 0) Byte 7 Delete reactive energy. (Byte > 0) Byte 8 Only internal use. Byte 9 Only internal use. Byte 10 Only internal use. Byte 11 Only internal use. Byte 12 Only internal use. Byte 13 Only internal use. Byte 14 Only internal use. Byte 15 Only internal use. Byte 16 Only internal use.

To change a byte of the "internal control word", the "internal control word" must be read, and the changed word must be written back to address 5000.

Attention!

If the bytes with the comment **"Only internal use"** are changed, this may lead to a faulty operation of UMG 503!

¹⁾ r/w = read/write

Table 6a*Measured values in integer format*

Measured values	Index DPV1	Address _(dez) DPV0/MODB.	r/w ¹⁾	Format	Unit	Comment
Current	4	8000	r	word[3]	A	L1, L2, L3
Voltage		8003	r	word[3]	V	N-L1, N-L2, N-L3
Voltage		8006	r	word[3]	V	L1-L2, L2-L3, L1-L3
Real power ²⁾		8009	r	word[3]	W	L1, L2, L3
Apparent power	5	8012	r	word[3]	VA	L1, L2, L3
Reactive power ³⁾		8015	r	word[3]	var	L1, L2, L3
cos(phi) ³⁾		8018	r	word[3]		L1, L2, L3
Frequency		8021	r	word[3]	Hz	L1, L2, L3
Real power, sum ²⁾	6	8024	r	word	W	
Apparent power, sum		8025	r	word	VA	
Reactive power, sum ³⁾		8026	r	word	var	
cos(phi), sum ³⁾		8027	r	word		
Current, N		8028	r	word	A	Current in neutral conductor
Partial harmonics _U	7	8030	r	word[20][3]	V	Partial harm. 1-20; L1, L2, L3
	..	8036				
	11	8084				
Partial harmonics _I	12	8090	r	word[20][3]	A	Partial harm. 1-20; L1, L2, L3
	12	8096				
	..	8144				
	16	8150	r	word[3]	%	L1, L2, L3
Total harmonic distortion_U		8153	r	word[3]	%	L1, L2, L3
Total harmonic distortion_I		8156	r	word	W	
Real power EMAX, sum ²⁾	17					

Table 6b*Mean values in integer format*

Mean values	Index	Address _(dez)	r/w ¹⁾	Format	Unit	Comment
Current		8157	r	word[3]	A	L1, L2, L3
Voltage		8160	r	word[3]	V	N-L1, N-L2, N-L3
Voltage		8163	r	word[3]	V	L1-L2, L2-L3, L1-L3
Real power ²⁾		8166	r	word[3]	W	L1, L2, L3
	18	8168				
Apparent power		8169	r	word[3]	VA	L1, L2, L3
Reactive power ³⁾		8172	r	word[3]	var	L1, L2, L3
cos(phi) ³⁾		8175	r	word[3]		L1, L2, L3
Frequency		8178	r	word[3]	Hz	L1, L2, L3
	19	8180				
Real power, sum ²⁾		8181	r	word	W	
Apparent power, sum		8182	r	word	VA	
Reactive power, sum ³⁾		8183	r	word	var	
cos(phi), sum ³⁾		8184	r	word		
Current, N		8185	r	word	A	Current in neutral conductor
Partial harmonics _U		8187	r	word[20][3]	V	Partial harm. -20; L1, L2, L3
	20	8192				
	..	8240				
	24	8247				
Partial harmonics _I	25	8252	r	word[20][3]	A	Partial harm. 1-20; L1, L2, L3
	..	8300				
	29	8307				
Total harmonic distortion _U		8310	r	word[3]	%	L1, L2, L3
Total harmonic distortion _I			r	word[3]	%	L1, L2, L3

1) r/w = read/write

2) Sign - = Supply, + = Consumption

3) Sign - = cap, + = ind

Table 6c

Maximum values in integer format

Maximum values	Index	Address _(dez)	r/w ¹⁾	Format	Unit	Comment
Current		8314	r	word[3]	A	L1, L2, L3
Voltage		8317	r	word[3]	V	N-L1, N-L2, N-L3
Voltage		8320	r	word[3]	V	L1-L2, L2-L3, L1-L3
Real power ²⁾		8323	r	word[3]	W	L1, L2, L3
Apparent power		8326	r	word[3]	VA	L1, L2, L3
Reactive power ³⁾		8329	r	word[3]	var	L1, L2, L3
cos(phi) ³⁾		8332	r	word[3]		L1, L2, L3
Frequency		8335	r	word[3]	Hz	L1, L2, L3
Real power, sum ²⁾		8338	r	word	W	
Apparent power, sum		8339	r	word	VA	
Reactive power, sum ³⁾		8340	r	word	var	
cos(phi), sum ³⁾		8341	r	word		
Current, N		8342	r	word	A	Current in neutral conductor
Partial harmonics _U		8344	r	word[20][3]	V	Partial harm. 1-20; L1, L2, L3
Partial harmonics _I		8404	r	word[20][3]	A	Partial harm. 1-20; L1, L2, L3
Total harmonic distortion _U		8464	r	word[3]	%	L1, L2, L3
Total harmonic distortion _I		8467	r	word[3]	%	L1, L2, L3
Real power EMAX, sum ²⁾		8470	r	word	W	
Current mean value		8663	r	word[3]	A	L1, L2, L3

Table 6d

Minimum values in integer format

Minimum values	Index	Address _(dez)	r/w ¹⁾	Format	Unit	Comment
Current		8471	r	word[3]	A	L1, L2, L3
Voltage		8474	r	word[3]	V	N-L1, N-L2, N-L3
Voltage		8477	r	word[3]	V	L1-L2, L2-L3, L1-L3
Real power ²⁾		8480	r	word[3]	W	L1, L2, L3
Apparent power		8483	r	word[3]	VA	L1, L2, L3
Reactive power ³⁾		8486	r	word[3]	var	L1, L2, L3
cos(phi) ³⁾		8489	r	word[3]		L1, L2, L3
Frequency		8492	r	word[3]	Hz	L1, L2, L3
Real power, sum ²⁾		8495	r	word	W	
Apparent power, sum		8496	r	word	VA	
Reactive power, sum ³⁾		8497	r	word	var	
cos(phi), sum ³⁾		8498	r	word		
Current, N		8499	r	word	A	Current in neutral conductor
Partial harmonics _U		8501	r	word[20][3]	V	Partial harm. 1-20; L1, L2, L3
Partial harmonics _I		8561	r	word[20][3]	A	Partial harm. 1-20; L1, L2, L3
Total harmonic distortion _U		8621	r	word[3]	%	L1, L2, L3
Total harmonic distortion _I		8624	r	word[3]	%	L1, L2, L3
Real power EMAX, sum ²⁾		8627	r	word	W	

1) r/w = read/write

2) Sign - = Supply, + = Consumption

3) Sign - = cap, + = ind

Table 7*Energy in integer format*

Energy	Index	Address _(dez)	r/w ¹⁾	Format	Unit	Comment
Real energy, consumption		9000	r	long	Wh	Scale see address 9102
Real energy, supply		9001	r	long	Wh	Scale see address 9102
Real energy without rev. running stop		9002	r	long	Wh	Scale see address 9102
Reactive energy, capacitive		9003	r	long	varh	Scale see address 9102
Reactive energy, inductive		9004	r	long	varh	Scale see address 9102
React. energy without rev. running stop		9005	r	long	varh	Scale see address 9102



Barzinelectronic.ir

¹⁾ r/w = read/write

Table 8

Scale of measured values, which can be retrieved in integer format.

Measured values	Index	Address _{dez}	r/w ¹⁾	Format	Possible scale
Current	200	9100	r	word	-3 .. 6
Voltage	201	9101	r	word	-3 .. 6
Power	202	9102	r	word	-3 .. 6
cos(phi)	203	9103	r	word	-3
Frequency	204	9104	r	word	-2
THD	205	9105	r	word	-3

In UMG503 almost all measured values are available in floating point format (Table 2). For the transmission of measured values, the floating format values are changed into integer formats by UMG 503, such as char, int and word (Table 4).

In order not to lose a digit after decimal point, the transmitted value is scaled. The transmission value is calculated as follows:

$$\text{Measured value} = \text{Transmission value} * \text{Factor}$$

The scales of the measured values are calculated from UMG 503 out of current and voltage transformer ratio. Here the minimum definition of the transmitted value of 0,1% is strived for.

The scales of the UMG 503 can be retrieved under the following addresses:

10 scale factors are at your disposal:

Scale	Factor
-3	/1000
-2	/100
-1	/10
0	* 1
1	* 10
2	* 100
3	* 1 000
4	* 10 000
5	* 100 000
6	* 1000 000

The scale of energy is fixed by the scale of power

Example: Scale

Transmitted value UMG 503 = 2301

Programmed scale = -1

Which voltage is measured by the UMG 503?

From the scale table, you can read the factor =/10 for scale=-1:

$$\text{Measured value} = \text{Transmitted value} * \text{Factor}$$

$$\text{Measured value} = 2301 * 1/10$$

$$\text{Measured value} = 230,1\text{V}$$

The measured voltage is 230,1V.

¹⁾ r/w = read/write

Table 9*In and outputs*

A remote Bit is assigned to each in- or output, that can be controlled externally. If this remote Bit=0, the in- or output is controlled by the UMG 503 only. If the remote Bit=1, the in- or output is controlled externally.

Description	Address	Format	r/w ¹⁾	Comment				
Inputs	0048	word[3]	r/w	Bit 0	Change over summer time (Winter=0, Summer=1)			
			r/w	Bit 1	Remote, change over summer time			
			r/w	Bit 2	Relay output 2			
			r/w	Bit 3	Remote Bit, Relay output 2			
			r/w	Bit 4	Relay output 1			
			r/w	Bit 5	Remote Bit, Relay output 1			
				Bit 6..15	Free			
			r/w	Bit 0	Remote Bit, Tariffs			
			r	Bit 1	Synchronize of the internal clock			
				Bit 2..3	Free			
			r/w	Bit 4	Reset of real power EMAX			
			r/w	Bit 5	Remote Bit, Reset of real power EMAX			
				Bit 6..15	Free			
			r	Bit 0..1	Tariff real energy consumption			
			r	Bit 2..3	Tariff reactive energy Ind.			
			r	Bit 4..5	Tariff reactive energy cap.			
				Bit 6..15	Free			
			Outputs	0032	word[3]	r	Bit 0	Measuring range of voltage in L1 exceeded
						r	Bit 1	Measuring range of voltage in L2 exceeded
						r	Bit 2	Measuring range of voltage in L3 exceeded
r	Bit 3	Measuring range of voltage in L1 underscored						
r	Bit 4	Measuring range of voltage in L2 underscored						
r	Bit 5	Measuring range of voltage in L3 underscored						
	Bit 6..15	Free						
r	Bit 0	Measuring range of current in L1 exceeded						
r	Bit 1	Measuring range of current in L2 exceeded						
r	Bit 2	Measuring range of current in L3 exceeded						
r	Bit 3	Measuring range of current in L1 underscored						
r	Bit 4	Measuring range of current in L2 underscored						
r	Bit 5	Measuring range of current in L3 underscored						
	Bit 6..15	Free						
r	Bit 0..2	Watchdogcounter						
r	Bit 3	Auxiliary input						
	Bit 4..15	Free						

¹⁾ r/w = read/write

Table 10*EMAX-Peak values*


Description	Address _(dez)	r/w ¹⁾	Type	Comment
Real power EMAX Peak value	16000	r	float [Tariff] [Month]	Measured value in Watt
Date				
Year	16500	r	char [Month]	The month of the year, in which...
Day	16600	r	char [Tariff] [Monat]	The day of the month, in which the peak value appeared
Time				
Hour	16700	r	char [Tariff] [Month]	
Minute	16800	r	char [Tariff] [Month]	

Year = 0 .. 99 00 .. 99 = 2000 .. 2099

Tariff = 0 .. 4 0 = T00, 1 = T01, ..

Month = 0 .. 11 0 = January, 1 = February, ..

For each month, a peak value is saved for each tariff. After one year, this peak value will be overwritten.

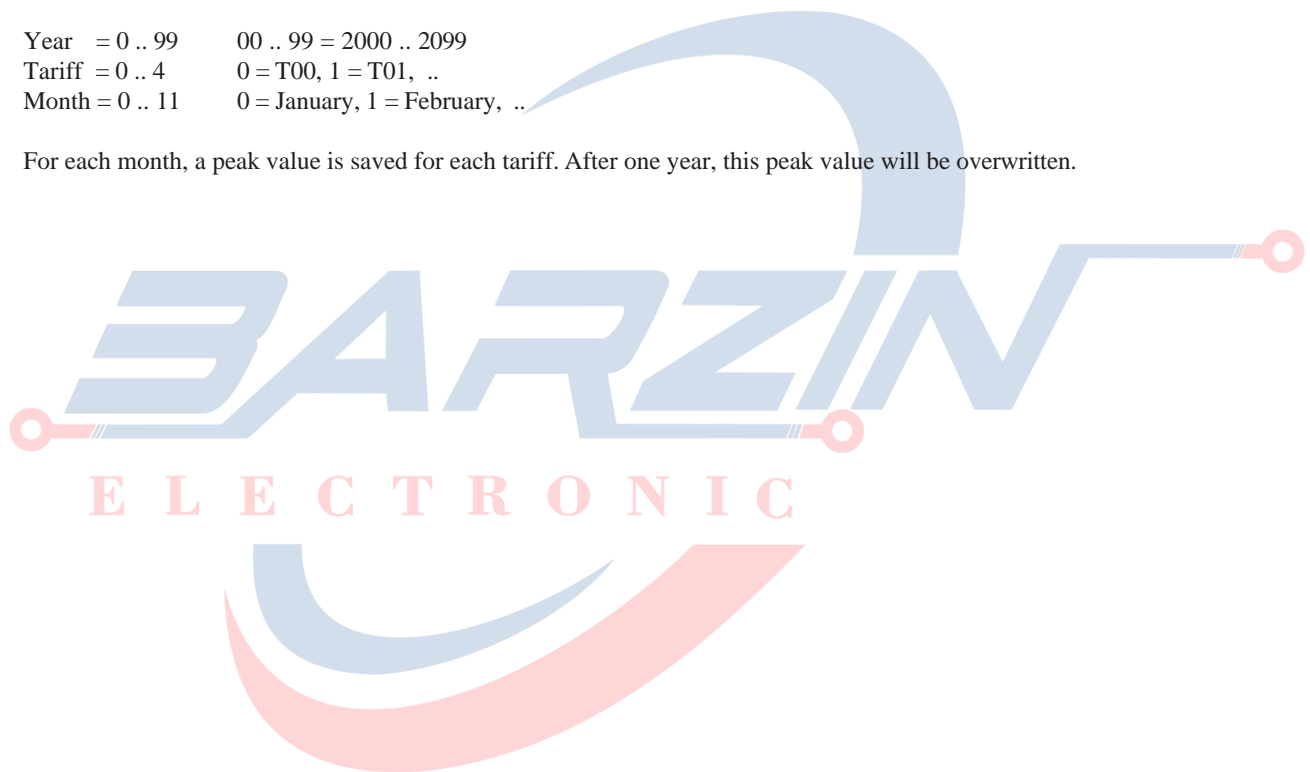

Barzinelectronic.ir

¹⁾ r/w = read/write

systems WIN98, WIN98ME, NT4.0 or WIN2000, and offers the following possibilities:

- Configuration of the measured value indications,
- Read out the ring buffer,
- Create a GSD file,
- Configure the UMG503.

Required hard and software

Software

A PC with Windows® 98/2000/NT4 is required for running the Software PSWbasic. Please note, that the used Windows version should be the latest issue. When this manual was printed, the following issues were actual:

- Windows® 98
- Windows® 98ME
- Windows® NT4.0 mit Service-Pack3
- Windows® 2000


The service packs contain corrections of Windows faults. They can be obtained from Microsoft or downloaded from Microsoft™-Side in the internet.

Hardware

- PC Pentium 100MHz or higher
- 16 MByte RAM (for Windows® NT 32MByte)
- About 5MB free memory on harddisk for the program

PSWbasic

- Color monitor with a solution of 640x480 or 800x600 dots and 265 colours.
- 1MB PCI graphic board.
- The PSWbasic must be installed on harddisk.
- CD-ROM drive.
- Parallel printer interface.
- Modem and/or serial interface (Com1/2..).

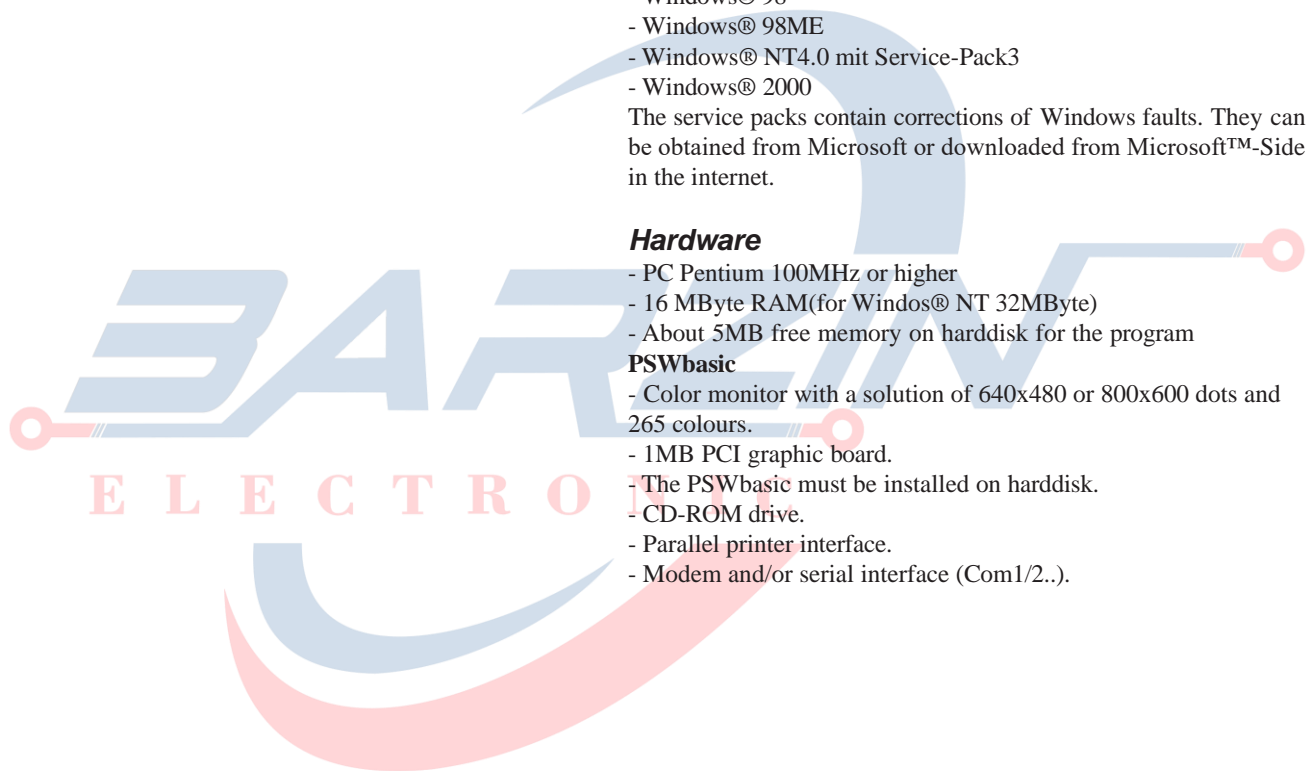

Barzinelectronic.ir

PSWbasic

The programming and reading out software PSWbasic always belongs to the extent of delivery of the UMG 503. The software can be installed on PCs with the operating

Functions

Configure measured value

indications Only a part of all possible measured values is indicated in the producers presettings. This part of the program makes possible:

- Read out the actual configuration of the measured value indications of the UMG 503.
- Load the configuration of the measured value indications from PC.
- Destine the kind and sequence of the measured values.
- Transmit the configuration of the

measured value indications to the UMG 503.

- Save the configuration of the measured value indications on PC.

Memory

The memory of the UMG 503 is divided into three areas:

- the event memory,
- the minimum and maximum memory and
- the ring buffer.

Only the contents of the minimum and maximum memory can be read out directly at the UMG 503. The event memory and the ring buffer must be read out by PC.



Configuration of UMG 503

A simple configuration of the UMG 503 can be carried out directly at the device via the three keys and display. A configuration of the UMG 503 from PC is possible with the option "Configuration of UMG 503". Configurations can be saved and printed out at PC.

Additionally, an expanded configuration of the ring buffer is possible. The selection of six memory areas makes possible a better usage of the ring buffer. Each memory area can be assigned to one mean value. The recording is done either within or out of the destined area, which is limited by two selectable limits.

Only those mean values are saved in the ring buffer, which are within the memory area.

Create GSD file

Devices with PROFIBUS protocol need a GSD file. The GSD file is a file which is specific for the device, in which the transmission parameters, the kind of measurement data are agreed between the PROFIBUS master and the PROFIBUS Slave.

With this module, measured values and inputs and outputs can be selected for transmission to the PLC.


As a result of the configuration, a GSD file is created for the PLC and programming data are generated for the UMG 503. The programming data for the UMG 503 are deposited as a text at the beginning of the GSD file. The programming data must be entered in the UMG 503 under "input buffer", "output buffer" und "User-Parameter-buffer".



Barzinelectronic.ir

WAGO I/O SYSTEM

A simple expansion of the inputs and outputs of the UMG 503 is possible with the WAGO I/O SYSTEM. The UMG 503 is connected to the bus coupling via an interface cable. The **Modbus RTU** protocol is used for transmission of data. Function clamps such as analogue outputs, and digital inputs and outputs can be connected to the bus coupling.

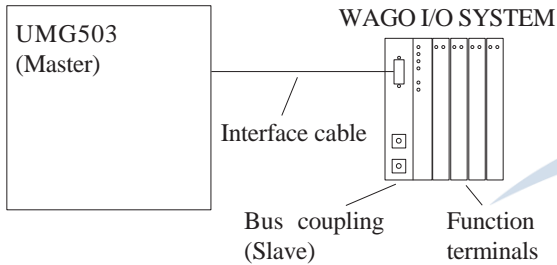

Attention!

Please note the corresponding installation instructions for the **WAGO I/O SYSTEM**.

Installation instructions

The connection of the UMG 503 to the bus coupling can be carried out via RS232 or RS485 interface. The WAGO Bus coupling has always the address 1.

For operation with the WAGO bus coupling, protocol number "06" must be set at the UMG 503 (**Modbus RTU** Master). Please note, that protocol "06" cannot be operated on both interfaces of the UMG 503 at the same time.

All existing analogue function modules must be programmed at the UMG 503. Only the last clamp of the analogue module does not have to be programmed.

The analogue clamps must be plugged to the bus coupling at first, and the digital clamps afterwards.

Function clamps

Function clamps, which can be used with the WAGO Modbus coupling:

Digital inputs

750-400	2-channel digital input 24V; 3,0ms
750-405	2-channel digital input 230V AC
750-415	4-channel digital input 24V AC/DC

Digital outputs

750-501	2 outputs, 24V, 0,5A
750-502	2 outputs, 24V, 2A
750-504	4 outputs,
750-516	4 outputs, 24V
750-519	4 outputs, 5V
750-509	2 outputs, 230V, Solid State
750-512	2 NO, Relay, potential bound.
750-513	2 NO, Relay, potential free
750-514	2 Change over switch, Relay, potential free
750-517	2 Change over switch, Relay, potential free

Analogue outputs

750-550	2-channel analogue output 0-10V
750-552	2-channel analogue output 0-20mA
750-554	2-channel analogue output 4-20mA
750-556	2-channel analogue output +-10V

As the Siemens data format is not supported by the UMG 503, the function clamps

750-580	0-10V and
750-584	4-20mA

cannot be used.

Barzinelectronic.ir


Bus coupling

The UMG503 can communicate with maximal
 6 analogue outputs,
 6 digital outputs and
 3 digital inputs

via WAGO Bus coupling at maximum. The following bus couplings can operate with UMG503 with the same transmission mode and Modbus RTU protocol.

Description	Transmission mode	Possible Baud rates
750-312	RS485	9600, 19200
750-315	RS485	9600, 19200, 38400, 115200
750-314	RS232	9600, 19200
750-316	RS232	9600, 19200, 38400

If the UMG 503 is connected to the bus coupling via **RS232 interface**, a "1 to 1 cable" must be used. Connections via **RS485 interface** are carried out according to the diagram below.

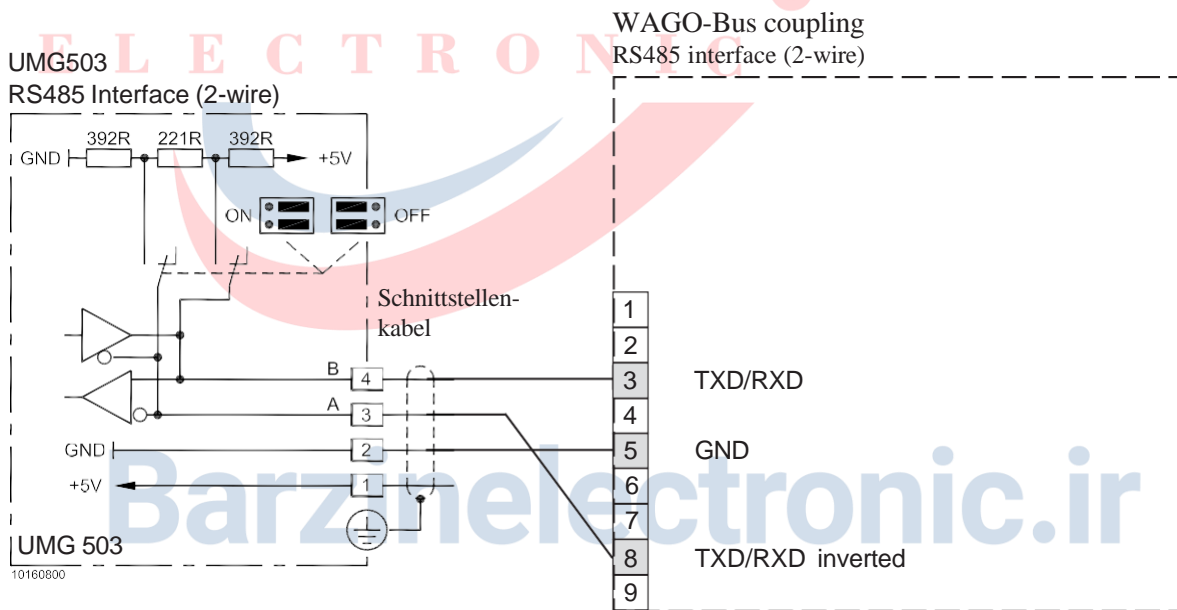

Diagr: Connection between UMG 503 and WAGO-Bus coupling via RS485 (2-wire)

Indicating range and accuracy

Quantity	Indicating range	Measuring range for Scale factor=1	Measuring accuracy
Voltage			
L-N	0,0V .. 999,9 MV	50 .. 500 V	±0,2% rng
L-L	0,0V .. 999,9 MV	80 .. 870 V	±0,2% rng
Current	0,000 .. 9999 A	0,005 .. 5 A	±0,2% rng
Current in N	0,000 .. 9999 A	0,060 .. 15 A	±0,6% rng
Frequency (of voltage)	45,00 .. 65,00 Hz	45,00 .. 65,00 Hz	±0,1% rng
Power			
Real power, consump.	0,00W .. 9999 MW	0,05 W .. 2,5 kW	±0,5% rng
Real power, supply	-0,00W .. -999 MW	0,05 W .. 2,5 kW	±0,5% rng
Apparent power	0,00VA .. 9999 MVA	0,05 VA .. 2,5 kVA	±0,5% rng
Reactive power	0,00VAr.. 9999 MVAr	0,05 kvar .. 2,5 kvar	±0,5% rng
Energy (max. 10 digits)			
Real energy, without rev. running stop	0,0 Wh .. 9999 GWh	0,05 Ws .. 9999 MWh	1)
Real energy, consump. ▲	0,0 Wh .. 9999 GWh	0,05 Ws .. 9999 MWh	1)
Real energy, supply ▼	0,0 Wh .. 9999 GWh	0,05 Ws .. 9999 MWh	1)
Reactive energy	0,0 vars .. 9999 Gvarh	0,05 vars .. 9999 Mvarh	1)
Total harmonic content THD(f)			
Current	0,0 .. 100 %	0,0 .. 100 %	±0,5% rng
Voltage	0,0 .. 100 %	0,0 .. 100 %	±0,5% rng
Partial harmonic content			
Current (1. - 20.)	0,000 .. 9999 A	0,005 A .. 5A (1A)	±0,5% rng
Voltage (1. - 20.)	0,0V .. 99,99 kV	0,000 V .. 9999 V	±0,5% rng
cos(Phi)	0,00ind .. 1,00 .. 0,00cap.	0,00ind .. 1,00 .. 0,00cap.	2)

The specifications presuppose the following conditions:

- Yearly calibration
- Warm up 10 minutes
- Ambient temperature of 18 .. 28°C.

In the range of -10..18°C and 28..55°C an additional error of ±0,2% Mv per K must be considered.

Used abbreviations:

- rng = of measuring range
- rdg = of measured value
- ind = inductive
- kap = capacitive

1) The measuring accuracy corresponds to the measuring accuracy of power.

2) If the measured apparent power in the range of 1% .. 100% of measuring range, cos(phi) is displayed with an accuracy of ±1% of 1.000.

.& Attention!
The inaccuracy of the compressed memory data is max. ±0,4% rng.

Technical Data

Ambient conditions

Overvoltage class	: CATIII
Pollution degree	2
Operating temperature	: -10°C .. +50°C
Storage temperature	: -20°C .. +60°C
humidity class	: 15% to 95% (without dew)
Operating altitude	: 0 .. 2000m over NN

Measurement Mode	: True (RMS)
Measuring rate	: 2 measurements/sec.
Actualization	
Display	: 1 time per second
Analogue output	: < 500ms
Relay outputs	: < 500ms

Auxiliary voltage Uh	: see type plate
Range 1 (Standard)	: 85 .. 265V AC 80 .. 370V DC
Range 2 (Option)	: 40 .. 115V AC 55 .. 165V DC
Range 3 (Option)	: 15 .. 55V AC 20 .. 80V DC
Fuse	: 4A up to 10 A
Power consumption	: max. 9VA

Auxiliary input (Option)	
Current consumption	: ca. 2,5mA .. 10mA
Analogue output (Option)	
Definition	: 12Bit
Load	: max. 500Ohm
External auxiliary voltage	: 20V.. 27VDC/50mA
Reaction time	: 1,5 seconds

Measuring inputs

Rated pulse voltage	: 6kV
Signal frequency	: 45Hz .. 1200Hz

Pulse output (Option)	
S0 interface according to DIN 43864	
Switching frequency	: max. 10Hz
Switching current	: max. 30mA
External auxiliary voltage	: 20V .. 30VDC

Current measurement

Power consumption	: ca. 0,2 VA
Rated current for ..5A(1A)	: 5A(1A)
Min. working current	: 5mA
Limiting current	: 5,3A (sinus shape)
Overload	: 180A for 2 sec.

Relay outputs (Option)	
Switching voltage	: max. 250VAC
Switching power	: max. 1000W
Reaction time	: 500ms

Weight	: 1kg
Location	: any
Operating height	: 0 .. 2000m over NN
Accuracy of the internal clock	: +/- 1 minute/month

Voltage measurement

max. 500VAC against ground	
Power consumption	: ca. 0,1 VA
Maximum prefuse	: M2A
Measuring range L-N	: 50 .. 500V AC 2,3 .. 23VAC (option)
Measuring range L-L	: 90 .. 870V AC 4 .. 40VAC (option)
Frequency of fundamental	: 45Hz .. 65Hz

Interference resistance (industrial areas)	
	: EN55082-2:1995
	: IEC61000-4-3,10V/m
	: IEC61000-4-4, 2kV
	: IEC61000-4-2, 8kV

Spurious radiation (residential areas)	
	: EN55011 10.1997

Safety guidelines	: EN61010-1:2001 : IEC61010-1:2001
-------------------	---------------------------------------

Protection class

Front	: IP50 acc. IEC60529
Front with seal (Option)	: IP65 acc. IEC60529
Back side	: IP20 acc. IEC60529
Plug screw connection	: IP20 acc. IEC60529



Protection class	: I (device with protective wire)
------------------	-----------------------------------

Testing voltages

Voltage measuring inputs against Housing, RS232 and RS485	: 3250V AC
Relay outputs, auxiliary input and current measuring inputs against Housing, RS232 and RS485	: 2200V AC

Design for panel mounting



Back side

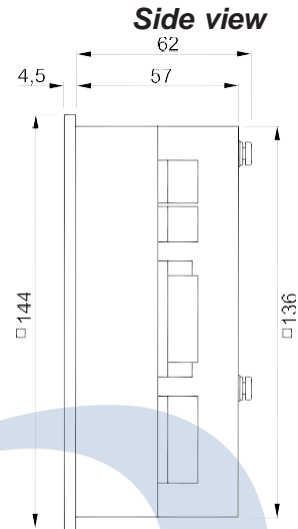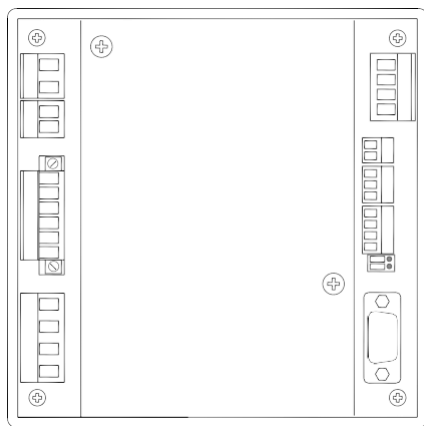

The grey marked connections are available as options.
All dimensions are given in mm.

Design for DIN Rail Mounting (Option)

Back side

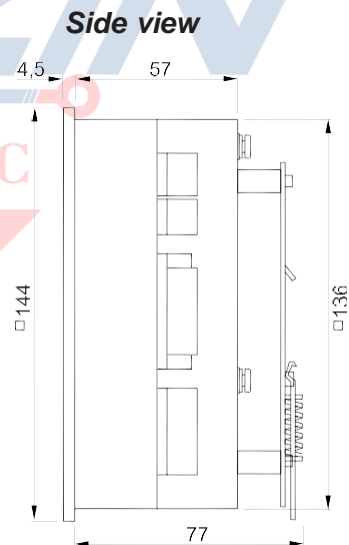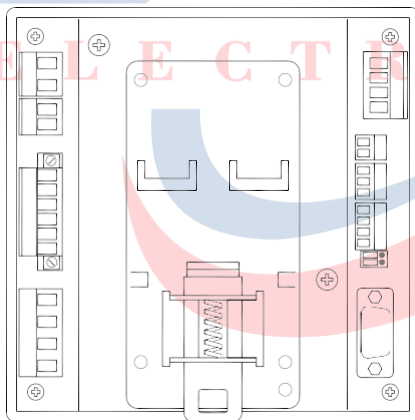

Diagr. Feeding wires for a DIN Rail mounted UMG 503

Key 1


Key 2

Key 3

Maximum or consumption

Minimum or supply

Page 95

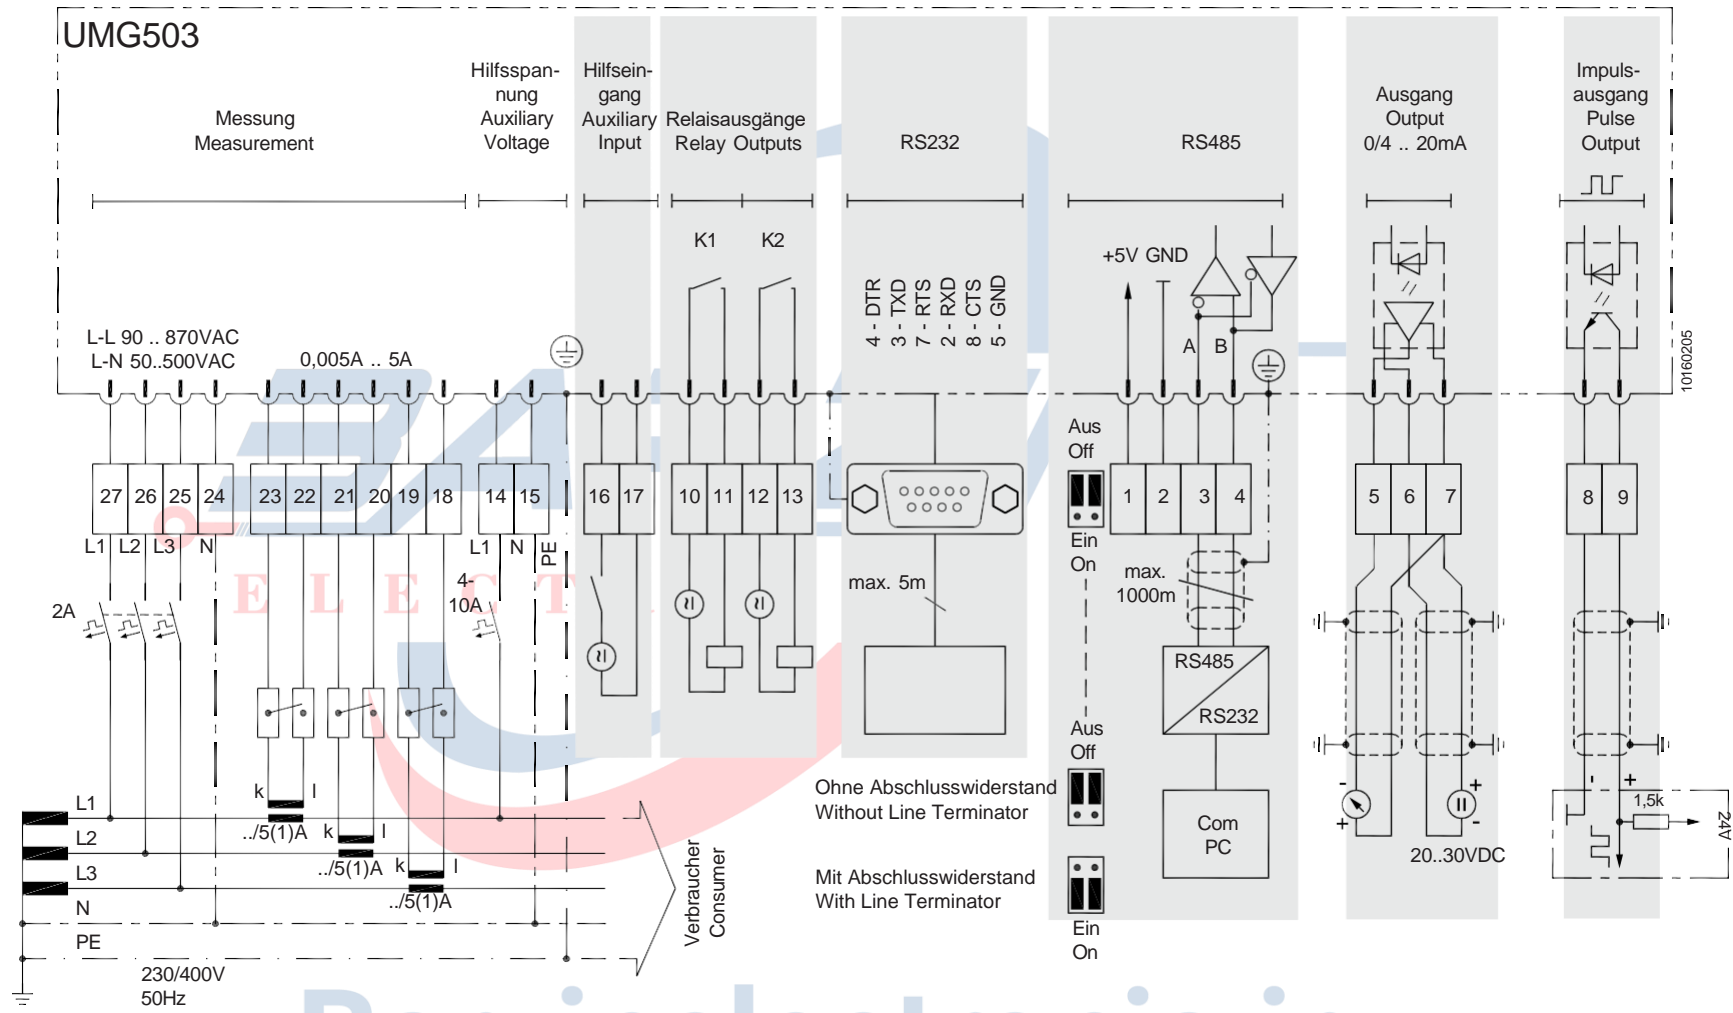

Ohne Abschlusswiderstand
Without Line Terminator

Mit Abschlusswiderstand
With Line Terminator

10160205


Barzinelectronic.ir

Connection example

The grey marked terminals are not available for all types of UMG 503.


Brief instructions

Current transformer

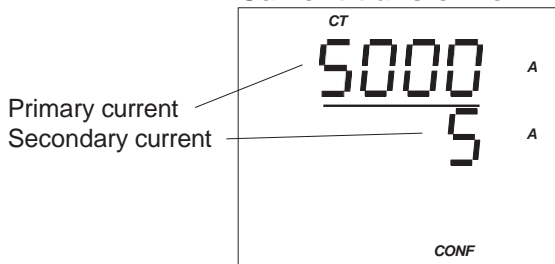

- ⇨ 2 x Select programming menu.
- ▶ 1 x Select current transformer.
- ⇨ Select number.
- ▲ Change number.
- ▶ Move decimal point.
- ⇨ 2 Sek. Save and measured value indication.

Voltage transformer

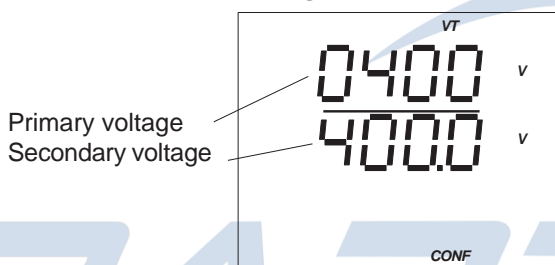

- ⇨ 2 x Select programming menu
- ▶ 1 x Confirm selection.
- ▲ 1 x Select voltage transformer.
- ⇨ Select number.
- ▲ Change number.
- ▶ Move decimal point.
- ⇨ 2 Sek. Save and measured value indication.

ELECTRONIC

Barzinelectronic.ir